



AGA MODULE GAS HOB - FREESTANDING

AGA MODULE GAS HOB - INTEGRATED

User Guide & Installation Instructions

CAUTION: THIS UNIT IS HEAVY, PROPER EQUIPMENT AND ADEQUATE MANPOWER MUST BE USED IN MOVING THE RANGE TO AVOID DAMAGE TO THE UNIT OR THE FLOOR.

REMEMBER, when replacing a part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require.

DO NOT use reconditioned or copy parts that have not been clearly authorised by AGA.

**PLEASE READ THESE INSTRUCTIONS BEFORE USING THIS APPLIANCE
AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.**



For use in AUSTRALIA

03/26 EINS 512040

Contents

1. Health and safety	1	8. Installation Instructions	15
2. Introduction	3	9. Installation introduction	16
3. Overview	4	10. Location	17
The broiler (<i>Top oven</i>)	5	Levelling	17
The ovens	5	Specifications	18
Simmering oven	6	11. AGA Module Gas Hob - Freestanding Installation	20
4. Fitting and Removing the oven shelves	7	Gas Connection	20
5. Cooking guide	8	12. Installation Sequence & Procedure	21
6. Cleaning & caring	10	13. Gas connection Integrated Module	23
7. Servicing	14	Connecting to gas	24
		14. Pressure testing	25
		15. Electrical connection	26
		16. Handrail fitting	27
		17. Circuit diagram	28
		18. Technical data	29
		19. Servicing notes	30

1. Health and safety

Consumer protection

As a responsible manufacturer, we take care to make sure that our products are designed and constructed to meet the required safety standards when properly installed and used.

⚠ CHILDREN SHOULD BE KEPT AWAY FROM THE APPLIANCE AS SOME SURFACES CAN BECOME HOT TO THE TOUCH.

The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. **Children less than 8 years of age shall be kept away unless continuously supervised.** Cleaning and user maintenance shall not be made by children without supervision.

⚠ NEVER store flammable materials in the drawer. This includes paper, plastic and cloth items, such as cookbooks, plastic ware and towels, as well as flammable liquids. Do not store explosives, such as aerosol cans, on or near the appliance.

⚠ DO NOT spray aerosols in the vicinity of the appliance while it is on.

⚠ DO NOT modify this appliance.

⚠ DO NOT use this appliance as a space heater.

⚠ DO NOT use or store flammable materials in or near this appliance.


⚠ DO NOT place articles on or against this appliance.

⚠ NEVER place anything aluminium between the saucepan base and the ceramic surface (i.e. cooking mats, aluminium foil, etc).

⚠ IMPORTANT: Oil is a fire risk, do not leave pans containing oil unattended.

- In the event of a fire cover with a lid and switch OFF the electricity.
- Smother the flames on the hob rather than attempting to remove the pan to the outside.
- Burns and injuries are caused almost invariably by picking up the burning pan to carry outside.

DO NOT hang dish towels on the handrail. Doing so will block the air vent. Blocking the air vent can cause excessive temperature increase to the control panel and prevent easy access.

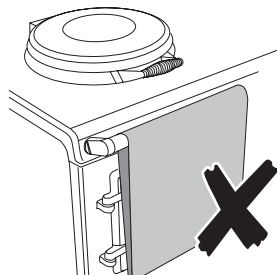

When the oven (s) are on **DO NOT** leave any oven door open for long periods, this will affect the temperature of the oven and may allow controls to become hot.

The appliance may contain some of the materials that are indicated below. It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling where applicable, the pertinent parts that contain any of the listed materials that could be interpreted as being injurious to health and safety, see below for information.

Fire cement - when handling use disposable gloves.

Glues and sealants

Exercise caution - if these are still in liquid form use face mask and disposable gloves.

Glass yarn, mineral wool, insulation pads, ceramic fibre

May be harmful if inhaled. May be irritating to skin, eyes, nose and throat. When handling avoid contact with skin or eyes. Use disposable gloves, face-masks and eye protection. After handling wash hands and other exposed parts. When disposing of the product, reduce dust with water spray, ensure that parts are securely wrapped.

⚠ CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

⚠ WARNING!: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or fire blanket.

⚠ WARNING!: Danger of fire: DO NOT store items on the cooking surfaces.

⚠ WARNING!: Accessible parts may become hot during use. Young children should be kept away.

⚠ During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

⚠ DO NOT install the appliance behind a decorative door in order to avoid overheating.

⚠ It is essential that the base or hearth on which both appliance(s) and module stands should be level and capable of supporting the total weight of both units. Refer to the technical data for the weight of each appliance(s).

⚠ It is the customers responsibility to contact a qualified electrical installer to make sure the electrical installation is adequate and in conformance with SAA ELECTRICAL WIRING RULES AS 3000.

 **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

 **WARNING! This appliance must be installed with an appropriate device that will allow permanent disconnection of the Active (Live) and Neutral conductors. During Installation or disconnection prior to any electrical work, the appliance must be permanently disconnected from the Supply Active (Live) and Neutral Conductors.**

Deep fat frying

- Use a deep pan, large enough to completely cover the appropriate heating area.

 **NEVER fill the pan more than one-third full of fat or oil.**

 **NEVER leave oil or fat unattended during the heating or cooking period.**

 **NEVER use a lid on the pan.**

 **In the event of a fire, cover the pan with a lid and turn OFF the appliance.**

 **Smother the flames on the hob preferably with a fire blanket, rather than attempting to remove the pan to the outside.**

 **Burns and injuries are caused almost invariably by picking up the burning pan to carry it outside.**

If you smell gas

- **DO NOT** turn electric switches on or off
- **DO NOT** smoke
- **DO NOT** use naked flames
- Turn off the gas at the meter or cylinder
- Open doors and windows to get rid of the gas
- Keep people away from the area affected
- Call your gas supplier.

2. Introduction

As responsible manufacturers we take care to make sure that our products are designed and constructed to meet the required safety standards when properly installed and used.

Your appliance has a gas hob, electric grill and two electric ovens. The upper oven is an electric simmering oven with an electric grill also incorporated in the roof of the oven. The lower oven has an electric fan. The fan behind the rear panel ensures an even distribution of heat within the cavity during cooking, ie the temperature at the lowest shelf position is the same as the temperature at the highest shelf position.

Refer to the diagram in the **Overview** chapter to familiarise yourself with the product and refer to the relevant sections for upper oven, lower oven, grill, gas hob etc.

IMPORTANT NOTICE: PLEASE READ THE ACCOMPANYING WARRANTY.

Any alteration that is not approved by AGA could invalidate the approval of the appliance, operation of the warranty and could affect your statutory rights.

In the interests of safety and effective use, please read the following before using your new AGA appliance.

The use of a gas cooking appliance results in the production of heat and moisture in the room in which it is installed. Ensure that the kitchen is well ventilated: keep natural ventilation holes open or install a mechanical ventilation device (mechanical extractor hood).

Prolonged intensive use of the appliance may call for additional ventilation, for example, opening of a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present.

Installation must be to local and national wiring regulations and carried out by a qualified engineer.

A little smoke and some odour may be emitted when first switched on. This is normal and harmless (from oven lagging and starch binder on the element insulation) and will cease after a short period of use.


The appliance is fitted with a cooling fan, which functions during the use of the grill or top oven (occasionally with the lower oven). The fan will continue to run after the grill/oven has been turned off, until the unit has sufficiently cooled.

Consumer Law (Australia Only)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

4. Overview

Fig. 4.1

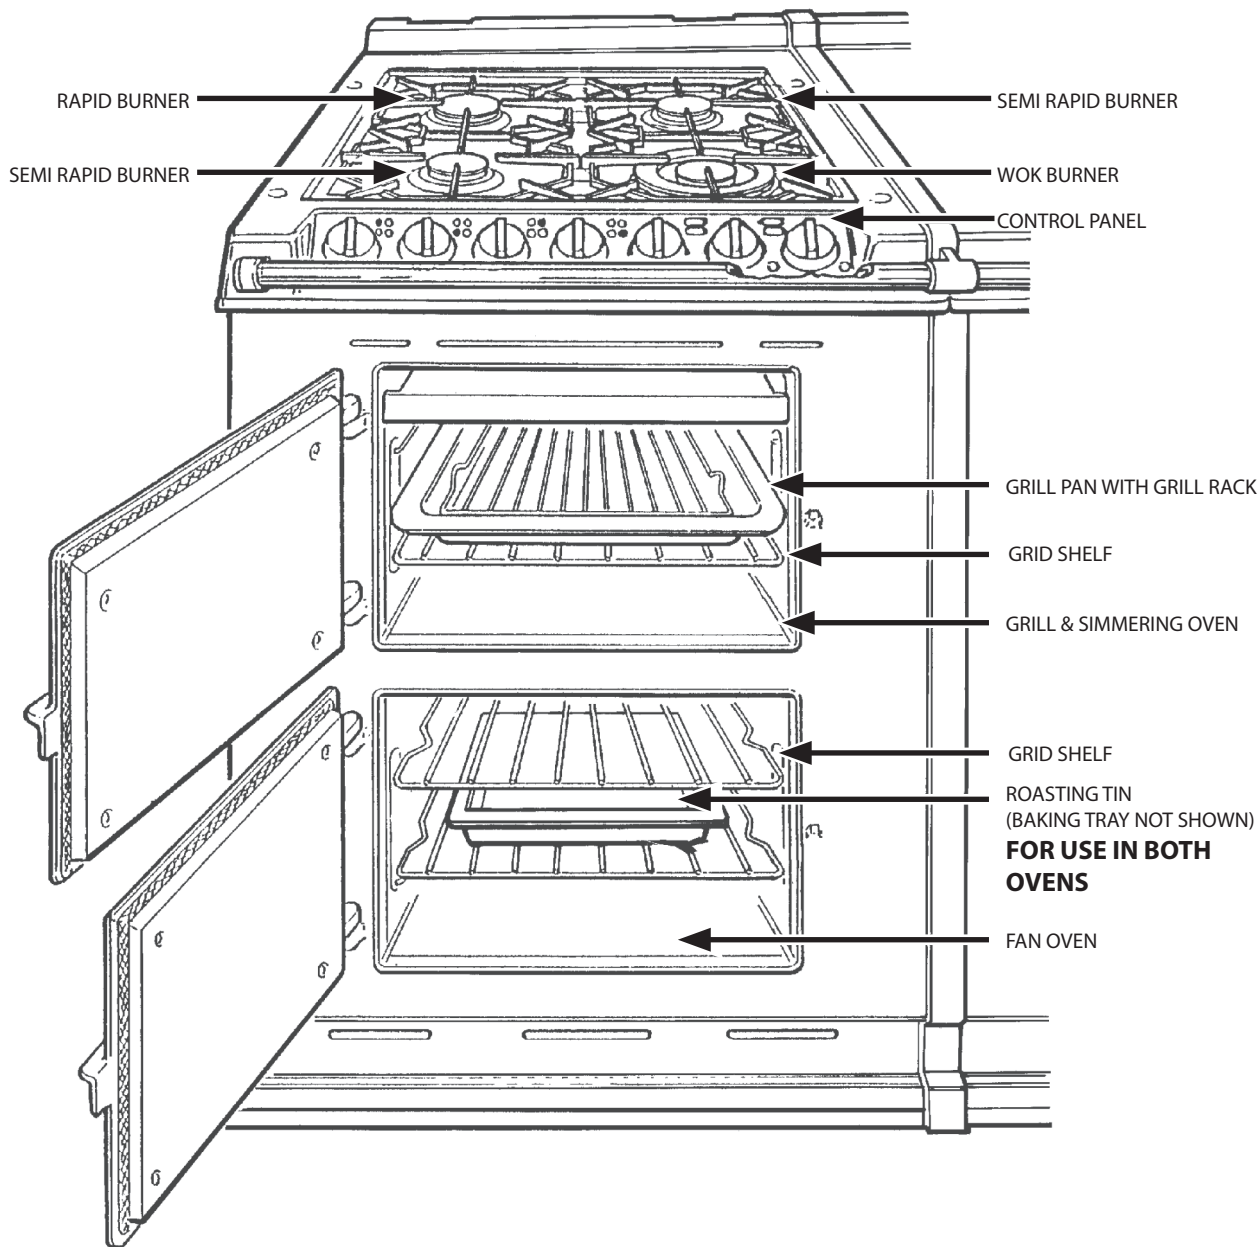

The broiler *(Top oven)*

 **The top oven door must be kept open when the grill is on.**

 **Caution: Accessible parts may become hot when the grill is in use. Young children should be kept away.**

As with most appliances, depending on how long the grill is on, local surfaces, including the handrail may be hot to touch.

The grill has graduated heat settings on each of 2 elements (see Control Panel).

For best results pre-heat at a high setting.

The large grill pan and grid supplied will fit on any of the three shelf positions.

Most foods should be cooked on the grill grid in the grill pan. You can turn the grid over to suit the different thicknesses of food. You can place some dishes straight onto the oven shelf this is useful when browning the top of food such as cauliflower cheese.

The appliance is supplied with one grid/grill shelf for the top oven.

A cooling fan will run while the grill is in use and for a short period after.

The ovens

General

The shelves are designed to be non-tilt.

To remove a shelf lift clear of the side notches and slide forward.

To replace a shelf insert into the oven with the short prongs at the rear, facing upwards. Slide into position above the side notches then allow to drop down on the runner.

DO NOT place the grid shelf or food on the base of the ovens. Food will burn on the base of the top oven and air circulation will be affected in the lower oven.

Pre-heat the ovens at the appropriate settings until the neon light goes out.

When cooking in both ovens at the same time you may need to reduce the temperature and cooking times (especially for baked foods).

For effective heat distribution. leave a gap of no less than 12mm between the dishes and the sides of the oven, to allow hot air to circulate.

The grill pan supplied is not designed to fit in the lower oven.

If you also have an AGA **DO NOT** use the small roasting tin provided with the AGA in the Module. Please use utensils provided and place on the grid shelves.

Condensation

Condensation may form on the appliance. This is quite normal and nothing to worry about. The condensation forms when heat and moisture are present, for example during cooking.

Whenever possible try to make sure that food which contains a lot of moisture for example casseroles are covered. If you do notice any condensation, wipe it up straight away.

Simmering oven

This is used for long, slow cooking over 6-8 hours, keeping food warm and warming plates for short periods.

Extra care must be taken when warming bone china - use the lowest setting.

The slow cooking setting is the area marked between 110°C - 120°C on the oven control knob.

Storage and reheating of food

- If food is to be frozen or not served immediately, cool it in a clean container as quickly as possible and then refrigerate or freeze.
- Thaw frozen food completely in the refrigerator before re-heating.
- Re-heat food thoroughly and quickly either on the hotplate or in a hot oven (160°C fan oven), and then serve immediately.



Only re-heat food once.

Using the simmering oven setting


Points to bear in mind when preparing food.

- For best results use the AGA Stainless Steel cookware.
- **DO NOT** place dishes directly onto the oven base. Always place onto shelf supplied.
- Joints of meat and poultry should firstly be cooked at 160° fan oven for 30 minutes, before transferring to the simmering oven.
- The meat/poultry should be entirely wrapped in 2 layers of foil to ensure a tight seal is achieved, this will retain the natural juices and flavours that are lost when food is cooked at a higher temperature. The foil join **MUST** be positioned at the top of the joint to prevent leakage.
- Always stand covered joints on a rack over a meat tin, to allow good air circulation.
- Meat over 2.7kg (6lbs) and poultry over 2kg (4lbs 8ozs) are unsuitable for the slow cooking method.
- This method is unsuitable for stuffed meat and poultry.
- Make sure that pork and poultry reach an internal temperature of at least 75°C.
- Always bring soups, casseroles and liquids to the boil before putting in the oven.
- When cooking casseroles or braising meat cover the food first with foil and then the lid to create a good seal and prevent loss of moisture.
- Joints of meat should be cooked for a minimum of 6 hours. Casseroles and stews will cook within 2 - 4 hours depending on the quantity of ingredients. Food will hold for a further 1 -2 hours but the appearance might deteriorate.
- Egg and fish dishes need only 1-5 hours cooking and should be included in day cooking sessions, where they can be observed from time to time.
- Push dishes well back in the oven to ensure that they are positioned over the element.
- Always thaw frozen food completely before cooking.
- Root vegetables will cook better if cut into small pieces.
- Adjust seasoning and thickenings at the end of the cooking time.
- Dried red kidney beans must be boiled for a minimum of ten minutes, after soaking, and before inclusion in any dish.

5. Fitting and Removing the oven shelves


Fitting the shelves for cast iron, roasting, baking and simmering ovens

Fig. 5.1

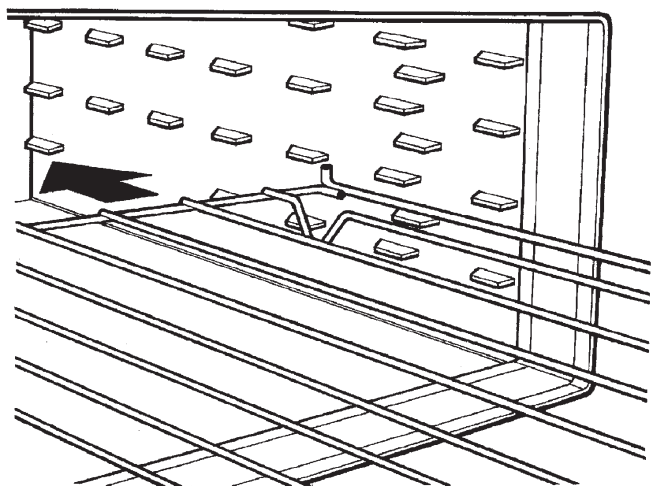

DESN 512403


Fig. 5.2

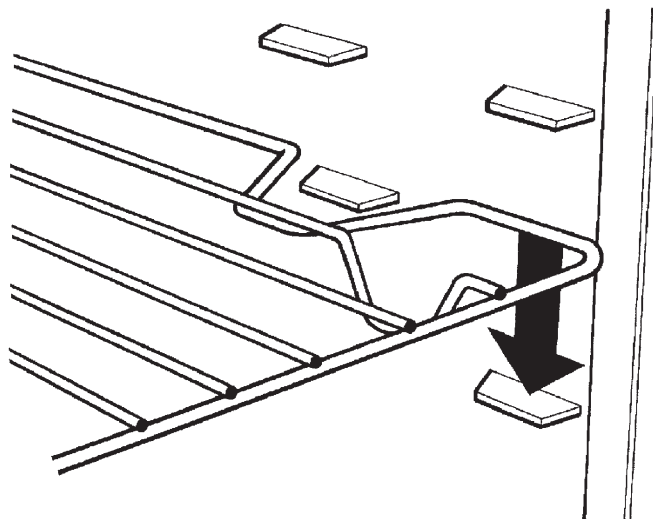

DESN 512404


Removing the shelves for cast iron, roasting, baking and simmering ovens

Fig. 5.3

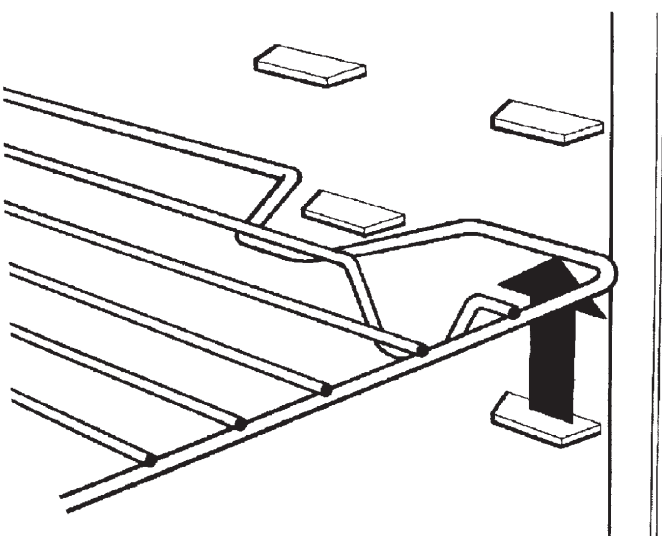

DESN 512405

Fig. 5.4

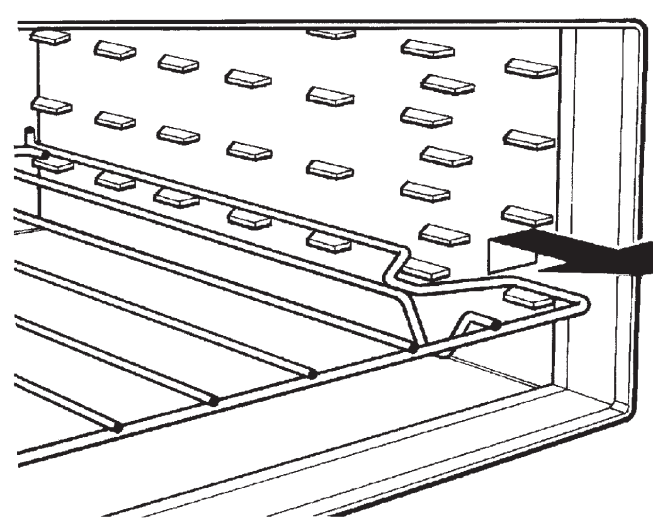

DESN 512406

5. Cooking guide

Cooking hints

- Both ovens must be pre heated until the neon goes out.
- The guidelines are for cooking after the oven(s) have reached the desired temperature.
- Larger items may benefit from being turned.
- Shelf positions are counted from the top.
- Put dishes in the centre of the shelf.
- When using both ovens together reduce cooking times and settings.
- It is important to check that food is piping hot before serving.
- You can change the settings and cooking times to suit your tastes.
- For perfect results turn foods towards end of cooking time e.g. cakes, pastries, biscuits.

Deep fat frying

- **DO NOT** try to fry too much food at a time, especially frozen food.
- This only lowers the temperature of the oil or fat too much, resulting in greasy food.
- Always dry food thoroughly before frying, and lower it slowly into the hot oil or fat, Frozen foods in particular, will cause frothing or spitting, if added too quickly.
- **NEVER** heat fat, or fry with a lid on the pan.
- Keep the outside of the pan, clean and free from streaks of oil or fat.
- The following charts give a guide to cooking a number of everyday items.

Lower oven (Fanned)

- The lower oven has a fan, which means the air is circulated to create an even temperature throughout the oven.
- In most cases this means that food requires a lower temperature when cooked in this oven, by approximately 10 - 20°C. Also some baked goods may require a slightly reduced cooking time by a few minutes.
- The cooking charts are a general guide but times and temperatures may vary according to individual recipes.
- The meat sections should be used as a general guide but may vary according to the size, shape of joint on or off the bone.
- Thaw frozen joints thoroughly before cooking them.
- The times are for open roasting. If covered with foil allow extra time.
- The turkey/chicken is cooked when the juices run clear when pierced with a skewer. If the juices are still pink continue to cook checking every 15 minutes until juices run clear.
- 1kg = 2.2lb

Lower oven (Fanned) - Cooking table

Food	Setting °C	Shelf position	Approximate cooking time	
Roasting Meat				
Beef	170	2 or 3	Rare	35 mins per kg plus 15 mins
	170	2 or 3	Medium	45 mins per kg plus 20 mins
	170	2 or 3	Well Done	55 mins per kg plus 30 mins
Lamb	170 - 180	2 or 3	Well Done	55 mins per kg plus 20 mins
Pork	170 - 180	2 or 3	Well Done	1 hr 5 mins per kg plus 25 mins
Poultry				
Chicken	180 - 190	2 or 3		45 mins per kg plus 15 mins
Turkey	170	3	Up to 4kg Over 4 kg	40 mins per kg plus 10 mins 30 mins per kg plus 20 mins
Yorkshire Pudding				
Large	190 - 200	Any		25 - 40 mins
Individual	190 - 200	Any		15 - 25 mins
Cakes & Biscuits				
Shortbread	140	2 or 3		45 - 50 mins
Very Rich Fruit Cake	120 - 130	3		3 - 4 hrs
Fruit Cake	140 - 150	3		1 - 2 hrs
Small Cakes	180	Any		15 - 25 mins
Scones	200	Any		8 - 12 mins
Victoria Sandwich	170	Any		20 - 35 mins
Swiss Roll	200	2		10 mins
Biscuits	170 - 180	Any		10 - 15 mins
Tray Bakes	170	3		25 - 30 mins
Pastries				
Plate Tart	190	2 or 3		25 - 35 mins
Fruit Pie	190	2 or 3		25 - 45 mins
Mince Pies	190	1 & 3		20 - 25 mins
Vol-au-Vents (frozen flaky)	210	1 & 3		15 - 20 mins
Eclairs / Profiteroles	200	2		20 - 25 mins depending on size
Puddings				
Milk Puddings	140	Any		2 hrs approx.
Baked Sponges	160 - 170	2 or 3		45 - 60 mins
Baked Custards	140	2 or 3		45 - 55 mins
Meringues	90	2 or 3		1.5 - 3 hrs depending on size
Apple Crumble	170	3		30 - 40 mins
Yeast Mixtures				
Bread	200	2 or 3		25 - 35 mins
Rolls and Buns	200	2 or 3		10 - 20 mins

NOTE: Cooking times, temperatures and positions are approximate and may vary according to size of dishes and quantities of food.

6. Cleaning & caring

REMEMBER: Be careful of the hot appliance.

-  Always **SWITCH OFF** at mains before cleaning.
-  **DO NOT** use a steam cleaner to clean this appliance.
-  When cleaning use as little water as possible.
-  **DO NOT** use abrasive pads, oven cleaner or cleaners containing citric acid on enamelled surfaces.
-  **DO NOT** use hob brite on the enamelled surfaces.


Enamelled top and front plate

-  The easiest way to clean the AGA top plate and front plate is to mop up spills as they happen. VEA approved AGA Enamel Cleaner can be purchased from www.agacookshop.co.uk.
-  Baked on food is more difficult to clean but can usually be removed with proprietary vitreous enamel cleaners or mild cream cleaners using a cloth, or if necessary, a nylon scouring pad and can be purchased from www.agacookshop.co.uk.
-  If milk or fruit juice, or anything containing acid is spilt on the enamel, wipe off immediately.
-  Clean off any condensation streaks on the front plate around the oven doors or vitreous enamel maybe permanently discoloured.
-  All that is usually needed to keep the vitreous enamelled surfaces of your appliance bright and clean is a daily rub over with a damp, soapy cloth followed immediately with a clean, dry cloth to avoid streaks.
-  Remember the top plate will scratch if pans or utensils are dragged across them.

Gas hotplate

-  If spillage does occur on a burner cap or pan support, move pan to another burner and when cool, clean in hot soapy water.

Fig. 6.1

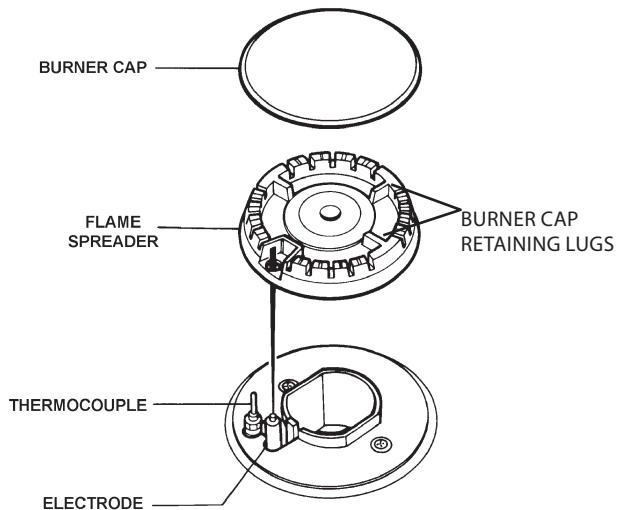

DESN 513513

⚠ After cleaning, be sure all parts are dry. When fitting the burner cap and burner head, make sure that the hole in the burner head is correctly located over the ignition electrode (see Fig. 6.1), and that the burner cap is sitting correctly on the burner head.

⚠ The ignition electrode must not be displaced or damaged otherwise spark ignition will be affected.

⚠ The hotplate top is sealed. To clean, remove pan supports and wipe over visible surface.

⚠ **NOTE:** The following parts **MUST NOT** be cleaned in a dishwasher, as this could cause damage or discolour the finish:- pan supports, burner caps burner ring and burner head.

⚠ Aluminium pans may cause metallic marking on the pan supports. This will not affect the durability of the enamel.

⚠ **NOTE:** The appliance guarantee does **NOT** cover the mis-use of the pan supports.

The ovens

⚠ The fan oven is fitted with a back panel which is of self cleaning enamel and should not be scoured.

⚠ All the remaining surfaces of both ovens are vitreous enamelled and can be cleaned with proprietary vitreous enamel cleaners approved by the Vitreous Enamel Association.

⚠ The shelves can be removed and if necessary the shelf supports may also be removed by taking out the screws.

⚠ These items may be washed in the sink with normal oven cleaners, you may use a fine wool soap pad for removing stubborn stains from the oven bases and shelf supports.

⚠ **NOTE:** Take care **NOT** to damage the thermostat phials in the ovens when cleaning.

Heat clean enamel

-  **Fan oven - back panel only**
-  **This special enamel has a continuous cleaning action, which works best if a pattern of low and high temperature cooking is followed. By using low temperature roasting, excessive fat splashes can be avoided. Should any excessive staining occur, immediately clean the area with hot water containing detergent, and a nylon washing-up brush. Resistant stains require the oven to be run at 210°C for 2 hours.**
-  **Do not use any cleaning materials which may clog the pores of the special coating e.g. pastes and powders, soap filled pads, spray cleaners, brush-on oven cleaners, caustic solutions, metal scrapers/ knives, and prevent the cleaning action.**

Door liners

-  **May be cleaned with a cream cleaner or soap impregnated pad.**
-  **Lift off the oven doors to allow them to cool a little before cleaning. DO NOT, however, immerse the doors in water as they are packed with insulating material which will be damaged by excessive moisture.**

Controls

-  **The enamelled surface under the knobs can be treated as in the Section 'Door Liners'. Avoid the use of excessive water.**
-  **DO NOT use oven cleaners, scouring pads and abrasive powder for cleaning the plastic knobs. A wipe with a damp cloth should be sufficient.**
-  **TIP: Clean your appliance regularly. Preferably every time you use it.**
-  **IMPORTANT: AGA recommend Vitreous Enamel Association approved cleaners for cleaning the vitreous enamelled surfaces of this product.**

Accessories

-  **Oven furniture such as Roasting Tins, Solid Plain Shelves, Grid Shelves, and Grill Racks should be cleaned in hot soapy water, soak if necessary, a nylon scouring pad can be used.**

Vitreous Enamel		
Part		Recommended Cleaning Method
- Fan ovens and simmering oven all sides - Grill - base only - Control panel - Roasting tin - Grill pan	- Door liners - Front of cooker - Doors - Timer surround - Hotplate side trims	Clean with a damp cloth and hot soapy water. Stubborn stains can be removed with mild cream, paste or liquid cleaners, or by gently rubbing with a well moistened pads The roasting tin and baking tray may OCCASIONALLY be cleaned in a dishwasher.  DO NOT IMMERSE DOORS IN WATER AS THEY ARE PACKED WITH INSULATING MATERIAL. Check that the cleaning agent is approved by the (VEA) Vitreous Enamel Association.
High Temperature Protective Coating & Anodised aluminium		
- Hand rail bracket - Plinth - Hotplate rear trim		Clean with a damp cloth and hot soapy water.  IMPORTANT DO NOT USE ABRASIVES
Glass		
- Grill element cover - Splashback		As for enamel cleaning above. Polish with a clean dry cloth or kitchen roll.
Stainless steel		
- Door catches - Handrail		Use warm soapy water or a proprietary stainless steel or chrome cleaner
Chromium Plated		
- Oven and grill shelves - Shelf supports - Grill pan handle - Grill pan grid		Wipe with a damp cloth and soapy water. A well moistened liberally soaped very fine steel wool pad or stainless steel cleaner may be used.
Plastic		
- Grill pan handle - Control knobs - Timer fascia & controls - Neons		Wipe with a damp cloth and hot soapy water. Stubborn stains may be removed with a carefully applied cream cleaner.
Heat-Clean Enamel		
Grill compartment: sides and back		Should any excessive staining occur, immediately clean the area with hot water containing detergent, and a nylon washing-up brush.  DO NOT USE ANY CLEANING MATERIAL WHICH MAY CLOG THE PORES OF THE SPECIAL COATING e.g. PASTES AND POWDERS, SOAP-FILLED PADS, WIRE WOOL, SPRAY CLEANERS, BRUSH-ON OVEN CLEANERS, CAUSTIC SOLUTIONS, METAL SCRAPERS/KNIVES.
Aluminium		
- Right and left rear outer burner caps - Right front outer burner cap - Centre front outer burner cap		As for enamel cleaning. Do not place in a dishwasher NOTE: Care must be taken to prevent cleaning materials, water or dirt, from entering and blocking the burner head, ports and especially the gasway. Remove any blockage with a fine needle or nylon brush.
Non-Stick Coating		
Griddle plate		Soak and wash in hot soapy water. DO NOT USE ABRASIVES OR PLACE IN A DISHWASHER.

7. Servicing

- To keep your Aga appliance running efficiently we recommend that it is regularly serviced by an Approved Aga engineer. Approved Aga engineers have been factory trained and always use genuine Aga spares
- In the event of requiring maintenance, please call AGA Service or your authorised distributor.
- Your appliance **MUST** only be serviced by a qualified engineer from AGA or an authorised distributor.
- **DO NOT** alter or modify the appliance.



A hot appliance cannot be serviced.

Service intervals to maintain the appliance warranty are as follows:

- An interim service is due at 2 ½ years (30 months) to check and change consumable items, and to undertake a safety check.
- A full service is due at the end of year 5 (60 months). The appliance does not cover Commercial use (see separate warranty book provided for further details).

Spare Parts

To maintain optimum and safe performance, we recommend that only genuine AGA spare parts are used. These are available from most major spares stockists, including ourselves.

8. Installation Instructions

WARNING!

Please read the Warning, Cautionary notes at the start of this section.
If the information contained within these instructions is not followed,
property damage or personal injury may occur.

DO NOT store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

DO NOT try to light any appliance.

DO NOT touch any electrical switch.

DO NOT use any phone in your building.

**Immediately call your gas supplier from a neighbor's phone.
Follow the gas supplier's instructions.**

If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

WARNING! This appliance must be installed with an appropriate device that will allow permanent disconnection of the Active (Live) and Neutral conductors. During Installation or disconnection prior to any electrical work, the appliance must be permanently disconnected from the Supply Active (Live) and Neutral Conductors.

CAUTION: THIS UNIT IS HEAVY, PROPER EQUIPMENT AND ADEQUATE MANPOWER MUST BE USED IN MOVING THE RANGE TO AVOID DAMAGE TO THE UNIT OR THE FLOOR.

REMEMBER, when replacing a part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require.

DO NOT use reconditioned or copy parts that have not been clearly authorised by AGA.

**PLEASE READ THESE INSTRUCTIONS BEFORE USING THIS APPLIANCE
AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.**

9. Installation introduction

Consumer protection

As a responsible manufacturer, we take care to make sure that our products are designed and constructed to meet the required safety standards when properly installed and used.

CAUTION: THIS INSTALLATION MUST MEET THE REQUIREMENTS OF AS/NZS 5601, AND MUST CONFORM WITH LOCAL GAS AUTHORITIES AND SAA ELECTRICAL WIRING RULES AS 3000 AND ONLY USED IN A WELL VENTILATED SPACE, READ THESE INSTRUCTIONS BEFORE INSTALLING OR USING THIS APPLIANCE.

PRIOR TO INSTALLATION, ENSURE THAT THE LOCAL DISTRIBUTION CONDITIONS (NATURE OF GAS AND GAS PRESSURE) AND THE ADJUSTMENTS OF THE APPLIANCE ARE COMPATIBLE.

THE GAS ADJUSTMENT CONDITIONS FOR THIS APPLIANCE ARE STATED ON THE DATA PLATE WHICH IS SITUATED IN THE CENTRE VENT SLOT NEAR THE BASE OF THE FRONT PLATE.

Refer to the **“Checks for the installer” on page 16** to test the operation of appliance.

This appliance is not connected to a combustion products evacuation device. It shall be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation.

It should be in accordance also with any relevant requirements of the Gas Region and Local Authority.

On completion test the gas installation for soundness and purge. Leak testing of the appliance shall be conducted according to the manufacturer's instructions.

NOTE: Use soapy water solution on new gas connections to ensure there are no gas leaks.

WARNING - ELECTRIC SHOCK HAZARD

 **It is the customers responsibility to contact a qualified electrical installer to make sure the electrical installation is adequate and in conformance with SAA ELECTRICAL WIRING RULES AS 3000.**

Take special care when cutting holes in walls or floor. Electrical wires may be behind the wall or floor covering and could cause an electrical shock if you touch them.

Locate any electrical circuits that could be affected by the installation of this product and disconnect power circuit.

Electrical earth is required on this appliance.

DO NOT use an extension lead with this appliance.

Checks for the installer

Check with a qualified electrician if you are not sure the appliance is properly earthed.

Failure to follow these instructions could result in death or serious injury.

Check the operation of the appliance to ensure the hotplate burners ignition operates correctly on individual burners and in combination with other burners. Check flame picture and flame stability.

Check oven elements heat up and that ovens reach temperature.

WARNING: THIS APPLIANCE MUST BE EARTHED.

- The appliance is designed for the voltage stated on the data plate.
- The appliance is supplied with and installed adjacent to the left-hand side of TC/DC AGA appliance(s).
- Installation of the Total Control or Dual Control Module must, therefore, be in conjunction with the build instructions of the 'parent' AGA.
- Reference must be made to the above Installation instructions for the 'parent' AGA especially regarding pre-site inspection, not only for both appliance(s) but to consider any pipework that may pass at the rear of the Module. i.e. flue duct from a Fan Flue AGA.
- The appliance has been designed to accommodate pipework passing at the rear.
- **THE MAIN AGA APPLIANCE IS DELIVERED EX-WORKS, FULLY ASSEMBLED.**
- **FINAL INSTALLATION IS UNDERTAKEN ON SITE, BY AN AUTHORISED AGA ENGINEER.**
- The AGA TC/DC Module is supplied from the manufacturers in a fully assembled condition.

10. Location

It is recommended that any soft material flooring is removed from where the AGA Module will be installed.

Any adjacent walls that project above the height of the hob must be of heat resistant material.

The side wall above the hob shall be greater than 60 mm from the appliance.

Surfaces over the top of the appliance **MUST NOT** be closer than 650 mm.

The vent slots in the back of the top plate (or shroud) must not be obstructed.

If possible, any hot water pipes should be directed away from the appliance. In the event it is not possible the extension channel section at the rear of each side plate may be removed. If required to clear hot water or flue pipes with the following provisos:-

If hot water pipes pass at the rear, they should be lagged and a 50 mm air gap provided to the left-hand side of the appliance.

NOTE: It is advisable that the supply cable is routed away from any hot surfaces i.e. hot water/flue pipes.

In the interest of safety, due consideration must be given to the protection of the electric cable to the appliance.

If a supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The AGA Module requires a 30 amp power supply and must be connected to the mains with a cable which complies with SAA Wiring Rules as 3000.

The appliance is designed for the voltage stated on the rating plate, which is situated in the centre vent slot near the base of the front plate.

Recommended, but not mandatory, to fit an individual Residual Current Device (RCD) for the appliance's supply circuit to avoid nuisance tripping.

A minimum clearance of 1000 mm must be available at the front of the appliance to enable it to be serviced.



DO NOT install the appliance behind a decorative door in order to avoid overheating.


Levelling

The AGA Module is designed to stand on a flat surface, however any unevenness may be overcome by packing under the corners of the plinth with a suitable non-combustible material, 3mm.

Specifications

AGA Total Control (TC3) / Dual Control (DC3) with TC/DC Gas Hob Module (TC3M/DC3M)


Fig. 10.1

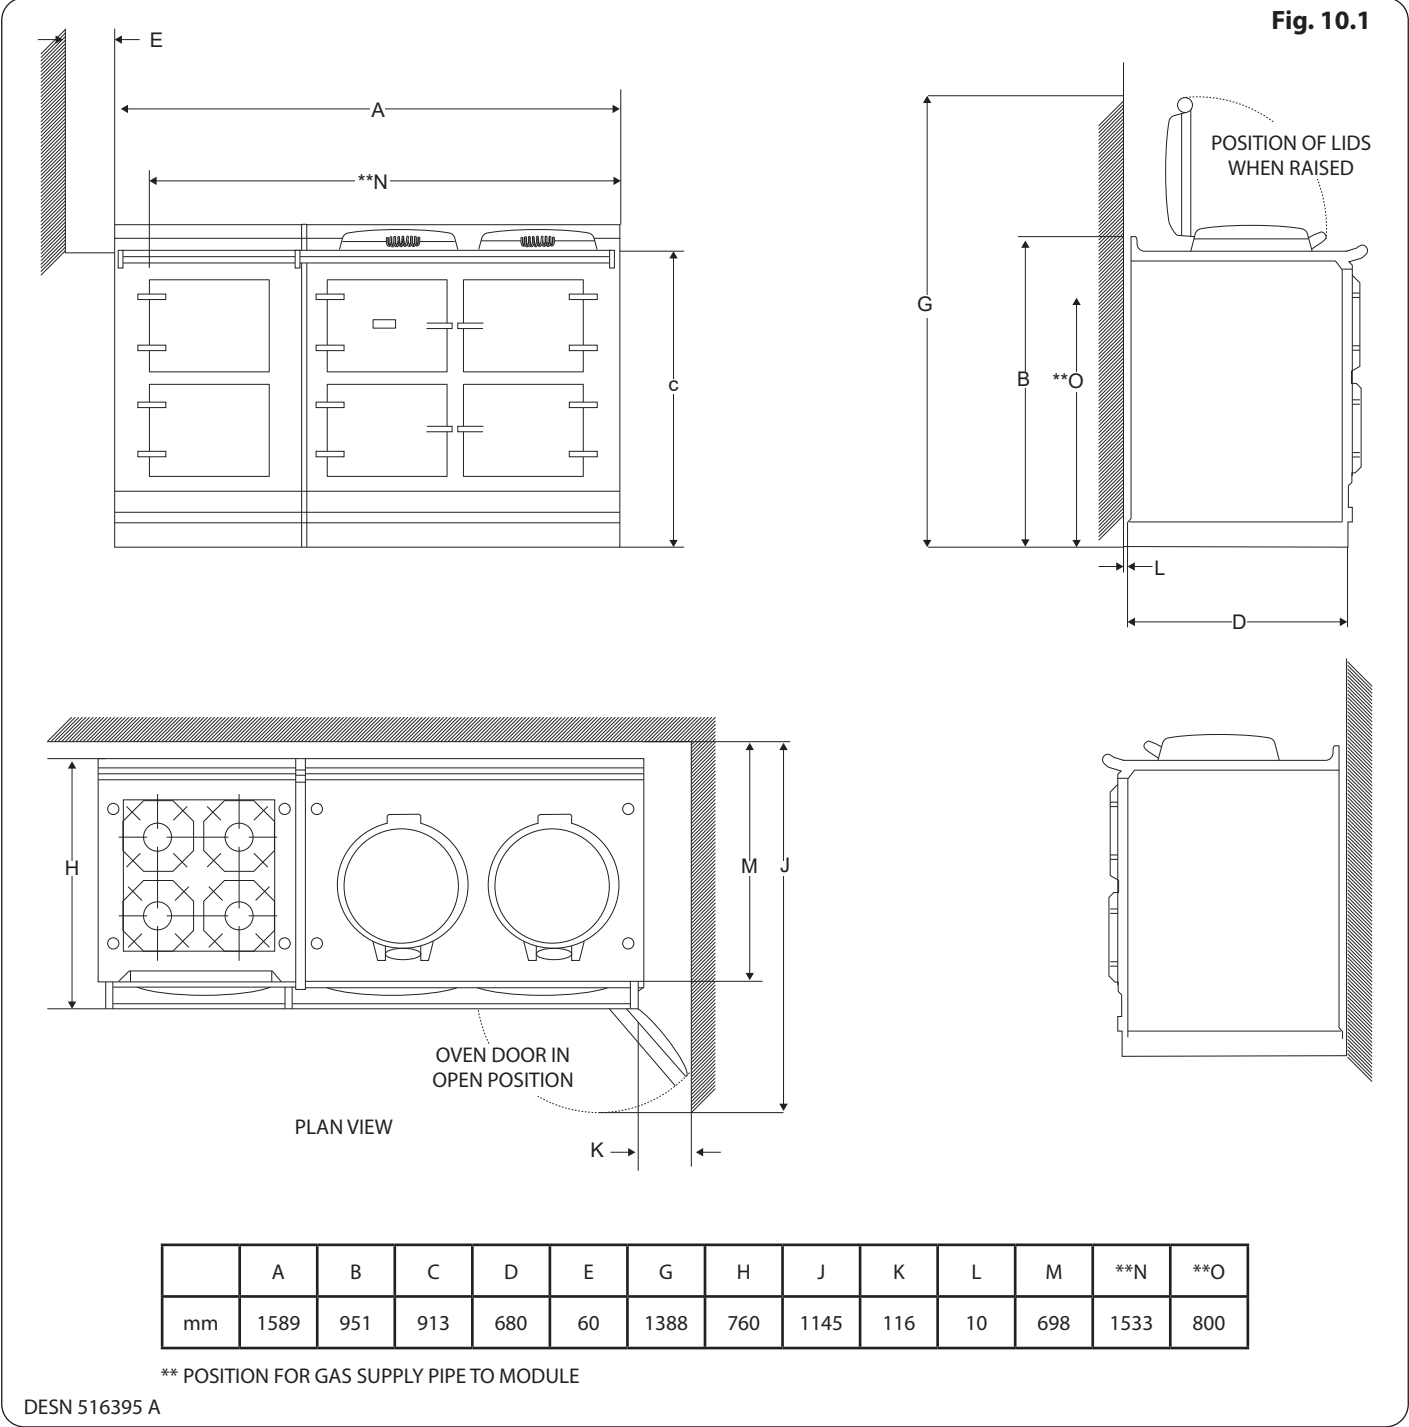

NOTE: When surveying for the installation the actual clearance required for the 'body' of the appliance should be increased overall by 10 mm beyond the figures quote above. This allows safe margin to take into account the natural dimensional variations found in major castings in particular the width across an appliance recess could be critical.

AGA Total Control (TC5) / Dual Control (DC5) with TC/DC Gas Hob Module (TC5M/DC5M)

Fig. 10.2

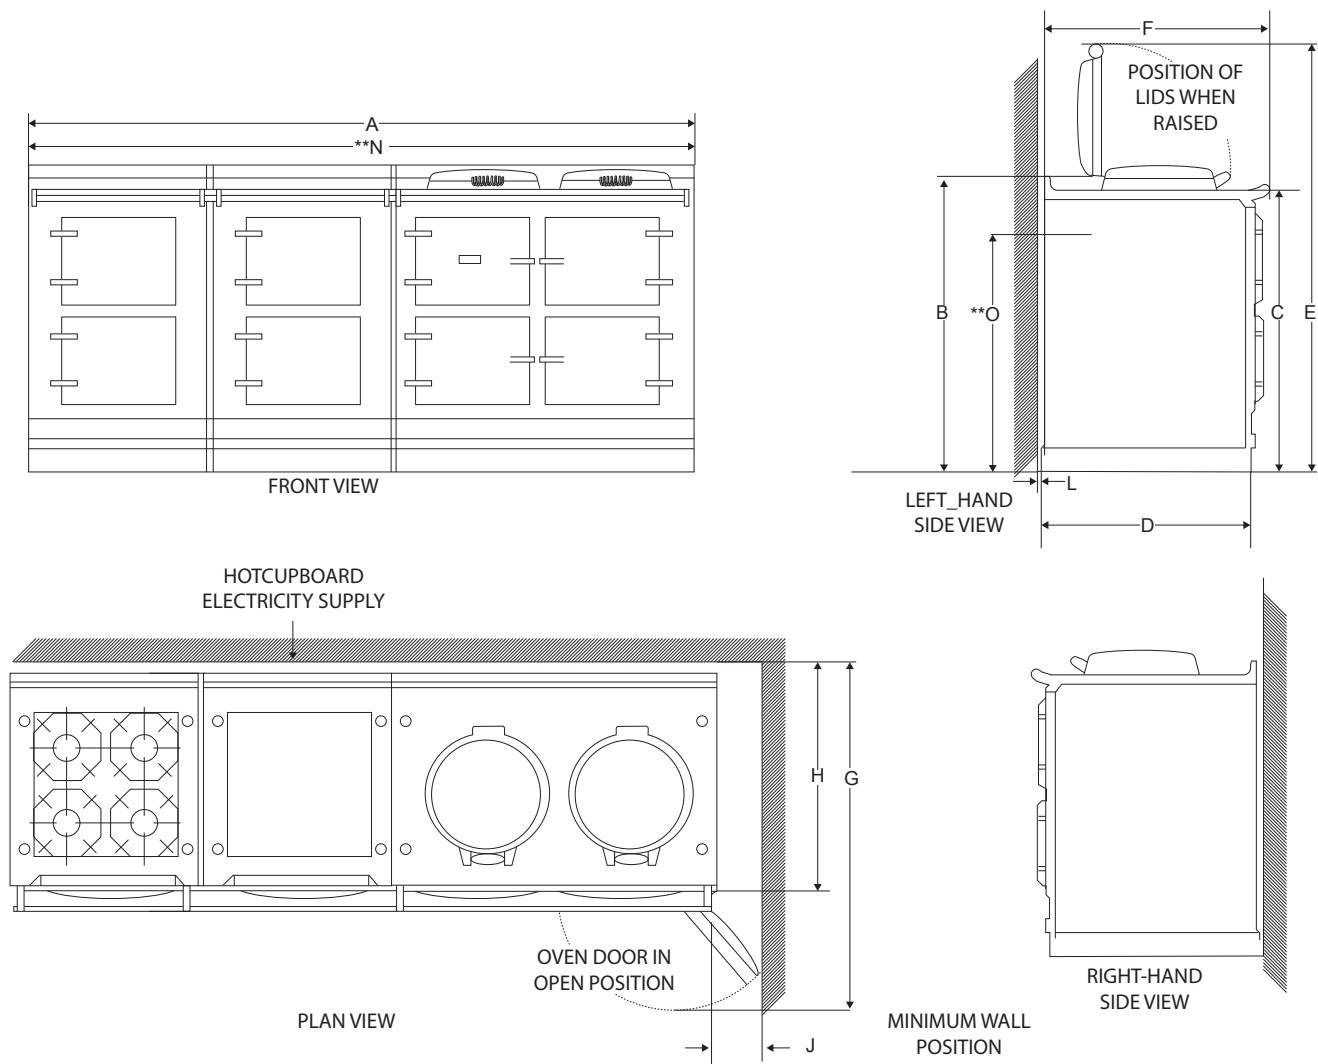

	A	B	C	D	E	F	G	H	J	K	L	**N	**O
mm	2089	951	913	680	1388	760	1145	698	116	10	634	2033	800

** POSITION FOR GAS SUPPLY PIPE TO AGA MODULE

DESN 516862 A

NOTE: When surveying for the installation the actual clearance required for the 'body' of the appliance should be increased overall by 10mm beyond the figures quote above. This allows safe margin to take into account the natural dimensional variations found in major castings in particular the width across an appliance recess could be critical.

11. AGA Module Gas Hob - Freestanding Installation

The appliance must have an anti-tip device correctly installed as per these instructions (**Fig. 11.1**) and (**Fig. 11.2**). If you pull the appliance out from the wall for any reason, make sure that the device is properly engaged when you push the appliance back against the wall. If it is not, there is a possible risk of the appliance tipping over and causing injury if you or a child stand, sit or lean on an open door.

To reduce the risk of tipping, the range must be secured by a properly installed anti-tip bracket supplied with the appliance. The bracket must be fitted within the shaded area shown in the diagram (**Fig. 11.1**) using 2 x screws (No. 10 x 1 ¼") fitted in the wall or floor, longer screws may be required depending on the wall or floor covering, also when a flexible hose is used, a chain restraint must be used as illustrated (**Fig. 11.2**).

For an appliance other than an upright appliance, which may be connected with a hose assembly, the supply connection point must be accessible with the appliance installed (**Fig. 11.3**) and (**Fig. 11.4**).





IMPORTANT: The gas supply connection at the wall **MUST NOT** project out from the wall by more than 45mm, so that it does not foul with the back of the appliance (**Fig. 11.3**).

Gas Connection

⚠ CAUTION: ENSURE THAT THE APPLIANCE IS ISOLATED FROM ELECTRIC SUPPLY

The appliance can be installed with an approved flexible connection. Supply piping should not be less than ¾ I/D. Connection is made to the ½" BSP female threaded elbow located just below the hotplate level on the near left hand side of the appliance.

To confirm the pressure setting, follow the **"Pressure testing"** page 25 procedure.

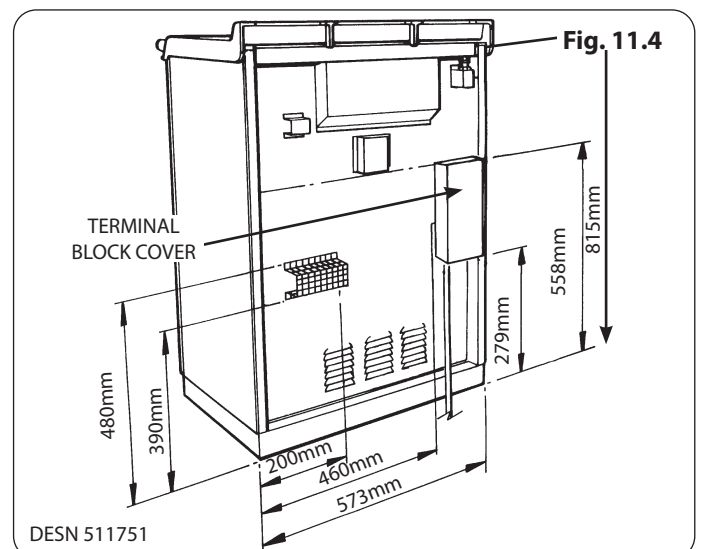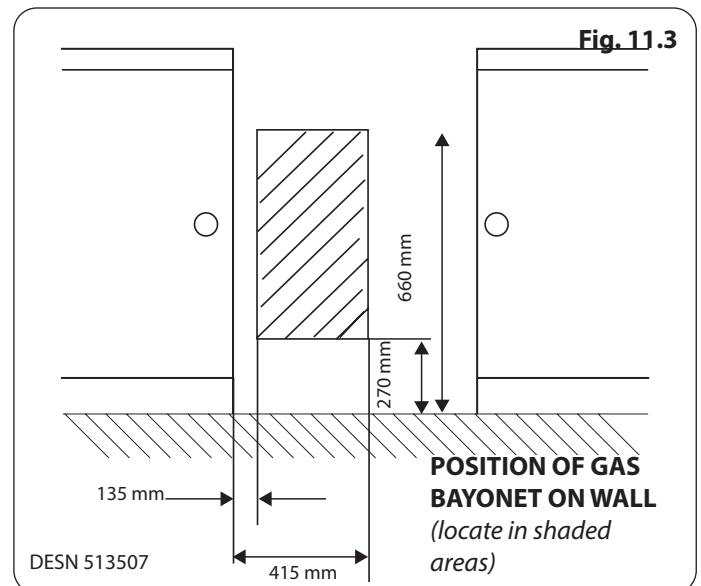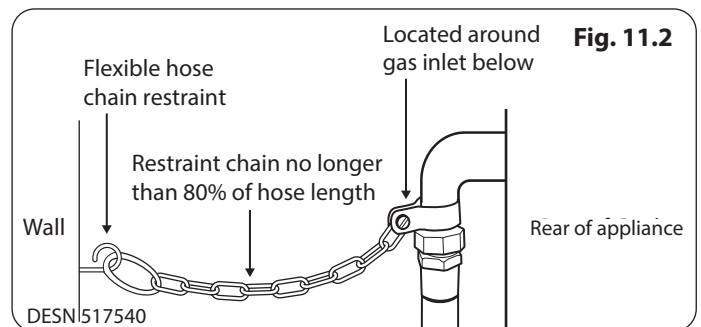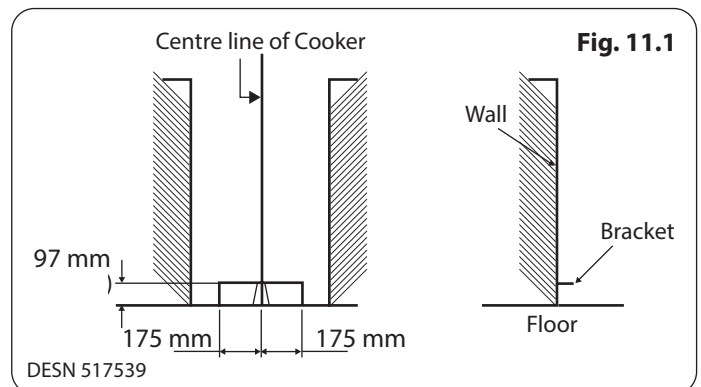


12. Installation Sequence & Procedure

Having ensured all space requirements and regulations have been satisfied for the combined arrangement (AGA Total / Dual Control & Module), the build and installation is to proceed as follows:-

It is essential that the base or hearth on which both appliance(s) and module stands should be level and capable of supporting the total weight of both units. Refer to the technical data for the weight of each appliance(s).

1. Unpack and remove the Module from the pallet.
2. Check that the rear extension piece is secured to the left hand side panel.
3. Release 2 screws from front tongue bracket and allow the bracket to drop downwards. Now slide the Module off its plinth and set to one side **Fig. 12.1**.
4. The Module plinth can now be levelled and fitted up to the main appliance. Position the Module plinth alongside the AGA TC3/DC3 leaving no gap between the two plinths. (See **Fig. 12.2**).
5. When fitting the Module onto a AGA TC5/DC5 there should be a gap of 4.5 mm (See **Fig. 12.3**).
6. **PLEASE NOTE:** When fitting a Module plinth to an AGA TC5 or AGA DC5 the 2 adjustment screws should be screwed in from the outside (until they are fully in). The screw heads will set a gap of 4.5 mm between plinths.
7. Check with a spirit level that the plinth is correct and using a straight edge check that both plinths are aligned along the front face (using either front or rear plinth adjustment screw to alter alignment, if necessary).
8. Also check height differential between the Module plinth and AGA Total/Dual Control plinth is correct: 11 mm. If necessary, use the adjusting studs in each corner to level the plinth. In extreme instances, shims may be used underneath the plinths (See **Fig. 12.2** or **Fig. 12.4**).
9. Attach Module plinth to the AGA Total/Dual Control plinth using 2x M6 screws and washers provided (See **Fig. 12.5** or **Fig. 12.6**). Slide front jointing bracket into place over two adjacent magnets, locking the two appliances together.

Fig. 12.1

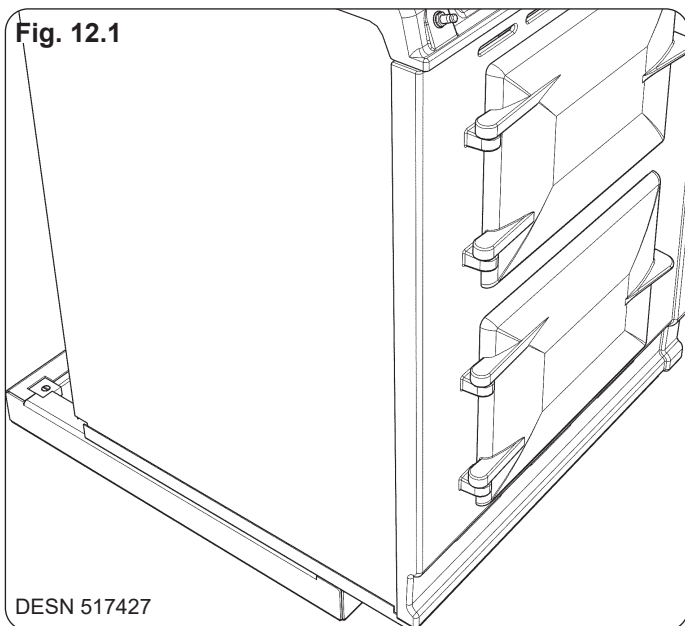

FOR AGA TC3/DC3 + MODULE ONLY

Fig. 12.2


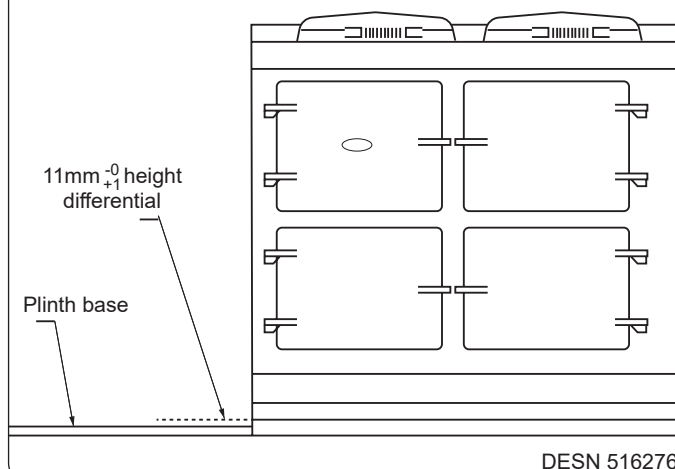


Fig. 12.3

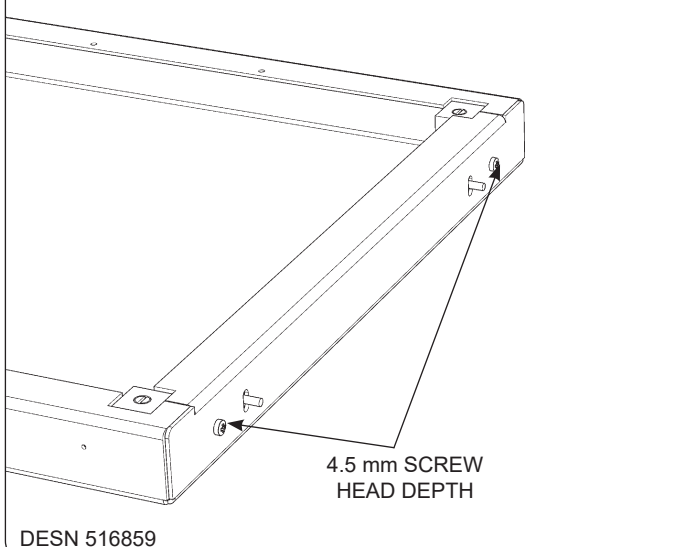

FOR AGA TC5/DC5 + MODULE ONLY

Fig. 12.4



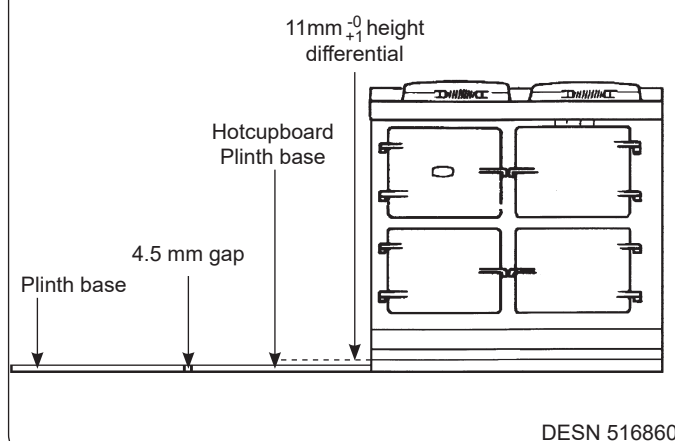


Fig. 12.5

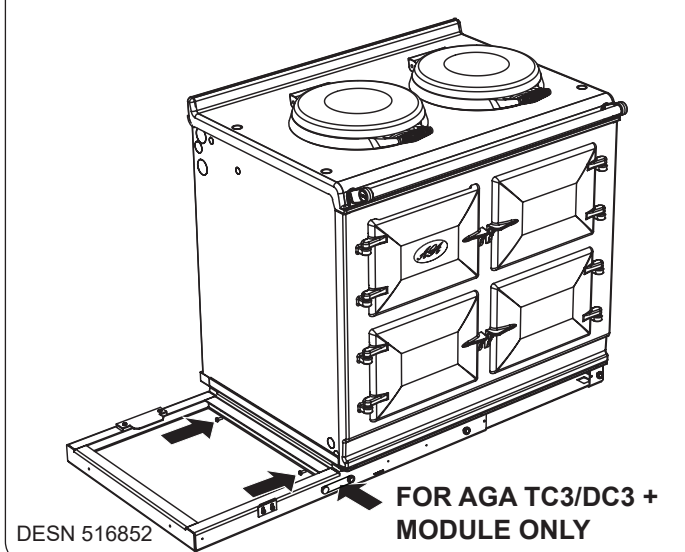


FOR AGA TC5/DC5 + MODULE ONLY

Fig. 12.6

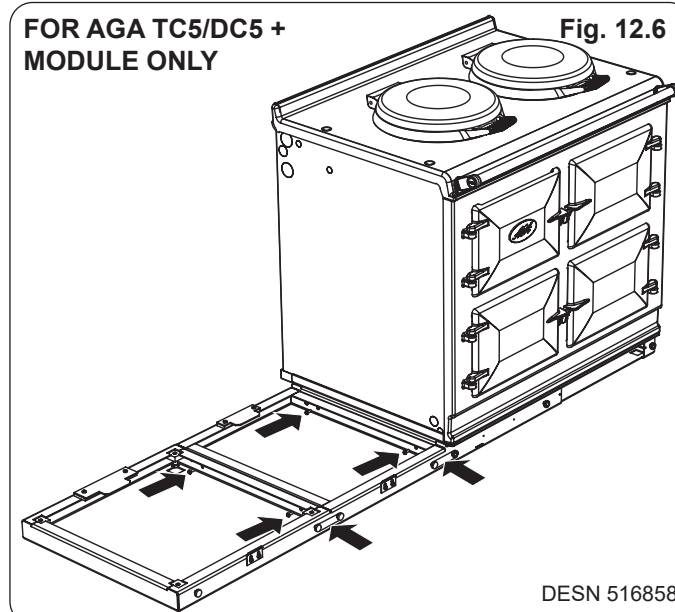

13. Gas connection Integrated Module


Fig. 13.1

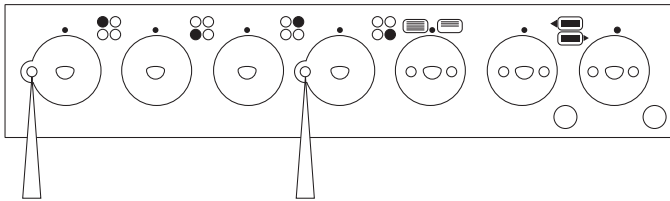

REMOVE 2 FIXING SCREWS

DESN 517426


Fig. 13.2

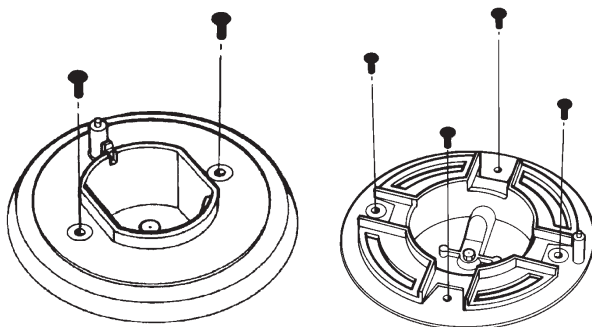

(WOK BURNER ONLY)

DESN 511646

Fig. 13.3

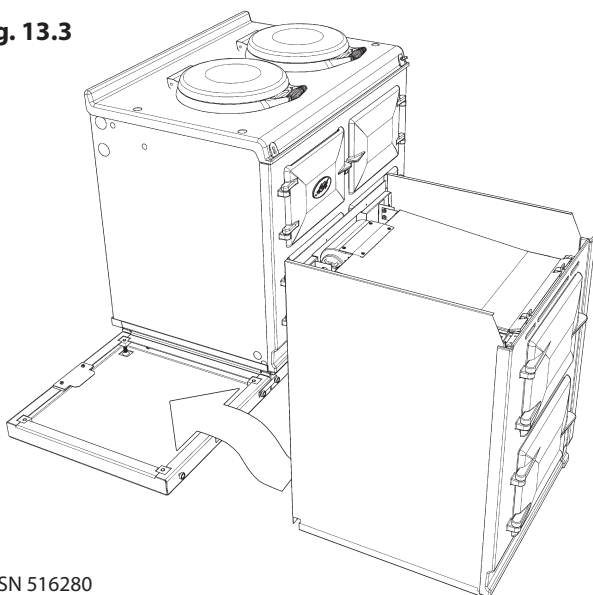

DESN 516280



1. Prior to electrical connections, remove top plate assembly from Module as follows:-
 - A. Remove pan supports and all controls knobs.
 - B. Remove four chrome buttons and the four top plate retaining screws (2 each side).
 - C. Remove two screws from control panel (one from left hand hole and one from centre hole). (See **Fig. 13.1**).
 - D. Pull top plate forward slightly and lift up at front. Support top plate and disconnect wiring to the two neons. Remove top plate.
 - E. Lay the top plate on its top face, suitably protected.
2. Remove hotplate as follows:-
 - A. Remove burner heads and burner caps.
 - B. Remove all of the screws retaining hotplate burner trims (4 from Wok burner, 2 each from the other three burners). (See **Fig. 13.2**).
 - C. Carefully remove burner trims and gaskets, taking care not to damage gaskets or burner electrodes.
 - D. Disconnect earth wire from left hand control panel mounting bracket.
 - E. Remove hotplate casting.
3. Check power to the appliance is off and isolated.
4. Connect the mains wire to the terminal block at the rear of the appliance (See **Electrical Connections**).
5. Slide Module and plinth until rear tongue bracket engages fully into rear of base slot. (See **Fig. 13.3**). Ensure the appliance is aligned squarely with the plinth then proceed to engage the front tongue bracket into the slot on the underside of the base plate. Once satisfied that the front tongue bracket is engaged fully lock into place by tightening the two M6 screws fully.
6. Check to ensure that the Module front plate and AGA Total/Dual Control front plate are the same height, and that the overlap strips correspond correctly. If not, adjustment should be made to the relevant appliance, at this stage.

Connecting to gas

CAUTION: ENSURE THAT THE APPLIANCE IS ISOLATED FROM ELECTRIC SUPPLY

The appliance must be installed by connection to rigid pipework, which should not be less than 15 mm diameter. Connection is made to the ½" BSP female threaded fitting located just below the hotplate level on the rear left-hand side of the appliance attached to the gas regulator.

1. Mark off approximate position on wall for gas supply to the appliance (**Fig. 13.4**). Dimensions N and O (See **Fig. 10.1**).
2. Isolate the gas supply and connect pipework as required up to the position marked.
3. Check for gas tightness after connecting the gas supply.
4. Make the final gas connection to the appliance into the ½" BSP female threaded fitting located just below the hotplate level attached to the gas regulator (See **Fig. 13.5**).
5. Check for gas tightness after connecting the gas supply.
6. To confirm the pressure setting, follow the **"Pressure testing"** page 25 procedure.

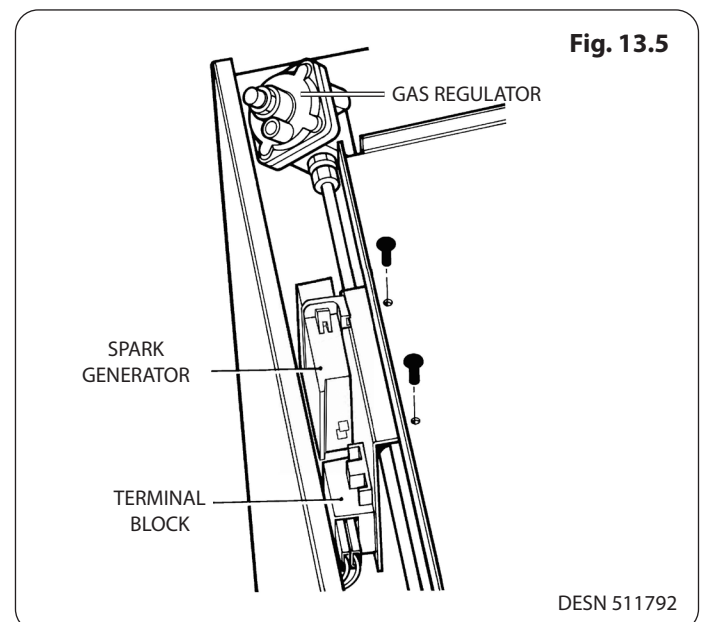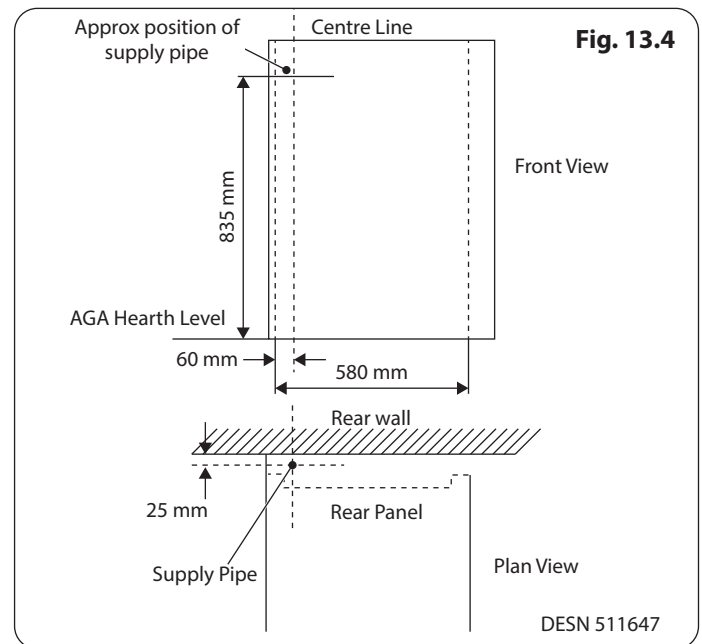

14. Pressure testing

NOTE: The governor is set for N.G.

Use the front left-hand hotplate burner injector as the pressure test point.

- For Natural Gas manifold pressure is 1kPa (4" w.g.)

Access to the gas governor is as follows:-

- A.** Remove pan supports and all control knobs.
- B.** Remove four chrome buttons and the four plate retaining screws (2 each side).
- C.** Remove left hand and centre shroud from the control panel to gain access to the fixing screws. Remove two screws from control panel (one from left hand hole and one from centre hole). (**Fig. 10.1**).
- D.** Pull top plate forwards slightly and lift up at front. Support top plate and disconnect wiring to the two neons. Remove top plate.
- E.** Lay the top plate on its top face, suitably protected.

15. Electrical connection

Electrical earthing is required on this range.

Disconnect the power to the junction box before making the electrical connection.


This range must be connected to a earthed, metallic, permanent supply or a earthing connector should be connected to the earth terminal or wire lead on the range.

DO NOT earth to gas pipe. Failure to follow these instructions could result in death or serious injury.

A three-wire single phase 240-volt, 50-Hz, AC-only electrical supply is required on a separate, 30-amperes circuit, fitted with a double pole isolator.


1. Remove cover (4 screws) to gain access to the mains terminal.
2. Remember that an excess of cable length is required for the possible withdrawal of the appliance.

ALWAYS DOUBLE CHECK CONNECTIONS AND ENSURE TERMINALS ARE FULLY TIGHTENED AND THE CABLE IS SECURED TO THE CABLE CLAMP.

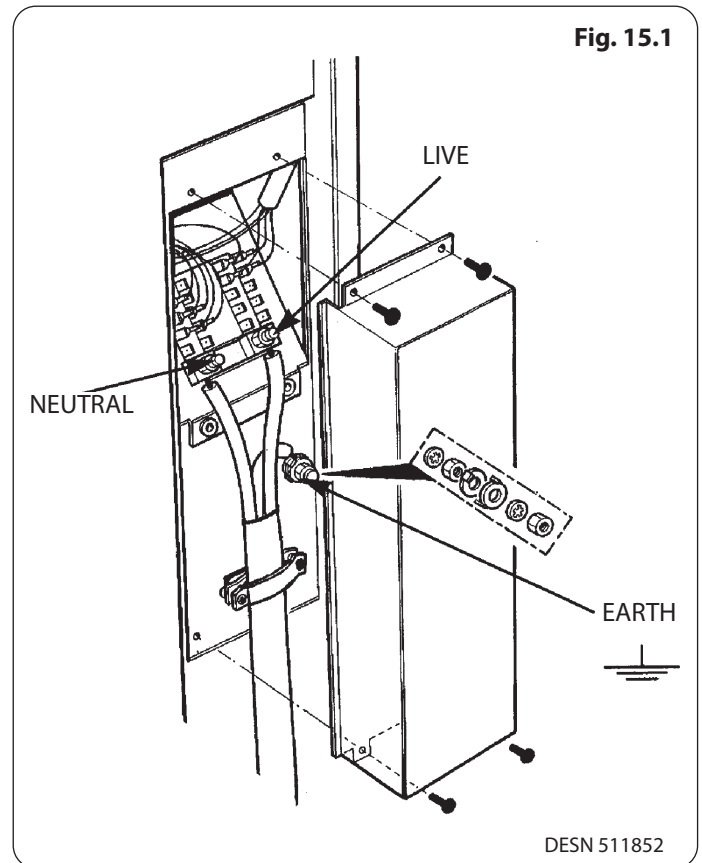

16. Handrail fitting *Integrated module (Gas Hob) only*

Fig. 16.1

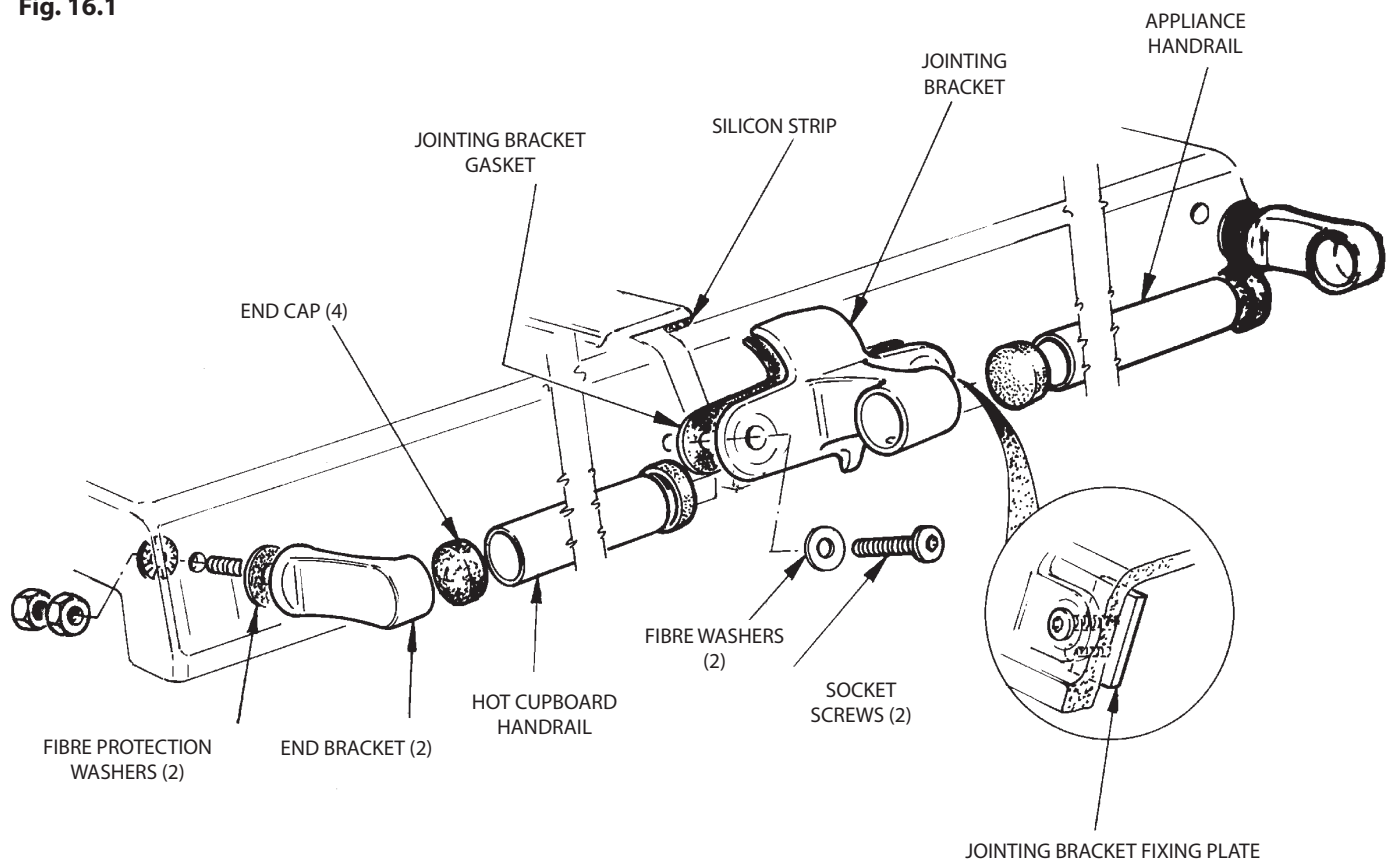

Prior to fitting the appliance top plate and hot cupboard/electric module top plate to the appliance:-


- Ensure the self adhesive silicone strip is fitted to the underside of the hot cupboard/electric module overlap to protect the enamel and the jointing bracket fixing plate is fitted to the left-hand side of the appliance top plate.
- Fit all threads to the two end brackets.
- Fit one end bracket to the right-hand side of the appliance top plate, placing the fibre protection washer between the bracket and the top plate lock in position with shakeproof washer and two hex. nuts.
- Fit the other end bracket to the left-hand side of the hot cupboard/electric module top plate as right-hand.

The appliance and hot cupboard/electric module top plates can now be fitted to the appliance. **(DO NOT SECURE THE APPLIANCE AND HOT CUPBOARD/ELECTRIC MODULE TOP PLATES AT THIS STAGE).**

- Place one end cap on each handrail as shown.
- Hold handrail jointing bracket away from the appliance and locate the two handrails in the two end brackets and the jointing bracket. Push towards the appliance.
- Position and fix the jointing bracket to the appliance and hot cupboard/electric module top plates with socket screws and small fibre washers ensuring jointing bracket gasket is placed between the jointing bracket and top plates.
- Fit the two top plates securely to the appliance with corner stay nuts and buttons.

17. Circuit diagram

CAUTION: label all wires prior to disconnection when servicing controls wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

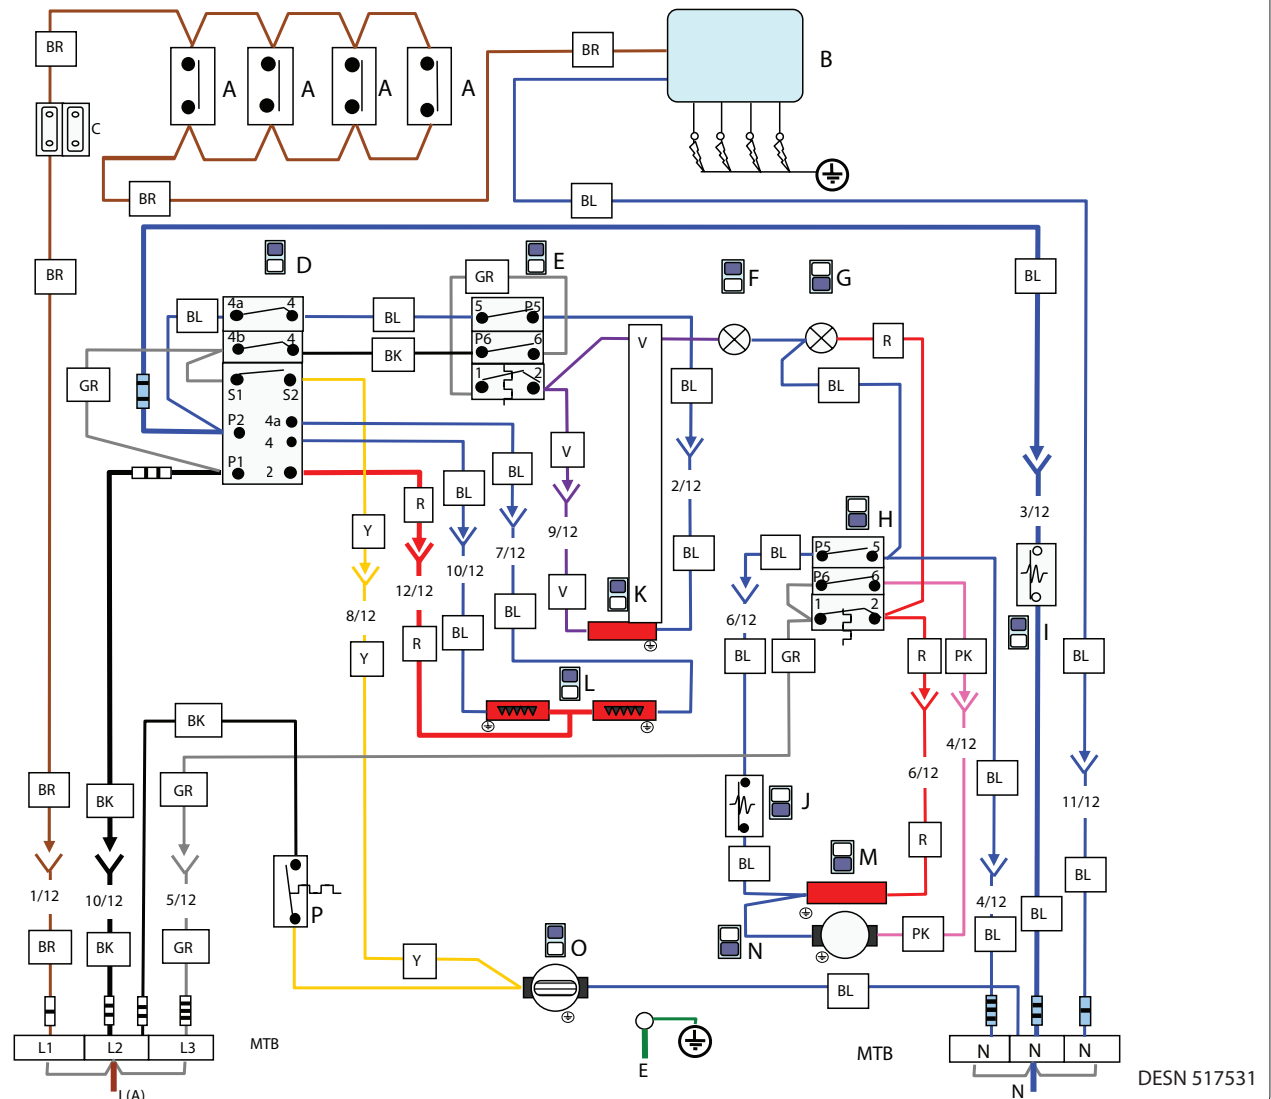

- A.** Gas Tap Ignition Switch
- B.** Spark Generator
- C.** 2 Way Terminal Block
- D.** Grill Regulator
- E.** Top Oven Thermostat
- F.** Top Oven Neon
- G.** Bottom Oven Neon
- H.** Bottom Oven Thermostat
- I.** Top Oven Overheat Thermostat
- J.** Bottom Oven Heat Thermostat
- K.** Top Oven Element Thermal Switch
- L.** Dual Grill Element
- M.** Bottom Oven Element
- N.** Bottom Oven Circulation Fan
- O.** Grill Cooling Fan
- P.** Grill Cooling Fan 'Run On' Thermal Switch
- MTB** Master Terminal Block

Code	Colour
BR	Brown
BL	Blue
GR	Grey
BK	Black
Y	Yellow
V	Violet
PK	Pink
R	Red

18. Technical data

HOTPLATE - Natural Gas	Right-hand Front	Left-hand Rear	Right-hand Rear	Left-hand Front
BURNER TYPE	WOK	RAPID	SEMI - RAPID	SEMI - RAPID
MAXIMUM HEAT INPUT	3.50 KW	3.10 KW	1.80 KW	1.80 KW
	12.5 MJ/hr	11.2 MJ/hr	6.5 MJ/hr	6.5 MJ/hr
INJECTOR MARKING	170	155	118	120

PRESSURE POINT POSITION:	Front left-hand hotplate injector
PRESSURE SETTING:	1 kPa (4" wg)
BURNER IGNITION:	H.T. Spark

PRESSURE POINT POSITION:	Front left-hand hotplate burner injector
PRESSURE SETTING:	2.54 kPa (10" wg)
BURNER IGNITION:	H.T. Spark
ELECTRIC GRILL AND OVENS:	240v, 50 Hz, single-phase 30 AMP
GRILL ELEMENT POWER RATING	2 x 1.05 kW (240V)
TOP OVEN POWER RATING	1.0 kw (240V)
LOWER OVEN	1.4 kW (230V) / 1.52 kW (240V)

The data plaque is located in the centre vent slot near the base of the front plate.

Weight of appliance(s)

- AGA Total Control (TC3) = 370 kgs.
- AGA Dual Control = 444 kgs.
- Hotcupboard (TC5 / DC5) = 110 kgs
- Module = 141 kgs.

19. Servicing notes

AGA Module Gas Hob - Integrated

⚠ DISCONNECT FROM ELECTRICITY SUPPLY BEFORE SERVICING.

⚠ WHEN REWIRING ANY ELECTRICITY COMPONENTS REFER TO CIRCUIT DIAGRAM AND FUNCTIONS FLOW DIAGRAM ATTACHED BEFORE ELECTRICAL RECONNECTION. CHECK THAT THE APPLIANCE IS ELECTRICALLY SAFE.

NOTE: Turn off gas supply to the appliance before servicing any gas carrying components. Always check appliance for gas soundness after completion.

NOTE: Use soapy water solution to ensure there are no gas leaks.

REMOVAL OF TOP PLATE

1. Disconnect from electricity supply and remove pan supports and all control knobs.
 - Slacken grub screws, unscrew module handrail from main AGA handrail and remove from bracket.
 - Remove four chrome buttons and the four top plate retaining screws (2 each side).
2. Remove two screws from control panel (one from left hand hole and one from centre hole) (**Fig. 19.1**).
3. Carefully pull top plate forwards slightly and lift up at the front. Support top plate and disconnect the wiring to the neons. Remove top plate.
4. Lay the top plate on its top face, suitably protected.
5. Re-assemble in reverse order.

Fig. 19.1


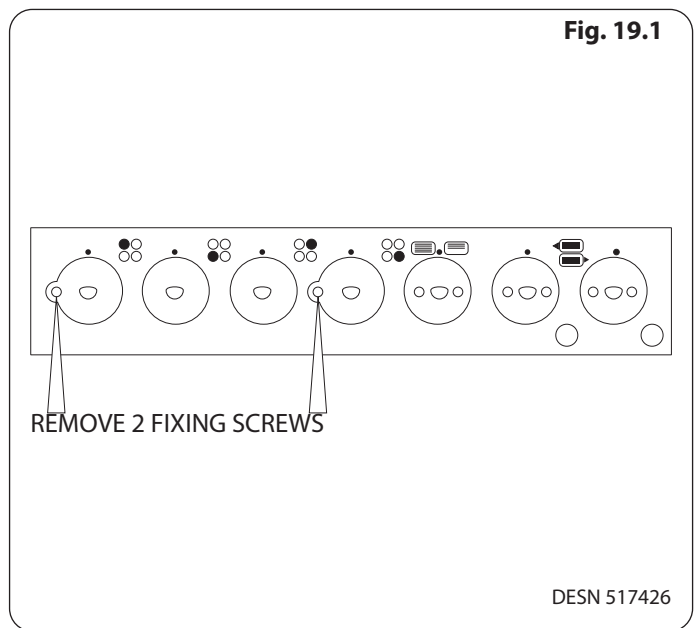


Fig. 19.3

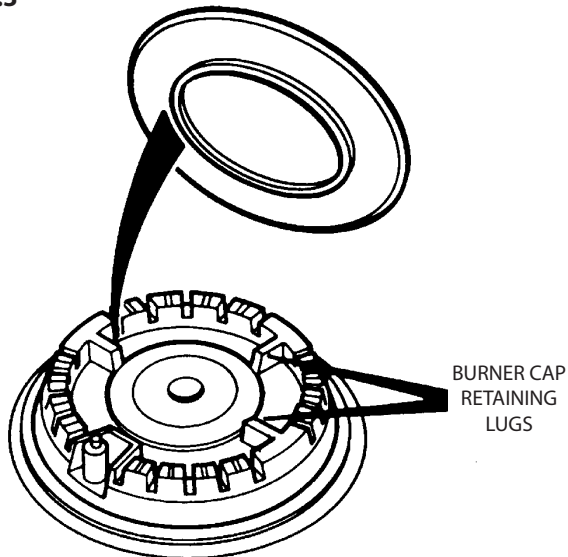


DESN 511617

REMOVAL OF HOTPLATE

1. Repeat operations in **REMOVAL OF TOP PLATE**.
2. Remove burner heads and burner caps.
3. Remove all of the screws retaining hotplate burner trims (4 from the Wok burner, 2 each from the other three burners). (**Fig. 19.2**).
4. Carefully remove burner trims and gaskets, taking care not to damage gaskets or burner electrodes.
5. Disconnect earth wire from left hand control panel mounting bracket.
6. Remove hotplate.
7. Re-assemble in reverse order, ensuring burner heads and burner caps are correctly located and electrodes are not damaged. (See **Fig. 19.3** and **Fig. 19.4**).


Fig. 19.4

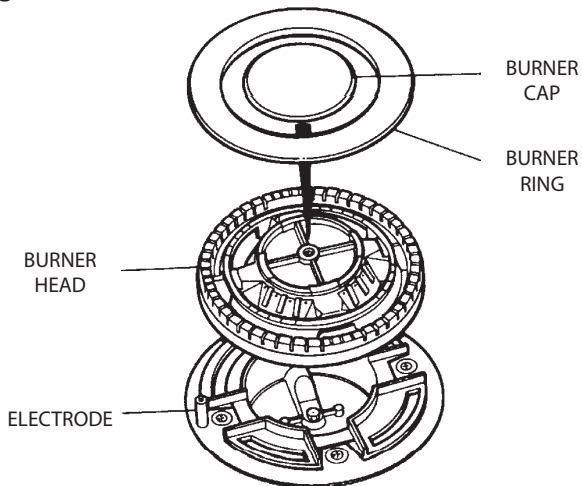

DESN 511619

(WOK BURNER ONLY)


Fig. 19.2

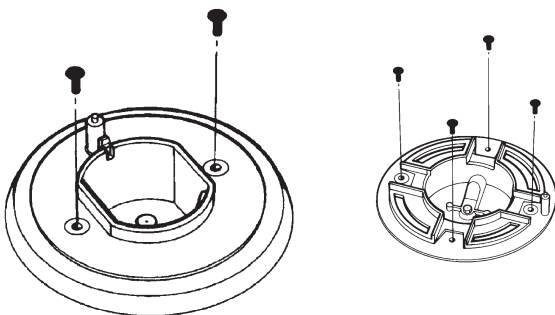

DESN 511646

TO CHANGE IGNITION GENERATOR

1. Turn off electricity supply.
2. Remove top plate and hotplate (See **REMOVAL OF TOP PLATE** and **REMOVAL OF HOTPLATE**).
3. Remove two screws retaining the generator fixing bracket to the burner mounting panel, and remove generator (**Fig. 19.5**).
4. Carefully remove all wiring from ignition generator (**Fig. 19.5**).
5. Re-assemble in reverse order and check operation of ignition to hotplate burners.

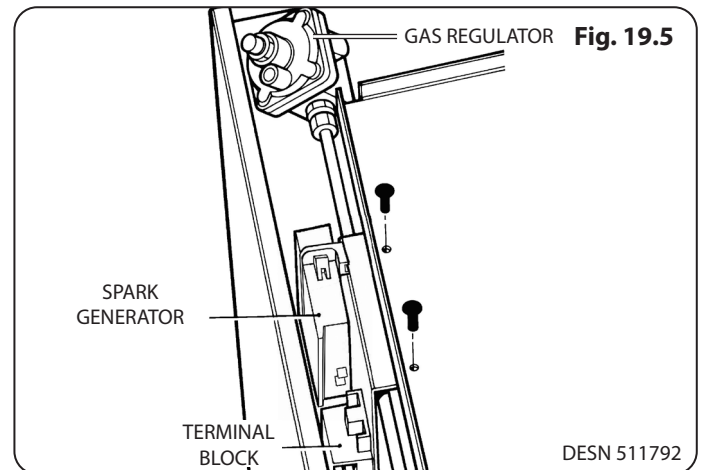

TO CHANGE IGNITION ELECTRODE

1. Turn off top plate and hotplate (See **REMOVAL OF TOP PLATE** and **REMOVAL OF HOTPLATE**).
2. Disconnect the electrode cable from the ignition generator.
3. Remove spring clip retaining electrode to burner body (**Fig. 19.6**) and remove electrode and cable.
4. Replace with new electrode ensuring spring clip is correctly located into burner body.
5. Re-assemble in reverse order and check operation of ignition to hotplate burners.

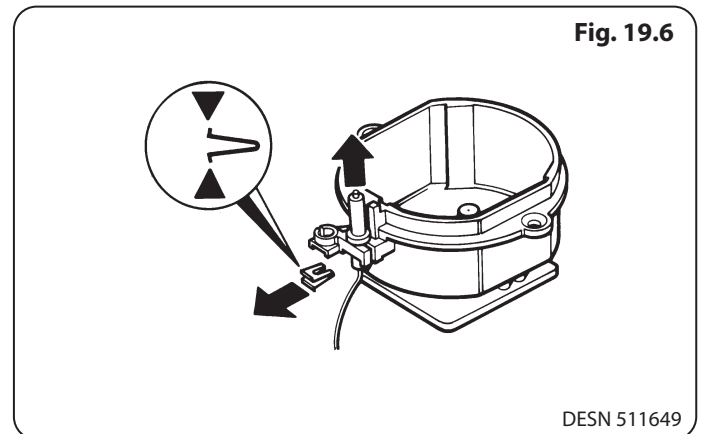


Fig. 19.7

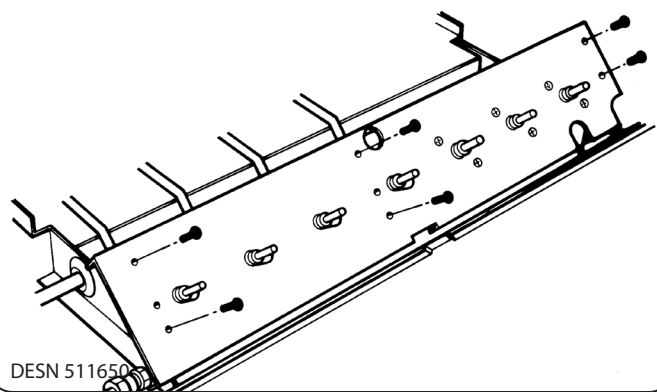


Fig. 19.8


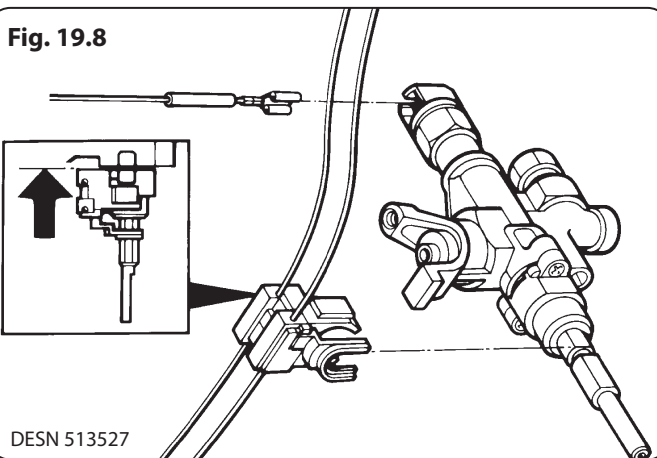


Fig. 19.9

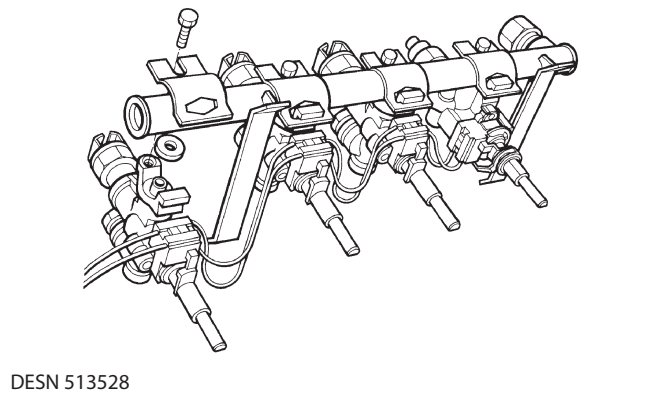

TO CHANGE HOTPLATE GAS TAP

1. Turn off gas supply and electricity supply.
2. Remove top plate and hotplate (See **REMOVAL OF TOP PLATE** and **REMOVAL OF HOTPLATE**).
3. Remove controls mounting plate by removing the 6 screws (**Fig. 19.7**).
4. Disconnect supply pipes from rest of all 4 gas taps and pull wiring off tap switches.
5. Disconnect gas rail tube and remove 4 screws from gas rail support brackets. (**Fig. 19.8**).
6. Remove gas rail/taps assembly and remove appropriate tap by removing 2 screws. (**Fig. 19.9**).
7. Re-assemble in reverse order ensuring that the sealing ring is correctly located between the new tap and the gas rail. (Rewire as circuit diagram).
8. Check for gas soundness before fitting hotplate and top-plate.
9. When re-assembled, check for correct operation of tap/ tap ignition switches.

TO CHANGE OVEN THERMOSTAT/GRILL CONTROL

1. Turn off electricity supply.
2. Remove hotplate and top plate (See **REMOVAL OF HOTPLATE** and **REMOVAL OF TOP PLATE**).
3. Remove two screws retaining the thermostat/grill control to the controls panel.
4. Pull all of the wiring off the thermostat or grill control. The grill control can now be removed.
5. From inside the oven, unclip thermostat phial. (Top oven phial located at rear of oven; lower oven phial located at top right hand side).
6. Feed phial through hole in oven, then pull capillary up from side of the appliance to remove thermostat.
7. Re-assemble in reverse order, ensuring thermostat phial and capillary are not damaged and phial is correctly located into retaining clips. (Rewire as circuit diagram).
8. Check operation of oven thermostat phial or grill control.

**For further advice or information contact
your local AGA Specialist.**

With AGA Rangemaster's policy of continuous product improvement, the Company reserves the right to change specifications and make modifications to the appliances described and illustrated at any time.



Manufactured By
AGA Rangemaster
Station Road
Ketley Telford
Shropshire TF1 5AQ
England

www.agaliving.com
www.agacookshop.co.uk