



PREMIUM SERIES USER MANUAL

	Page
1 Important directions for safety and the environment	2
1.1 For your safety	
1.2 Caring for the environment	
2 Installation	3
2.1 Installation	
2.2 Connection to the electrical power supply	
2.3 Connection to the water system	
3 Before starting	4
3.1 Know your appliance	
3.2 Main features	
3.3 Main components	
3.4 Electronic Control	
3.5 Main control panel and Fresco control	
4 Using the on/off setting	8
4.1 Switching on and off	
4.2 How to adjust the temperature for different requirements	
4.3 Ice Maker activation	
4.4 Information and malfunction messages on the display	
5 Settings and Special Functions	10
5.1 Customisation and language settings	
5.2 Special functions activated through the Menu	
5.3 Basic settings of the Menu	
6 Internal Layout	15
6.1 Internal Layout (positioning, adjustment, removal)	
7 Activation and use of the Ice Maker	17
7.1 Activation and use of the Ice Maker	
7.2 Water Filter	
8 Lighting	18
8.1 Lighting	
9 Food Storage	19
9.1 General storage advice and tips	
9.2 How to maintain good food quality	
9.3 Recommendations for storing fresh food	
9.4 Recommendations for storing frozen food	
10 Recommended times for food storage	22
11 Care and Cleaning	23
11.1 Care and Cleaning	
11.2 Condenser cleaning	
11.3 Internal cleaning	
12 Troubleshooting Guide	24
12.1 Troubleshooting Guide	
12.2 Malfunction messages appearing on the display	
13 Before calling for assistance	26
13.1 Before calling for assistance	
14 Menu Map	27
14.1 Functions	
14.2 Setting	
15 Useful Information	
15.1 Spares	
15.2 Starter kit	

1 Important directions for safety and the environment

1.1 For your safety



Notes

Recommendations for correct use of the appliance



Important

Directions for avoiding appliance damage



Warning

Indications for avoiding injury to people

- If this appliance is replacing an existing appliance which must be removed or disposed of, make sure that it does not become a dangerous trap for children by cutting its power supply cable and rendering it impossible to close the door. Use the same caution at the end of the lifespan of the new appliance.

- This appliance is designed to refrigerate beverages and foods and is for domestic use only.

- The appliance must be installed by following the instructions in the Installation Guide. Particular care should be taken not to obstruct the vent openings of the appliance and of the built-in units.

- The appliance features a concentrated lighting system with LED lamps. Do not stare into these lamps when they are on to avoid possible eyesight damage. This warning is also contained on the label attached to the inside of the refrigerator door.

- When the freezer is functioning do not touch the inner surfaces in stainless steel with wet or damp hands, since skin may stick to the very cold surfaces.

- Do not use any type of electrical equipment inside of the food storage compartments.

- When positioning the shelves, do not place fingers in the shelf slide guides.

- Do not position containers of flammable liquids near the appliance.

- Completely switch off the appliance during cleaning operations .

- The packaging parts can be dangerous for children: do not allow children to play with the plastic bags, plastic film or Styrofoam.

- Any repairs must be performed by an Approved Aga Service Engineer.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1.2 Caring for the environment



- Pay special attention to correct disposal procedure for all the packaging materials.

- The appliance must not be disposed of with urban waste. Contact local waste disposal centres for direction on how to dispose of recyclable waste.


- Prior to disposal, cut the power supply cord and make it impossible to close the door.

- During disposal, avoid damage to the refrigeration circuit.

- The appliance does not contain hazardous substances for the atmospheric ozone layer, neither in the refrigeration circuit nor in the insulation.

Make sure that installation is performed correctly, adhering to all directions in the specific installation manual provided with the appliance.

Connection to the electrical power supply 2.2

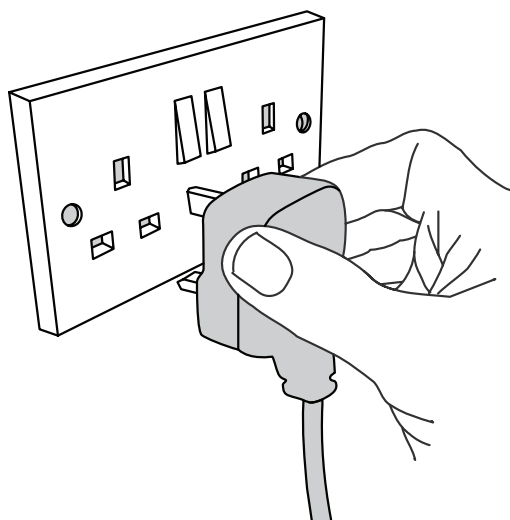


The appliance is equipped with a 13 AMP UK plug and must be connected to the electrical power supply through a corresponding UK socket.
Do not use extension cords and/or multiple adapters for the power supply connection.



Do not use extension cords and/or multiple adapters for the power supply connection.

Connection to the water system 2.3

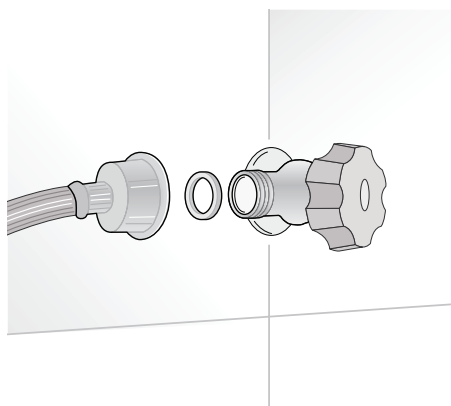

The models provided with an Ice Maker require a connection to the domestic water supply system. This can be executed through the provided water hose with 3/4" threading.
The system pressure must be between 0.05 MPa and 0.5 MPa (between 0.5 Bar and 5 Bar).
Different pressures can cause malfunctions or leaks in the water system.
The appliance should be supplied only with drinkable water.




The appliance should be supplied only with drinkable water.



Make sure that installation is performed correctly, according to all of the directions in the specific installation manual provided with the appliance.

3 Before starting

3.1 Know your appliance

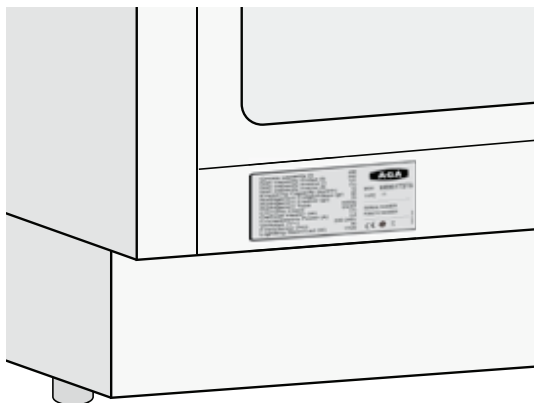


Congratulations for having purchased your new Aga Refrigeration unit: from now on you can use our innovative storage system, which will allow you to keep all of your food in the best way possible.

This manual will answer most of your questions about the product's features. Should you require further information, please call our Customer Service Team on 0845 602 3015

Before calling, write down the model type and serial number which are available on the warranty certificate and on the rating plate located on the bottom left-hand corner of the appliance, behind the bottom drawer and any messages which may have appeared on the display.

3.2 Main features

- The Aga TriPro refrigeration system and the efficient separation of internal compartments ensure maximum freshness and offer excellent storage of foods in the three compartments: refrigerator, Fresco and freezer
- It is also possible, should there be a need, to further increase the flexibility of the appliance by making the freezer compartment operate as a refrigerator or as a Fresco compartment
- The Fresco compartment has a low temperature and controlled humidity, providing excellent storage in maximum safety conditions for fresh foods
- Electronic control guarantees constant temperature and humidity levels set by the user
- An interactive menu allows customised management of appliance functions and the visualisation of functioning messages
- Power save features to reduce consumption during holiday periods
- Ample drawers with Soft self-closing systems in the Fresco area
- Ice Maker for automatic ice production in the desired size
- Easily replaceable water filter located inside the refrigerator
- Patented sliding shelf system, with shelves that can be positioned at any level inside of the refrigerator without having to be removed
- Stainless steel surface inside and coloured finish outside
- Patented hinge system that permits automatic door closing
- External drawers with to self-closing system
- Localised lighting with LEDs
- Anti-tipping system by means of wall mounting brackets

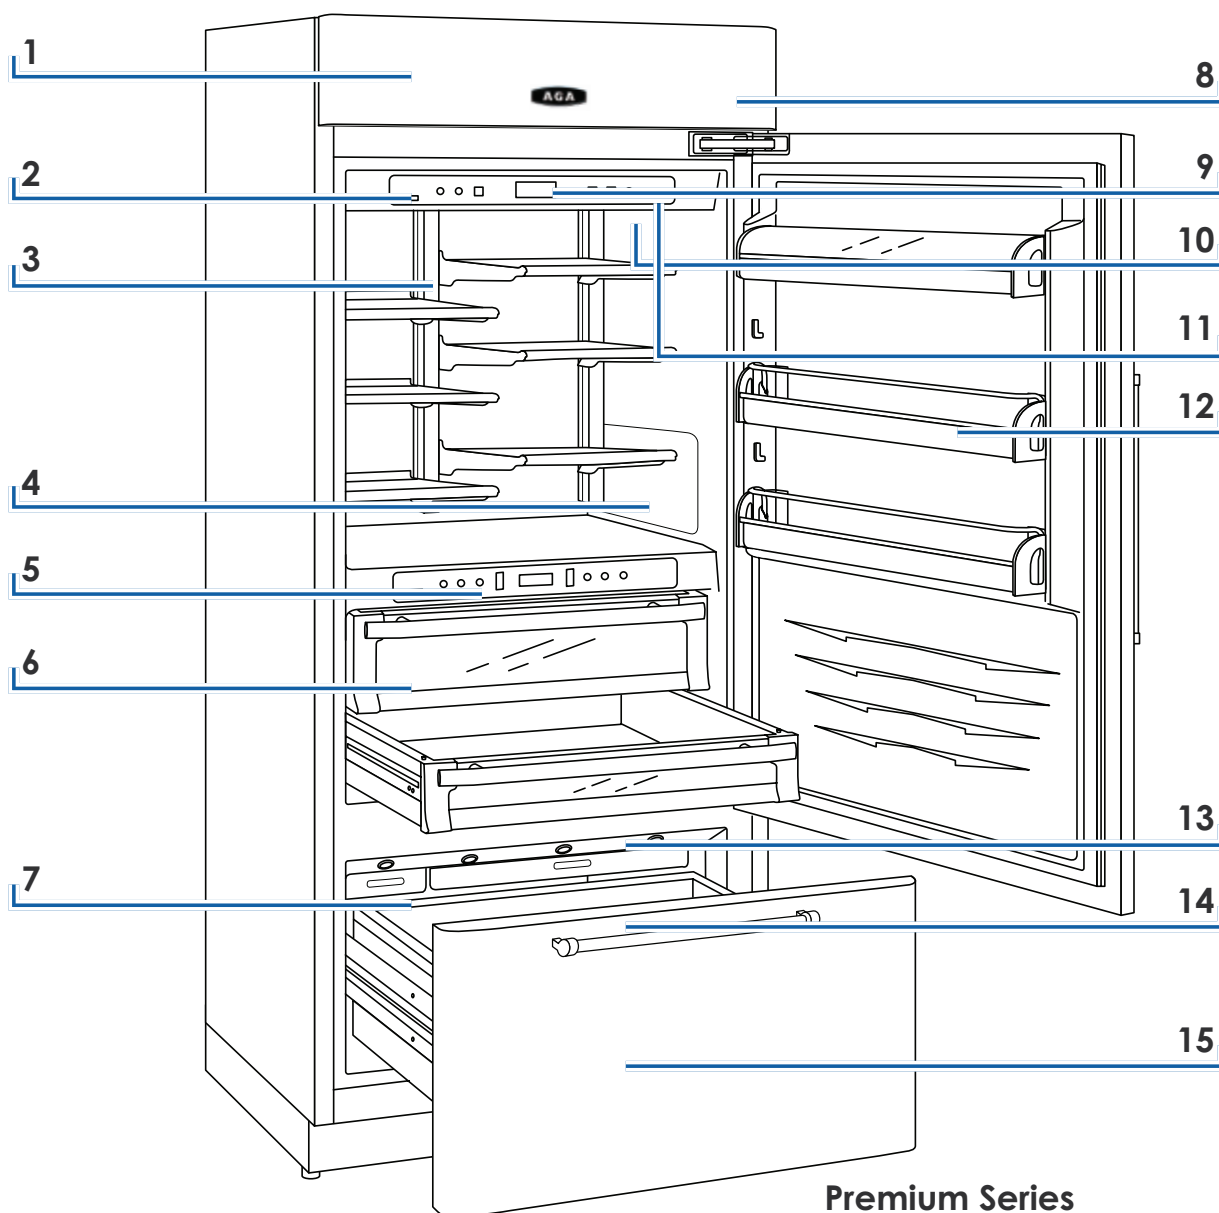

Premium Series


- | | |
|---|---|
| 1 Aga colour finish | 10 Sound signals |
| 2 Control panel with Menu | 11 Holiday function |
| 3 Patented shelf positioning system | 12 Spacious door shelves |
| 4 Water filter | 13 Innovative lighting |
| 5 Control panel, Fresco area | 14 Automatic door and drawer closure |
| 6 Fresco compartment with controlled humidity | 15 Freezer compartment that can be transformed into a refrigerator or Fresco compartment (TriMode function) |
| 7 Automatic icemaker | |
| 8 Double refrigeration system | |
| 9 Temperature display | |

3 Before starting


3.4 Electronic Control

The innovative electronic control system maintains constant temperature on the three compartments and visualises it on the control panel display. It also allows user interaction making it possible to personalise settings of the various functions and to receive sound and/or visual messages if any malfunction should occur in the appliance.

3.5 Main control panel

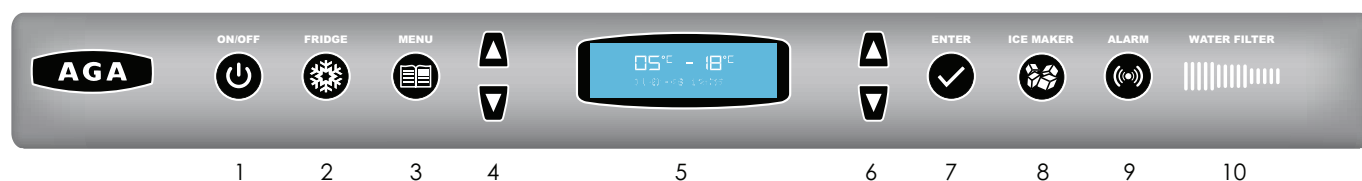

1		On/Off	Allows complete switching on and off of the appliance (press for three seconds).
2		Fridge	Allows switching on and off of only the refrigerator compartment (press for three seconds).
3		Menu	Allows access to the appliance function menu.
4		Up/down Fridge	Using the Up and Down buttons, it is possible to change the set temperature of the refrigerator and scroll through the interactive menu.
5		Display	It shows the temperature of the refrigerator and freezer compartments, the date and time, Menu functions and visual messages.
6		Up/Down Freezer (TriMode)	By selecting Up/Down the preset temperature can be changed according to the selected function mode (freezer, refrigerator, Fresco).
7		Enter	Confirms activation or deactivation of the selections made in the Menu Menu.
8		Ice maker	Allows activating or deactivating the automatic ice production.
9		Alarm	Blinks to signal possible malfunctioning, also in combination with a sound signal which can be deactivated by pressing the button.
10		Water Filter	Shows the status of the water filter cartridge capacity.

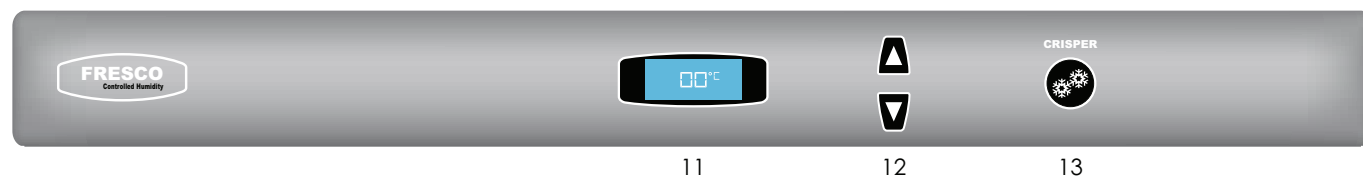3.5 Fresco control

- | | | | |
|----|--|----------------|---|
| 11 | | Display | Shows the temperature of the Fresco compartment. |
| 12 | | Up/Down | Using the Up and Down buttons, it is possible to change the temperature set for the Fresco compartment. |
| 13 | | Fresco | Allows switching on and off of only the Fresco compartment (press for three seconds). |

4 Using the on/off setting

4.1 Switching on and off

First startup

When the appliance is connected to the electrical power supply but has not yet been switched on, the display shows the message

Stand by

(safety message to warn that the appliance is connected to the mains, and all the panel buttons are off).

To switch on all the appliance compartments, press the on/off button  for three seconds.

Switching off the Refrigerator and Fresco compartments

When the appliance is first switched on the TriMode compartment is set to the "freezer" mode. After switching on it remains always on and can be switched off only by switching off the complete appliance.

Press on/off  for three seconds.

Restarting

Use the same buttons to restart.

The freezer compartment always stays on and cannot be switched off except by completely switching off the appliance by pressing the on/off button  for three seconds.

Switching off for long periods

During periods of long absence it is recommended to switch off the refrigerator by pressing the on/off button  for three seconds and disconnecting the electrical plug or the omnipolar switch controlling the socket.

Completely empty the refrigerator, clean and dry it and leave the doors and drawers partially open to prevent unpleasant odours.



If at the first startup the Standby message does not appear, but another message appears, it means that the appliance has already started the cooling process. If this is the case, deactivate any possible sound signal by pressing the Alarm button , close the door and wait until the set temperature is reached.

During the first startup, it will not be possible to use the Menu to modify the factory settings until the preset temperature has been reached.

Each time the appliance is switched on it goes through a self-diagnosis procedure lasting three minutes before completely starting up.

If only the refrigerator compartment or the Fresco compartment is switched off, the specific fan will continue to operate to prevent the formation of unpleasant odours and mould.

Before switching off the appliance for a long period of time, remove all of the items inside and leave the doors and drawers open to prevent the formation of unpleasant odours and mould.

How to adjust the temperature for different requirements

4.2

Each model has been carefully tested before leaving the factory and is adjusted in such a way to ensure high performance and low consumption. Usually, it is not necessary to modify the settings. Nevertheless, according to special needs, it is possible to modify the set temperatures as follows:

Refrigeration Compartment

From +2°C to +8°C (from 35.6°F to 46.4°F), the recommended preset temperature is +5°C (41°F).
To adjust the temperature use the Up/Down buttons  Upon touching these buttons the newly set temperature will appear in the display.
To modify this temperature, use the buttons until reaching the desired temperature.

Fresco Compartment

From -2°C to +2°C (from 28.4°F to 35.6°F), the recommended preset temperature is 0°C (32°F).
To adjust the temperature use the Up/Down buttons  Upon touching these buttons the newly set temperature will appear in the display.
To modify this temperature, use the buttons until reaching the desired temperature.

Freezer Compartment (TriMode)

From -15°C to -22°C (from 5°F to -7.6°F), the recommended temperature is preset at -18°C (0°F).
To adjust the temperature use the Up/Down buttons  Upon touching these buttons the newly set temperature will appear in the display.
To modify this temperature, use the buttons until reaching the desired temperature.
In case the compartment is used as refrigerator or Fresco compartment (TriMode function) the recommended and preset temperatures will correspond to those indicated for the respective compartments.



The temperature shown can vary slightly in respect to the set temperature following frequent openings of the doors or insertion of room temperature foods or large quantities of foods.

6 to 12 hours are necessary to reach the selected temperature.

Ice Maker Activation

4.3

The Icemaker button  located on the main control panel permits activation of the automatic icemaker. The button is lighted when the icemaker is in use, this  lights up.

A prewash of the hydraulic circuit should be performed before activating the Ice Maker for the first time. To do this touch at the same time buttons Enter  and Ice Maker .
After a few minutes the Ice Maker can be activated.



Do not activate the Ice Maker unless the appliance is connected to the water mains.

Information and malfunction messages on the display

4.4

An integrated control system provides information through lighted signals or text messages visualised on the display.
The information signal is always visualised with a fixed text message, while a malfunction signal is visualised with blinking text. The sound signal that accompanies some malfunction signals can be deactivated by pressing the Alarm button  on the main control panel.
The list of malfunction signals is located at the back of this manual.

5 Settings and Special Functions

5.1 Customisation and language settings



To prevent an inadvertent change to the settings the keypad is automatically locked after a certain period of time.

To re-activate the Menu function, press simultaneously the Menu button  and the Down button  for at least three seconds.

It is possible to customise the functions of your Aga to adapt it to diverse usage needs, resetting the main parameters (Settings) or activating special functions (Functions).

Functions are visualised on the main display by pressing the Menu button .

The Up/Down buttons  permit scrolling the available functions, which can be selected by pressing the Enter button . The display visualises the current functioning status.

Using the Up/Down buttons , it is also possible to scroll through the selected function, activating or deactivating by pressing the Enter button .

Once the function is confirmed, the display will automatically visualise the main menu to select other functions.

At any time it is possible to return to the previous selection through the Menu button .

The language of the messages appearing on the display can be changed by operating as follows:

Enter the Menu by pressing the Menu button  select Settings via the Up/Down buttons  and confirm via Enter . Then select the Language function and the desired language.

5.2 Special functions activated through the Menu

To use special functions, select the Menu button  and use the Up/Down button  to access the menu, confirming the selection Functions.

Shopping Fridge

The function lowers the refrigerator temperature to +2°C (35.6°F) for 12 hours, permitting more rapid cooling of food that has just been placed in. Once the 12 hours have expired, the function deactivates automatically, returning to the previously set temperature. It is possible to programme a timed activation of the function. After a prolonged interruption of electrical current, it is necessary to reactivate the function.

How to activate

Functions →  →  Shopping Fridge →  → 
On → 

How to deactivate

Functions →  →  Shopping Fridge →  → 
Off → 


How to programme timed activation

Functions →  →  Shopping Fridge →  → 
Shopping Time →  Set hours → 

It is possible to program the function with a delay of 1 to 12 hours.

Holiday Fridge

This function (recommended in case of prolonged absences since it allows considerable energy savings) brings the refrigerator compartment temperature to +14°C (57.2°F). It is possible to program the duration, or it can be manually deactivated upon re-entry after a period of absence. This function remains active even if during the period of absence there is a prolonged interruption of electrical power.

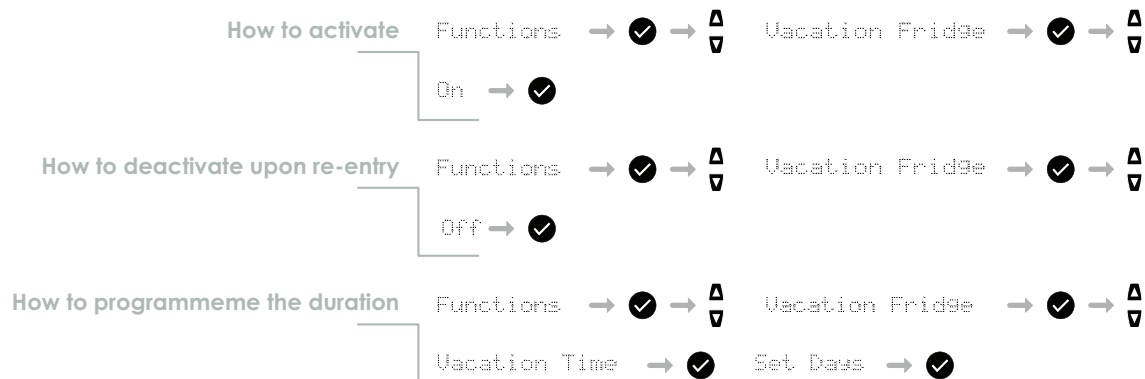


It is possible to programme a period from 1 to 90 days.

Shopping TriMode

This function must be activated at least 24 hours before placing room temperature items in the freezer, or several hours before placing previously frozen items in the freezer which have been subjected to a slight rise in temperature. This function is automatically deactivated when the programmed time period expires. It is possible to programme timed activation of the function.

After a prolonged interruption of the electrical power, it is necessary to reactivate the function.

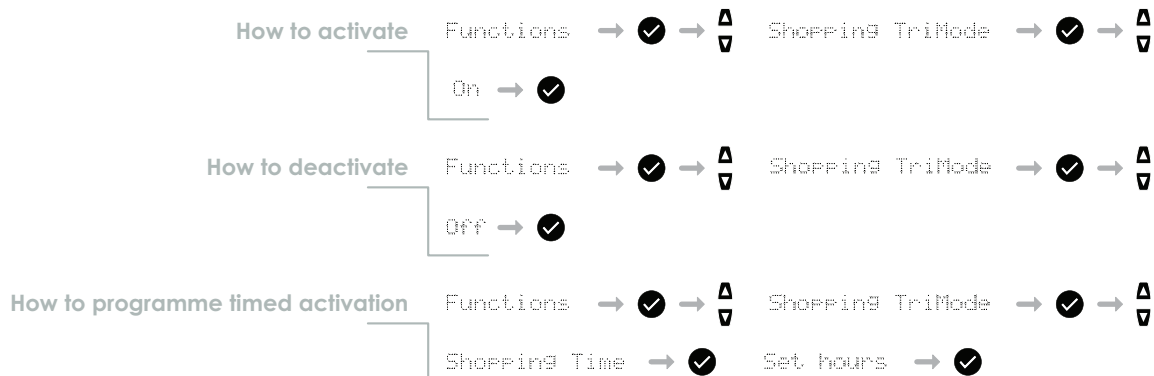

It is possible to programme the function with a delay of 1 to 12 hours.

Holiday TriMode

This function (recommended in case of prolonged absences since it allows considerable energy savings) brings the TriMode compartment temperature to 8°C (46.4°F). It is possible to programme the duration, or it can be manually deactivated upon re-entry after a period of absence. This function remains active even if during the period of absence there is a prolonged interruption of electrical power.



It is possible to programme a period from 1 to 90 days.

5 Settings and Special Functions

Bottle Cooler

This function can be activated when it is necessary to cool off beverages quickly, by placing them inside the freezer compartment. It is possible to select a duration of 1 to 45 minutes. A sound signal will indicate when the optimal temperature has been reached. After removing the beverages, deactivate the sound signal by pressing the Alarm button .

How to activate

Functions →  →  Bottle Cooler →  → 
On → 

How to deactivate

Functions →  →  Bottle Cooler →  → 
Off → 

How to programme the duration

Functions →  →  Bottle Cooler →  → 
Set Cooling Time → 

Ice Maker

The Icemaker function permits selecting the size of the ice cubes, by choosing between Large (base setting) or Medium, and activation of the SuperIce function, which increases the quantity of produced ice.

How to activate the cube size function

Functions →  →  Ice Maker →  → 
Set Cube Size →  →  Large → 
Functions →  →  Ice Maker →  → 
Set Cube Size →  →  Medium → 

How to activate the SuperIce function

Functions →  →  Ice Maker →  → 
On → 

How to deactivate

Functions →  →  Ice Maker →  → 
Off → 

The SuperIce function deactivates automatically after 24 hours.

Water Filter

The View Status function permits visualising the exact quantity of filtered water in litres and the time left before the filter needs to be replaced.

The Reset Filter function sets to zero the quantity of water filtered and the time left before the filter needs to be replaced.

It is necessary to set the meter to zero each time the cartridge is replaced.

After 30 days from the appearance of the message "Replace Filter Cartridge", ice production will be suspended and the display will visualise the message "No Water". To once again activate ice production it is necessary to set the filtered water meter to zero via the Reset Filter function.

How to check the status of the filter

Functions →  →  Water Filter →  →  Status Filter
→  View Status → 

The days and the litres available before filter replacement is necessary are indicated.

How to set the filtered water meter to zero

Functions →  →  Water Filter →  →  Status Filter
→  →  Reset Filter → 

Bypass Filter

This function is to be activated when it is not necessary to filter the water, because excellent quality water is already available from the home water system.

How to activate filter Bypass

Functions →  →  Water Filter →  →  Status Filter
→  →  Bypass Filter → 

Manual Clean, Water Filter

If the ice production is disabled for long period, the water circuit is automatically cleaned.

Nevertheless, in particular cases, it is possible to manually intervene and perform a supplementary cleaning.

How to manually clean the filter

Functions →  →  Water Filter →  Manual Clean → 

Repeat the operation until the water is clean.



Correctly position the ice tray or another suitable container under the Icemaker to collect water, then close the drawer. At the end of the operation, wash the tray.

5 Settings and Special Functions

5.3 Basic settings of the Menu Menu

Select the Menu button  and used the Up/Down button  to select Settings.

TriMode Options The freezer compartment can, if required, be converted to the refrigeration or Fresco operating mode.

How to set the Fridge function Settings →  →  Tri-Mode Option →  →  Fridge → 

Enter to Confirm Fridge → 

How to set the Fresco function Settings →  →  Tri-Mode Option →  →  Fresco → 

Enter to Confirm Fresco → 

How to revert to the Freezer function Settings →  →  Tri-Mode Option →  →  Freezer → 

Enter to Confirm Freezer → 

Default Setting This offers the possibility to reset default factory settings and cancels any previous changes.

How to reset default settings Settings →  →  Default Settings →  Enter to Confirm → 

Date

Set Date The display will visualise the date in the format dd:mm:yy (day:month:year), the day will blink. Use the Up/Down buttons  to modify the setting, confirm with Enter  to go on to the next setting; once the year is confirmed the date will be set.

How to set the date Settings →  →  Date →  →  Set Date → 

Show Date Using this function it is possible to deactivate/activate the date visualisation on the display.

How to activate the date Settings →  →  Date →  →  Show Date →  → 

On → 

How to deactivate the date Settings →  →  Date →  →  Show Date →  → 

Off → 

Time

Set Time The display visualises the hours and minutes in the format hh:mm and with hh: blinking. Use the Up/Down buttons  to modify the setting and then confirm by pressing Enter  to go on to the next setting. Once the minutes are confirmed, the time will be set.

How to set the time Settings →  →  Time →  →  Set Time → 

Set 12/24 This function selects the display at 12 or 24 h

How to set the display to 12 h Settings →  →  Time →  →  Set View 12/24

→  →  12 → 

How to set the display to 24 h Settings →  →  Time →  →  Set View 12/24

→  →  24 → 

Show Time Through this function it is possible to activate/deactivate the constant visualisation of the time.

How to activate the permanent time Settings → ✓ → Δ Time → ✓ → Δ Show Time → ✓ → Δ On → ✓

How to deactivate Settings → ✓ → Δ Time → ✓ → Δ Show Time → ✓ → Δ Off → ✓

Language The function allows selection of the language for the display messages

Italian Settings → ✓ → Δ Language → ✓ → Δ Ita → ✓

English Settings → ✓ → Δ Language → ✓ → Δ En → ✓

French Settings → ✓ → Δ Language → ✓ → Δ Fra → ✓

German Settings → ✓ → Δ Language → ✓ → Δ De → ✓

Spanish Settings → ✓ → Δ Language → ✓ → Δ Esp → ✓


Set C°/F° This function permits visualising the temperature in Centigrade or Fahrenheit degrees. Normally, the appliance is set for visualisation in centigrade degrees.

How to set the temperature in Centigrade Settings → ✓ → Δ Set °C/°F → ✓ → Δ Set °C → ✓

How to set the temperature in Fahrenheit Settings → ✓ → Δ Set °C/°F → ✓ → Δ Set °F → ✓


Internal Layout (positioning, adjustment, removal) **6.1**

Fresco Drawer Fixed to the slide guides with two locking nuts

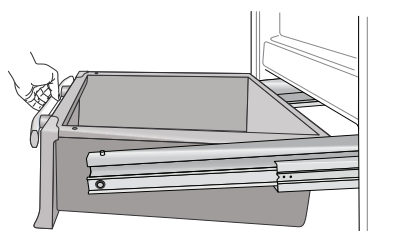

- to remove the drawer, unscrew the locking nuts and remove the drawer


TriMode Drawer The upper TriMode can be removed using the same method used for the Fresco drawer

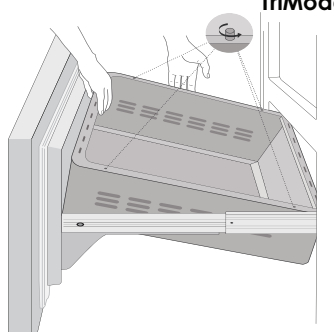

- to remove the lower drawer unscrew the four locking nuts.

6 Internal Layout

Ice Tray Located in the upper drawer of the freezer compartment

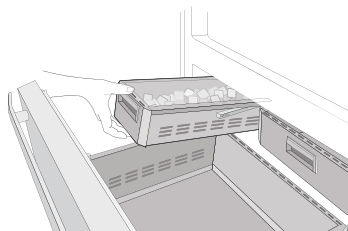


- after removal, make sure to reposition it correctly.




Do not place hands or fingers near the icemaker when in function.


Shelves The shelves are sliding and easily positioned by the user as follows:

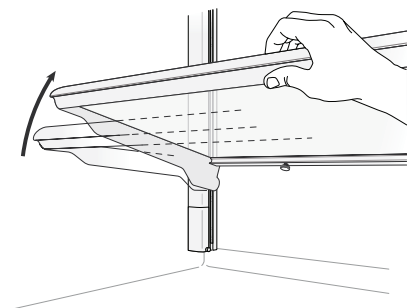

- pull and slightly turn the locking knob
- lift the front part of the shelf and tilt it

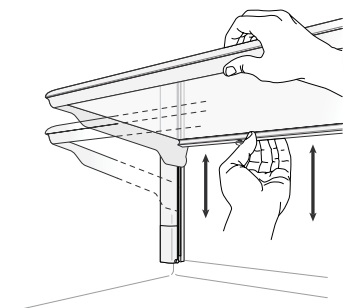


- lift or lower the shelf to the desired position
- reposition the locking knob

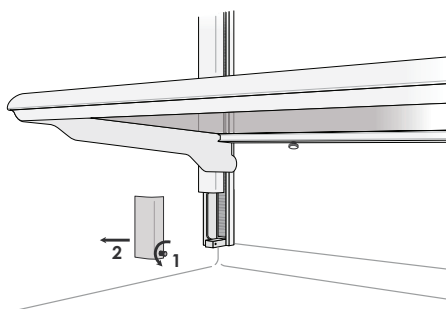

- to remove a shelf it is necessary to first remove the end parts of the guides (unscrew the locking nut), slide it downwards and remove it.

Door Shelves The door shelves can be easily removed for cleaning

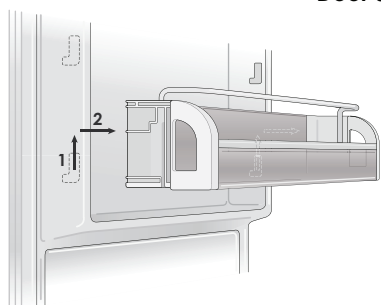

- Hold the door shelf at the sides and push it upwards to release it from its seat, then pull it outwards.
- Reverse the procedure to reinstall



It is normal that some ice cubes stick to one another. If the ice is not frequently used, the older cubes can become opaque, and will have a strange flavour and become smaller.

The Icemaker automatically deactivates if the Holiday function is activated.

When the Icemaker is started for the first time, it is recommended to empty the full ice tray of the first ice cubes.

If the equipment has been switched off for a month or more, it is recommended to perform a water filter cleaning cycle.

To activate the Ice Maker after installation of the appliance, press the Icemaker button .

Please note that from 12 to 24 hours are necessary before ice can be harvested. The production is of 10 cubes per cycle in approximately 10 cycles in 24 hours.

The yield depends on the temperature set in the freezer, the room temperature and the frequency of door opening. If the appliance is operating without being connected to the water system, make sure that the Icemaker is deactivated by pressing the button .

The Ice Maker produces ice until the ice tray is full and will automatically stop once the maximum level is reached.


With the SuperIce function, it is possible to increase the quantity of ice produced a 24 hours, while the Set Cube Size function permits selection of the size of the produced ice cubes.

The Water Filter makes available high-quality water for the production of ice cubes. It provides up to 3000 litres of water for a maximum time of six months.

On the upper right of the command panel it is possible to monitor the use status of the filter: when the entire area is lighted the filter has just been replaced; the white lighted area indicates that the filter capacity is below 20%.

When the filter is nearly expired the message "Replace Filter Cartridge" will appear on the display.

Filter Replacement

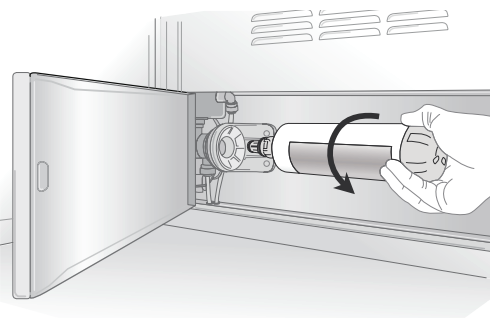

The filter is located inside the refrigerator compartment, near the door hinge, protected by a flap door.

Prior to change the filter switch off the Ice Maker by pressing the IceMaker button. Then enter the Menu Menu and set "Manual Clean" function. At the end of the cleaning cycle remove the water from the ice tray and wipe it dry.


Press the front of the flap door to open it and carefully rotate the filter cartridge for a quarter rotation in a counter clockwise direction until it detaches from its housing.

It is normal for a small quantity of water to come out.

Remove the cap of the new cartridge and insert it into the housing by gently rotating it for a quarter rotation in a clockwise direction until it locks into place.

8 Lighting


8.1 Lighting

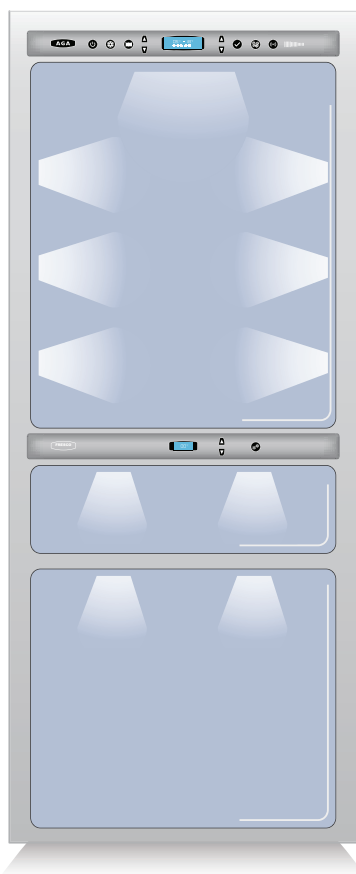

To provide optimum interior lighting, LED strips illuminate the refrigerator compartment from the top and sets of LED lights directly illuminate different areas of the refrigerator compartment, of the Fresco drawers and the freezer drawer.

In case of malfunction and/or breaking down of the lighting system, the repair should be carried out only by an Approved Aga Service Engineer.

General storage advice and tips 9.1

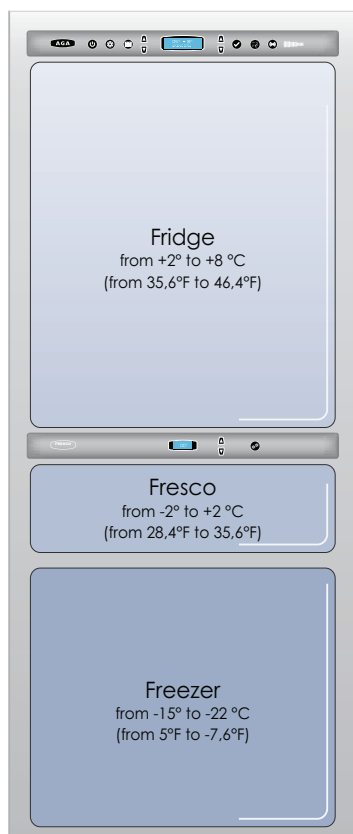

Your Aga refrigerator unit is designed to ensure precise, constant temperatures and appropriate humidity levels in all compartments. In addition, the double refrigeration ensures that frozen foods and ice do not absorb the odour of fresh foods and that the humidity in the refrigerator does not freeze and build up frost.

Nevertheless, to properly conserve all of your foods, it is not enough to have an excellent refrigerator. It is also necessary to know the rules for correct food storage.

Do bear in mind that all foods will inevitably change their characteristics over time. This change begins long before it is consumed, since foods contain micro organisms which multiply and can cause deterioration. This process occurs more rapidly due to inappropriate handling, storage temperatures and humidity levels.

It is therefore recommended to follow the advice and tips below which will permit using your refrigerator/freezer in the most rational and safe manner and keep your foods in the best way for as long as possible.

Please bear in mind that the Fresco area is the area for conserving the most delicate fresh foods, since it ensures constant average temperature below or equal to 0°C (32°F).

Periodically check that all foods remain in good condition. It is usually quite clear when a food item has deteriorated, due to mould, unpleasant odours and its general unpleasant aspect. Nevertheless, there are cases in which these conditions are not so evident. If you believe that a food item was kept for an excessive period of time and may have deteriorated, do not consume this item or even taste it, even if it seems to still be healthy, since the bacteria that cause deterioration of food can also cause poisoning and illness.

When in doubt, throw the food away.

How to maintain good food quality 9.2

When buying groceries

Always take the following precautions:

- Place any packages of raw meat, fish or poultry in plastic bags so that they do not drip on other foods.
- Purchase meat, poultry and fish last. Do not leave your groceries in a warm car after shopping. Keep a freezer bag in your car and use it in case of very high temperatures or long trips.
- Check the production dates and "best before" dates on foods to be sure that they are fresh.
- Be very careful when buying fresh foods, and only buy a quantity that can be consumed in a week.
- Leave warm foods at room temperature for at least two hours before placing them in the refrigerator, unless you have activated the Shopping function before.

When stocking the appliance

Check the refrigeration temperature of the various compartments on the control panel:

- The refrigerator temperature must be 8°C (45°F) or lower and the freezer temperature must be -18°C (0°F)
- Follow the recommendations regarding the storage times and temperatures indicated in the tables to follow.
- Keep raw meat, fish and poultry separate from other foods and avoid any possible drippings.

When stocking the appliance

- When placing in the refrigerator your meat, fish or poultry, leave these in their original packaging, unless the packaging is ripped or punctured. Repeated manipulation could introduce bacteria into these foods.
- To keep food in the freezer it is a good idea to use freezer containers, with plastic freezer bags or aluminium foil around the freezer containers if you intend to conserve the food for more than two months. This will minimize dehydration and quality deterioration
- Label and date the packages
- To keep foods in the refrigerator, wrap these in plastic film or deposit them in plastic containers or vacuum packed containers to avoid drying. Always mark with the date the packages or containers.
- Be careful to correctly position the food items on the shelves in a way that does not obstruct the air circulation vents inside the compartment.

When preparing food

- Wash all items that have come in contact with food
- Carefully wash hands before and after contact with food
- Sterilise containers, utensils and kitchen tools that have come into contact with meat, fish and poultry.
- Sterilise sponges used to wash kitchenware weekly.
- Use plastic gloves if you have a hand condition.
- Defrost foods in the refrigerator or in the microwave oven, not on the countertop. If you use a microwave oven to defrost food, cook the food immediately.
- Marinate food only in the refrigerator.
- Rinse fish and poultry before cooking.
- Avoid contamination when preparing dishes. Keep raw meat, fish, poultry and their liquids away from other food items. For example, do not use the same surface or the same utensils for preparing meat, fish, poultry and vegetables.
- Keep your cutting boards perfectly clean, whether wood or plastic.
- Wash these with soap and warm water, and rinse with a diluted disinfecting solution.

When cooking food

- Do not taste raw or partially cooked meat, poultry, fish and eggs.
- Cook meat at a temperature of 75°C (167°F) or higher. For cuts of meat over 5 cm, use a meat thermometer to check the temperature. For thinner cuts of meat, to check if it is cooked, check the colour of the juice and whether it is clear or pink.
- If you are cooking meat which is not yet defrosted, increase the cooking time one and half times the normal duration.
- Bear in mind that roasted meat and poultry, when cooked in the oven, need temperatures of 160°C (320°F) or higher.
- Cook the egg whites and yolks until they are well done.
- Do not use the same containers that have contained raw or partially cooked eggs.
- If your oven or microwave is equipped with a probe for temperature control, use it.

Storing and using leftovers

- Keep leftovers in the refrigerator or in the freezer in small closed containers. Before placing them in the refrigerator, make sure that they have cooled off. Leave at least two hours after cooking and make sure that there is adequate air circulation around the container, so that the food can cool off quickly.
- Date leftover containers and use them within the recommended time.
- Completely cover and heat leftovers before serving.
- Boil sauces and soups. Consume leftovers after they have been heated to a temperature of at least 75°C (167°F).
- If you think the food is no longer fit for consumption, then dispose of it.

Recommendations for storing fresh food 9.3

**Vegetables**

Wash vegetables in cold water and dry well. Place vegetables in sealed containers, or vegetable bags in the Fresco drawers.

**Fruit**

Wash and dry fresh fruit. Pack very aromatic fruit in plastic bags. Fruit should be placed in the high humidity Fresco compartment.

**Packaged meat**

Place in the refrigerator in its original packaging. After opening, wrap the remaining food in plastic bags or aluminium foil.

**Fresh meat, fish and poultry**

Remove the original packaging, then put in plastic bags or containers and immediately place in the refrigerator.

**Eggs**

Place the eggs in their box in the refrigerator without washing them. Check the "best before" date and use the eggs within two weeks of purchasing.

**Milk, cream and fresh cheeses**

These should be kept in their original sealed packaging. Place these on refrigerator shelves and consume within five days of purchase.

**Cheeses**

Place these in the Fresco drawer in their original packaging. Once opened, store these hermetically in plastic bags or aluminium foil.

Leftovers

Let these cool off and cover hermetically with aluminium foil or place in sealed containers to prevent drying or the spread of odours.

Recommendations for storing frozen food 9.4

**Frozen food**

Place food in plastic bags for the freezer. These bags must be hermetically sealed against air and humidity. Do not refreeze defrosted meat.

**Ice cream**

The firmness of ice cream depends on the quantity of cream that it contains. In general, high-quality ice cream has large amounts of cream, therefore a very low temperature in the freezer will be necessary to maintain its firmness. Unfirm ice cream is not necessarily an indication of a temperature problem.



After a prolonged interruption of electrical power, once the electrical power is reactivated, a sound signal indicates that the temperature has raised above normal levels. In addition to this the display will visualise for one minute the highest temperature detected inside the compartments, to allow the user to decide how to better use the food items.

After one minute the display will resume normal operation, while the Alarm button (🔊) will continue to blink.

Press the Alarm button (🔊) to visualise again the highest recorded temperatures.

10 Recommended times for food storage

Fresh foods	Storage area	Time
Raw meats		
Large cuts	Fresco Compartment	4 days
Beef steaks, poultry and wild game	Fresco Compartment	3 days
Minced meat	Fresco Compartment	1-2 days
Carpaccio	Fresco Compartment	Immediately
Cooked meat		
Boiled meat and roasted meat	Refrigerator Compartment	2 days
Meat sauce	Refrigerator Compartment	6 days
Fish		
Raw and cooked fish	Fresco Compartment	2 days
Other		
Soups and broths	Refrigerator Compartment	2 days
Pasta	Refrigerator Compartment	2 days
Opened cold cuts	Fresco Compartment	3 days
Fresh cheeses	Fresco Compartment	2-3 days
Well sealed aged cheeses	Refrigerator Compartment	Several months
Eggs (fresh and unwashed)	Refrigerator Compartment	2 weeks
Opened cans	Refrigerator Compartment	2-3 days
Raw vegetables (in perforated bags)	Fresco Compartment	1 week
Frozen foods	Storage area	Time
Beef, veal, lamb and goat meat	Freezer Compartment	(steaks) 6-12 months
Beef, veal, lamb and goat meat	Freezer Compartment	(Meat with bone) 4-6 months
Minced beef	Freezer Compartment	1-2 months
Pork	Freezer Compartment	(Without bones) 4-6 months
Pork	Freezer Compartment	(With bones) 2-3 months
Minced pork	Freezer Compartment	1-2 months
Meat leftovers	Freezer Compartment	2-3 months
Whole chicken and turkey	Freezer Compartment	8-12 months
Goose, duck and pheasant	Freezer Compartment	4-8 months
Fish	Freezer Compartment	1-2 months
Shellfish	Freezer Compartment	2-3 months
Cooked food	Freezer Compartment	1-2 months
Vegetables	Freezer Compartment	8-12 months
Fruit	Freezer Compartment	6-12 months
Desserts and cakes	Freezer Compartment	2-3 months





Carefully follow the detailed directions that can be found in the provided kit and never use abrasive or metallic products which could scratch and permanently damage the painted parts.

Prior to carry out any cleaning operation turn off the unit.

To clean the stainless steel parts use e-cloth and the sponge provided in the kit with this appliance.

Do not use the sponges on aluminium parts, for example, the door handles and the glass shelves trims.

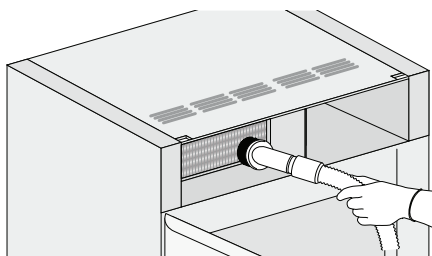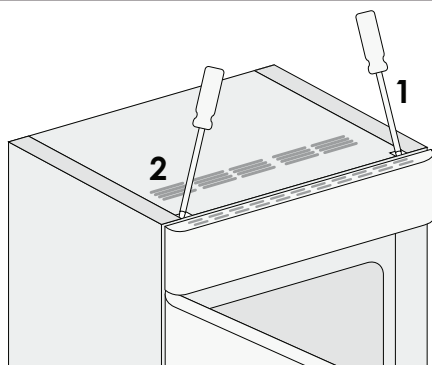

The condenser fins are sharp, therefore use adequate protection for the hands and arms when cleaning the condenser.

Cleaning the condenser is not normally necessary in a home environment. If it should become necessary, switch off the appliance by pressing the Unit button  on the main command panel for approximately 3 seconds.

In models with ventilation at the base, remove the protection grille on the base of the appliance after having unscrewed the mounting screws. In models with ventilation in the upper part of the appliance, remove the protection grille mounted with pressure hooks by pulling it outward.

In some cases you may need to free the grille from the hooks by prising it off from the top as illustrated. Use a flat blade screwdriver, and to avoid damages or scratches to the grille, wrap some protective tape around the tool's end.

Wait approximately 30 minutes until the condenser has reached room temperature. Remove the upper or lower front ventilation grill (depending on the model) and use a soft brush or vacuum cleaner to remove any dust deposits as illustrated, being careful not to cause damage.

Take care to also clean the filter which is located behind the front ventilation grille.



Do not use water on the electrical parts, lights and control panel.



Do not bring cold glass parts into contact with boiling water.

Do not wash any parts of the refrigerator in a dishwashing machine since this could damage or irreparably deform the parts.

Clean the internal and removable parts by washing them with a solution of tepid water, a small amount of dishwashing detergent and a pinch of baking soda.

Rinse and dry right away.

It is highly recommended not to use mechanical devices or other means to speed up the defrosting process.

12.1 Troubleshooting Guide

If you notice malfunctions in your appliance, use this guide before calling for service: this guide can help you personally resolve the problem or could provide important information to be conveyed to the service technician to ensure rapid and effective repair.

"Call Service" message

A malfunction is usually indicated by a message on the display. Problems that cannot be solved by the user are signaled through a malfunction code and the message "Call Service".

The refrigerator or the freezer does not work

Is the appliance connected to the electrical power supply?
Is electrical power available at the electricity socket?
Is the on/off button  activated?

The refrigerator or the freezer is warmer than usual

Does the display show a malfunction code?
Is the temperature adjusted correctly?
Were the doors or drawers open for a long period of time?
Were large quantities of food recently inserted?

The appliance remains in function for a long time period

Bear in mind that during very hot weather and with very high temperatures in the room it is normal that the compressor remains on for prolonged periods of time.
Were the doors or drawers open for a long period of time?
Were large quantities of food recently inserted?
Check that the doors are closed and that the food or containers do not obstruct the perfect closure of the door.

If you hear unusual noises

It is normal to hear noises from the ventilators or compressors during operation or during the defrost phase.
Noise could be more marked depending on the position of the appliance and the surrounding environment.

Condensation inside and outside of the refrigerator

If the climate is very humid, the formation of condensation is normal. Opening the door or drawers for prolonged periods of time can contribute to the formation of condensation.
In any case, make sure that the doors are always perfectly closed.

Ice or frost build up inside the refrigerator or freezer

Did you leave the doors open for a long period of time?
Do the doors close perfectly?
If the doors do not close perfectly, contact your installer.
In case of frost or ice build up in the Fresco compartment, due to frequent and prolonged opening of the doors, deactivate the Fresco function for a while via the button on the control panel. Wait until the frost or ice melts, then remove the drawer and dry the sides and bottom of the compartment.

Unpleasant odours inside the refrigerator

Clean the appliance completely according to the instructions.
Hermetically cover all the food. Do not conserve food for prolonged periods of time.

The doors are difficult to open

The appliance is designed to ensure a fully hermetic closure. When the door is closed, a vacuum condition can occur: in this case it is necessary to wait a few seconds until the pressure balances before opening the door.

The Ice Maker does not work	Make sure that the Ice Maker is on (Icemaker button  on). To switch on the Ice Maker press the button. Make sure that the appliance is connected to the water supply.
The Ice Maker does not produce sufficient amounts of ice	On average, the Ice Maker produces approximately 10 cubes of ice every two hours.
The ice cubes freeze into one block	If the ice is not used frequently, it is possible that blocks of ice may form. It is recommended to remove the block of ice cubes and then let the Ice Maker fill the ice tray again.
The ice has an unusual flavour or colour	When the Ice Maker is started for the first time, it is recommended to empty the first full tray of ice cubes. If the refrigerator was switched off for more than one month or if the cartridge was not changed for more than six months, it could be necessary to replace the filter cartridge. Contact a plumber or a water treatment expert to make sure that the problem is not due to the water supply.

Malfunction indications appearing on the display 12.2

Display message	Malfunction description
Power Failure	Prolonged interruption of electrical power the appliance resumes work automatically, the display shows the warmest temperatures achieved
Fridge door open	Fridge door open the message appears after one minute from the door opening
Freezer door open	Freezer door open the message appears after one minute from the door opening
No water	No water filter not replaced when required or filter status not reset after replacement
Replace filter cartridge	Replace filter cartridge message appears when only 30% of filter capacity is left
Water circuit problem	Water circuit problem water leak or fault to the water system: call Customer Care for advice
Fridge too warm	Fridge too warm see Troubleshooting Guide
Fridge too cold	Fridge too cold wait for 12 hours: if malfunction persists call Customer Care for advice
Fresco too warm	Fresco Compartment too warm see Troubleshooting Guide
Fresco too cold	Fresco Compartment too cold wait for 12 hours: if malfunction persists call Customer Care for advice
Freezer too warm	Freezer too warm see Troubleshooting Guide
Freezer too cold	Freezer too cold wait for 12 hours: if malfunction persists call Customer Care for advice
Error Code... Call service	Functioning problems call Customer Care who may put you in contact with the nearest Aga Service Agent


13 Before calling for assistance

13.1 Before calling for assistance


If our recommendations were not sufficient to solve the problem, please get in touch with our **Contact Centre** for further support on 08458 152 020

Before calling, write down the model type and serial number and any messages which may have appeared on the display.

This information is available on the warranty certificate.

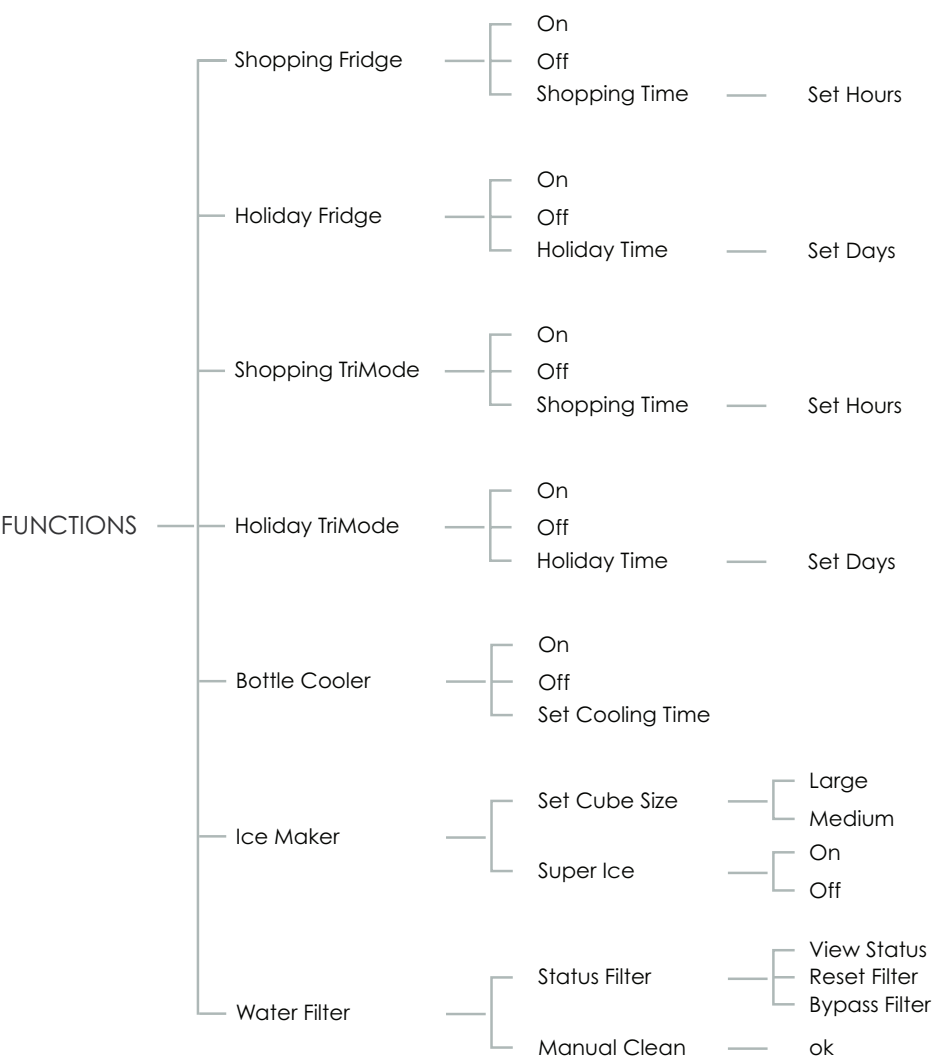

14.2 Setting

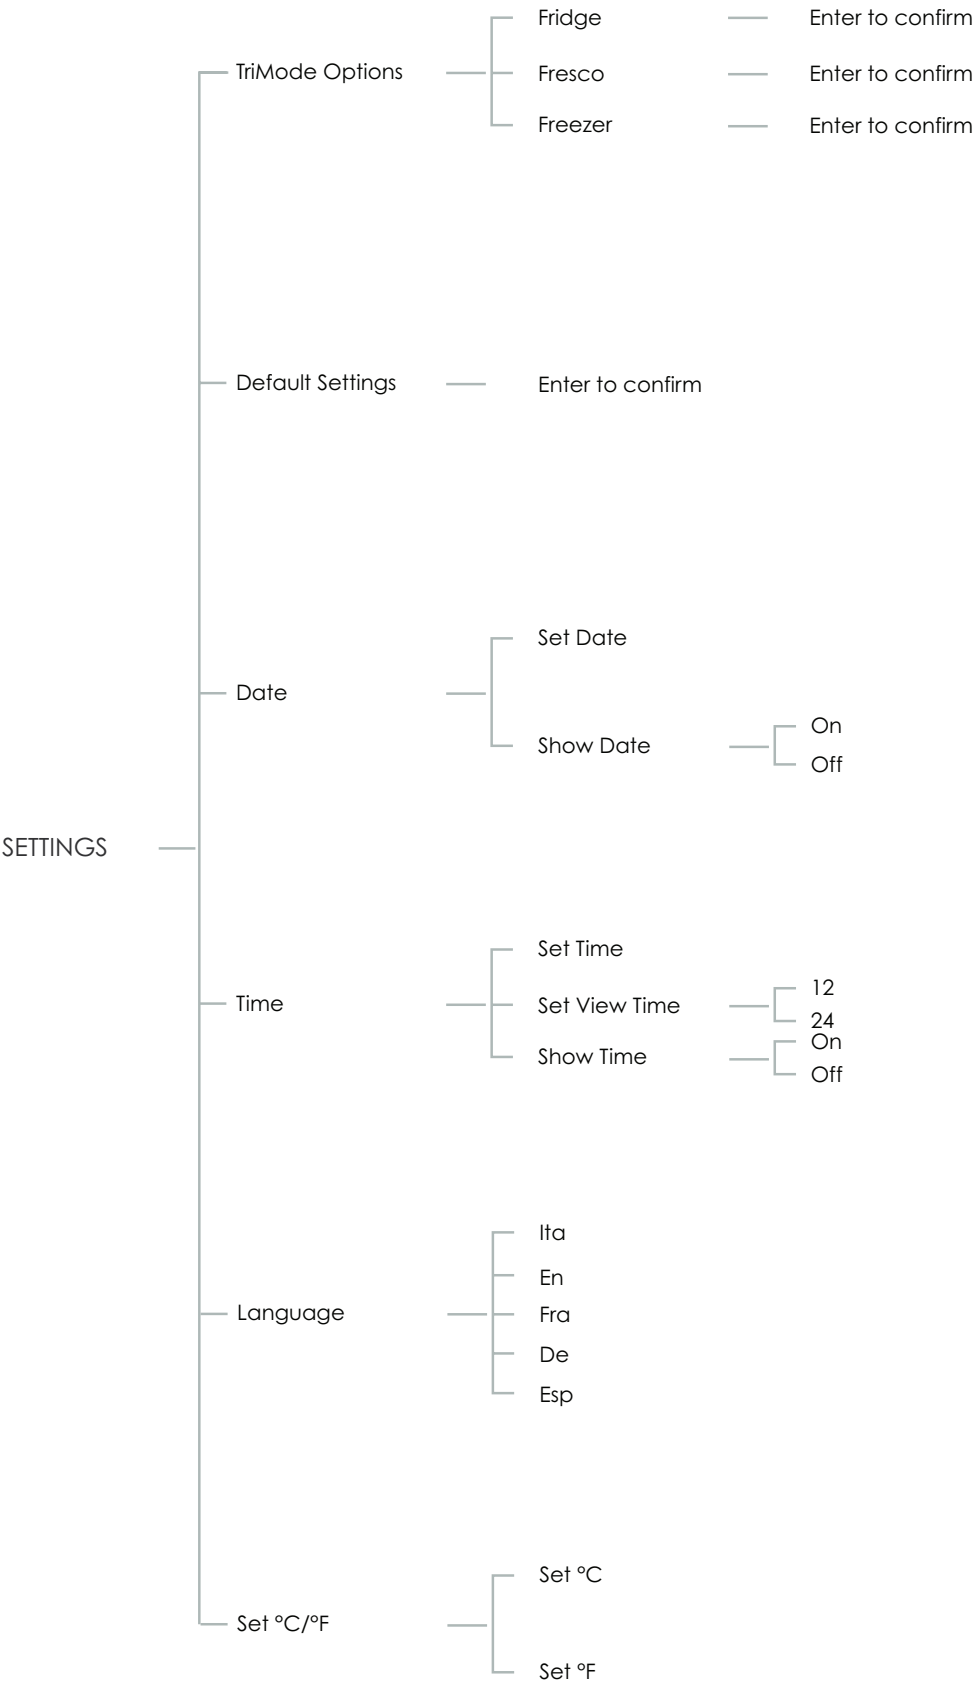

Spares **15.1**

- Replacement Water filter

Starter kit **15.2**

- Water filter and water connection for appliances with Ice Maker
- User Manual and Installation Guide
- Levelling feet
- Aga Badges (Classic and Contemporary)
- Anti tilting device
- Guarantee certificate
- E Cloth and sponge



Contact 0845 815 2020

Station Road, Ketley, Telford, Shropshire, TF1 5AQ England.

www.ag-web.co.uk

Aga is a trading name of Aga Consumer Products Limited, part of the Aga Rangemaster Group plc.
Registered in England & Wales under Registered Number 3872754.
Registered Office Address - 4 Arleston Way, Shirley, Solihull B90 4LH