



WINE CELLAR USER MANUAL

Page	
2	1 Important instructions for safety and the environment
	1.1 For your safety
	1.2 Respect for the environment
3	2 Installation
	2.1 Installation
	2.2 Connection to the electrical mains
4	3 Before starting
	3.1 Getting to know the appliance
	3.2 Main features
	3.3 Main components
	3.4 Electronic Control
	3.5 Main control panel and Riserva panel
7	4 Turning the appliance on and off
	4.1 Turning on and off
	4.2 How to adjust the temperature to suit various needs
	4.3 Information and malfunction signals on the display
9	5 Settings and Special Functions
	5.1 Customization and Language Settings
	5.2 Special functions activated through the Aga Access Menu
	5.3 Basic settings of the Aga Access Menu
14	6 Internal Layout
	6.1 Internal Layout (positioning, adjustment, removal)
15	7 Lighting
	7.1 Lighting
16	8 Use of the TriMode compartment
	8.1 Use of the TriMode compartment
17	9 Conservation of wines
	9.1 General directions
	9.2 Conservation temperature
	9.3 Time of conservation
	9.4 Consumption temperature
	9.5 Position of bottles
20	10 Food Conservation
	10.1 Recommendations for conserving fresh food
	10.2 Recommendations for conserving frozen food
21	11 Recommended times for food conservation
22	12 Care and Cleaning
	12.1 Care and Cleaning
	12.2 Condenser cleaning
	12.3 Internal cleaning
23	13 Troubleshooting guide
	13.1 Troubleshooting guide
	13.2 Malfunction indications appearing on the display
25	14 Prior to calling Service
	14.1 Prior to calling Service
26	15 Menu Map
	15.1 Functions
	15.2 Settings
28	16 Useful Information
	16.1 Spares
	16.2 Starter kit

1 Important instructions for safety and the environment

1.1 For your safety



Notes

Suggestions for proper use of the appliance



Important

Instruction to prevent damage to the appliance



Warning

Instructions for preventing personal injury

- If this Appliance is to replace an existing appliance which in turn is to be removed or disposed of, make sure that it does not become a dangerous trap for children by cutting its power supply cable and making it impossible to close the door. Take the same precautions at the end of the life cycle of the new appliance.
- This appliance is designed to refrigerate beverages and foods and is destined for household use.
- The appliance must be installed in compliance with the instructions in the installation guide. In particular, keep free of obstructions the ventilation openings in the appliance or in the cabinet into which it is inset.
- The appliance is equipped with a concentrated-light illumination system with LED lamps. Do not look into these lamps when they are on to avoid possible eyesight damage. This warning is also contained on the label attached to the inside of the refrigerator door.
- When the freezer is in operation, do not touch the stainless steel inner surfaces with wet or damp hands, since skin may stick to the very cold surfaces.
- Do not use any type of electrical equipment inside of the food conservation compartments.
- When positioning the shelves, do not place fingers in the shelf slide guides.
- Do not position containers of flammable liquids near the appliance.
- Shut the appliance down completely and unplug the power supply cable when cleaning it. If the plug is not easily accessible, it is advisable to turn off the omnipolar switch for the socket where the appliance is plugged in.
- The packaging may be dangerous to children. Do not allow children to play with the plastic bags, plastic film or polystyrene.
- Any repairs must be performed by a qualified technician.
- This appliance is not intended by persons with limited physical, sensorial or mental ability, including children, or who do not have proper experience and knowledge, unless they are supervised or instructed on the use of the appliance by a person who is responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.


1.2 Respect for the environment



- Make sure you dispose properly of all packing materials.
- The appliance must not be disposed of with urban waste. Contact local waste disposal authorities for information on the disposal of recyclable waste.
- For disposal, cut the power supply cord and make it impossible to close the door.
- During disposal, avoid damage to the refrigeration circuit.
- Neither the refrigeration circuit nor the insulation contain substances that are hazardous to the ozone layer

Make sure that installation is performed correctly, adhering to all of the instructions in the specific installation guide provided with the appliance.

Connection to the electrical mains 2.2

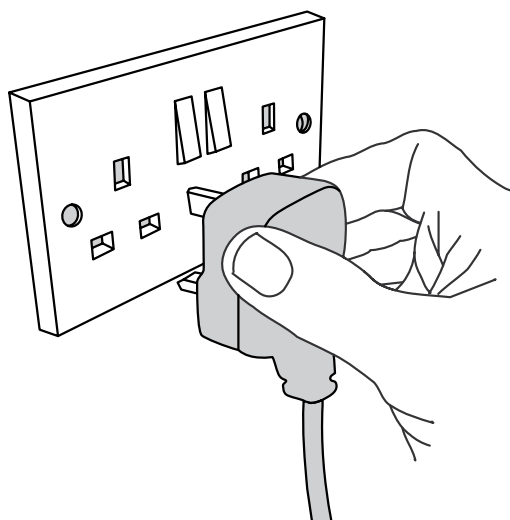

The appliance is equipped with a 13 Amp UK plug. It must be connected to the electrical mains by means of a corresponding UK socket.


Do not use extension cords and/or multiple adapters for connection.



Do not use extension cords and/or multiple adapters for connection.

3 Before starting

3.1 Know your appliance

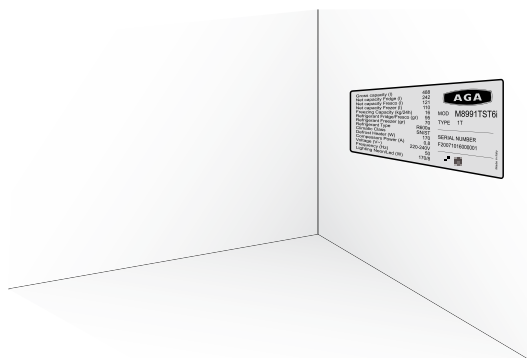

Congratulations for having purchased your new Aga Refrigeration Unit. You can now use our innovative conservation system, which will allow you to keep all of your food in the best way possible.


This manual will answer most of your questions about the product's features. Should you require further information, please call our Customer Service Team on 0845 602 3015 or consult our website:

www.aga-web.co.uk.com

Before calling, write down the model type and serial number which are available on the warranty certificate and on the rating plate located on the inside the refrigerator compartment (behind the water filter flap door on models provided with Ice Maker) and any messages which may have appeared on the display.

3.2 Main features

- Exclusive design by Aga
- The Aga triple refrigeration system and the separation of internal compartments ensure perfect conditions for conservation of various types of wines
- The electronic control guarantees constant temperature and humidity levels set by the user
- The double compressor allows separate management of the set temperature and humidity for the Riserva, Cantina and TriMode compartments
- The TriMode compartment may operate in three different modes:
as a freezer, as a refrigerator or as a cooler compartment
- Free-standing or built-in installation
- An interactive menu permits personalised management of appliance functions and the display of messages on operation
- Optimisation of consumption during vacation periods
- Surfaces in stainless steel both inside and outside, with fine aluminium trim
- Patented hinge system that permits automatic door closing
- TriMode drawers with Soft self-closing system
- Localised lighting system with LED and neon lights
- Anti-tipping system with brackets for wall mounting.

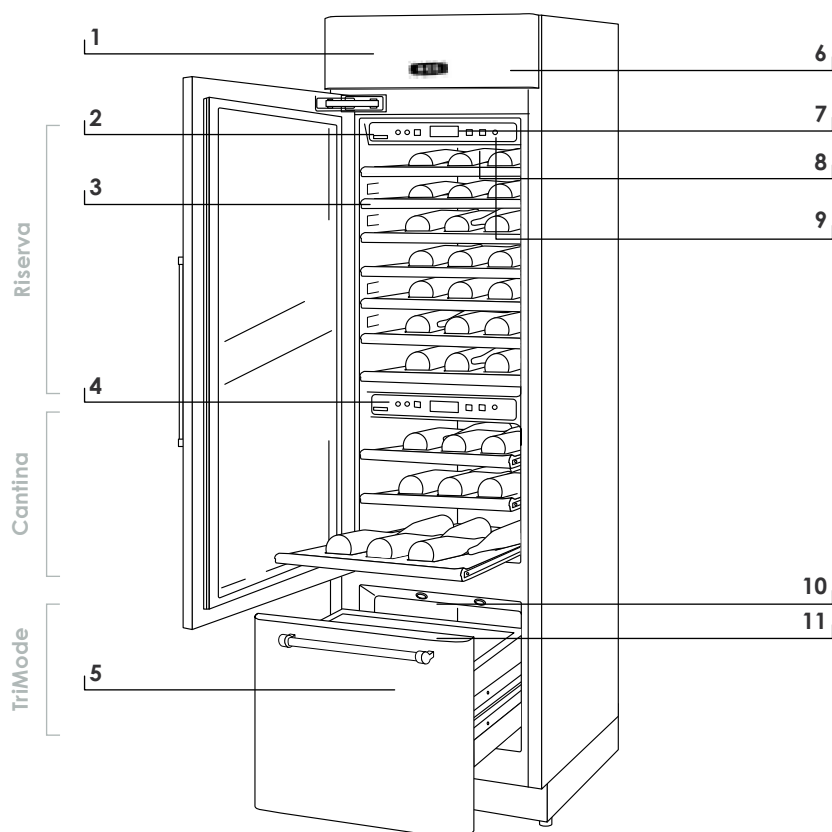

Wine Cellar

- 1 Aga colour finish
- 2 Cantina and TriMode control panels
- 3 Sliding bottle shelves, mounted on wheels for easy extraction
- 4 Riserva area control panel
- 5 TriMode drawer, may be used as freezer, refrigerator or cooler
- 6 Double refrigeration system
- 7 Temperature display
- 8 Acoustic signals
- 9 Vacation function (in Menu)
- 10 Innovative lighting
- 11 Automatic door and drawer closure

3 Before starting

3.4 Electronic Control

The innovative system of electronic control designed by Aga keeps a constant temperature in the three compartments and displays it on the control panel. It also lets the user interact with the control system through personalised setting of the various function and by sending sound and/or visual signals should there be any operating anomalies with the appliance.

3.5 Main control panel and Riserva control

									
	1	2	3	4	5	6	7	8	9
1		On/Off		Allows complete shutdown and start-up of the appliance (press for three seconds).					
2		Cantina		Lets you turn only the Cantina compartment on or off (press for three seconds).					
3		Menu		Allows access to the appliance functions menu					
4		Up/down Cantina		Using the Up and Down keys, you can change the set temperature of the Cantina compartment and scroll through the interactive menu.					
5		Display		Displays the temperature of the Cantina and TriMode compartments, the date and time, Menu functions and visual messages.					
6		Up/Down (TriMode)		By touching the Up/Down keys, you can vary the preset temperature according to the selections for use of the TriMode compartment (freezer, refrigerator or cooler).					
7		Enter		Allows confirmation of selections made using Menu.					
8		Alarm		Blinks to signal possible malfunctioning, also through an acoustic signal which can be deactivated by pressing the key.					
9		Light		Allows illumination of the Cantina and Riserva compartments also when the door is closed					

				
	10	11	12	13
10		Display		Visualises the temperature of the Riserva compartment.
11		Up/Down Riserva		Using the Up and Down keys, you can change the set temperature for the Riserva compartment.
12		Riserva		Lets you turn only the Cantina compartment on or off (press for three seconds).
13		Humidity		Allows adjustment of humidity in the Cantina and Riserva compartments to three levels: High (HI), Medium (A) and Low (LO).

First start-up

When the appliance is connected to the electrical power supply but has not yet been turned on, the display shows the message

Stand by

(safety message to warn that power is supplied to the appliance), while all of the keys on the panel are off.

To turn on all of the appliance compartments, press the Unit button  for three seconds.

Keep in mind that each time the appliance is turned on, it runs a self-diagnosis procedure of three minutes, and then starts up fully.

Turning off the Wine Cellar compartment

Once you have turned on all of the compartments of the appliance, you can turn off only the wine cellar compartment by pressing the relevant key for three seconds.

The TriMode compartment is always on and cannot be turned off except by completely turning off the appliance.

Turning the Wine Cellar compartment on again

Press again for three seconds the relevant key.

Complete shutdown

To shut down the unit completely for cleaning or maintenance, press the Unit key  for three seconds.

Also take the plug out of the socket and turn off the omnipolar switch that powers it.

Lengthy shutdown periods

After you have completely shut down the appliance and unplugged it, empty it of all its contents empty the appliance of all its contents, clean it and dry it. Leave the doors and the drawers ajar to prevent the formation of unpleasant odours.



To prevent accidental modification of settings, the keypad locks automatically after a certain period of time and the display shows the message "keypad locked".

To re-activate it, simultaneously press the keys Menu and Up/Down (Down) for three seconds.

At the first start-up, if the message Standby does not appear, it means that the appliance has already started the cooling process.

If this is the case, deactivate any possible acoustic signals by pressing the Alarm key , close the door and wait until the set temperature is reached.

During the first start-up, you will not be able to use the Menu to modify factory settings until the default temperature has been reached.

It is however possible to set the time and date immediately; these parameters are required to activate some of the special functions.

If only the Riserva or Cantina compartment is turned off, the corresponding fan will continue to run independently to prevent the formation of unpleasant odours and mould.

4 Turning the appliance on and off

4.2 How to adjust the temperature for suit various needs

To adjust the temperature in the various compartments, use the up/down key  for that compartment (see chapter 3.5). If the "keypad locked" message appear, simultaneously press the keys Menu  and Up/Down (Down)  for 3 seconds.

Wines compartment

Each model has been carefully tested before leaving the factory and is adjusted so as to ensure high performance and low consumption. The ideal temperature for wine conservation does however depend on the types of wine you want to conserve, the method of conservation (Cantina for conservation and consumption, or Riserva for the conservation and aging of prized bottles). It also varies according to personal taste. Please refer to the guide on wine conservation included further ahead in this manual.

As needed, you can reset the temperatures as follows:

- Riserva Compartment:
from +4° C to +18° C (from 39.2° F to 53.6° F).
The default temperature is +12° C (53.6° F).
- Cantina compartment:
from +4° C to +18° C (from 39.2° F to 53.6° F).
The default temperature is +10° C (50° F).

TriMode compartment

The TriMode compartment is default set to freezer mode but it can also be set to run as a refrigerator or cooler compartment. Instructions for conversion are provided in the paragraph on special functions and settings.

As needed, you can reset the temperatures as follows:

- Freezer compartment: from -15° C to -22° C (from 5° F to -7.6° F).
The default temperature, which is recommended, is -18° (0° F)
- Refrigerator compartment: from +2° C to +8° C (from 35.6° F to 46.4° F).
The default temperature, which is recommended, is +5° C (41° F).
- Cooler compartment: from -2° C to +2° C (from 28.4° F to 35.6° F).
The default temperature, which is recommended, is 0° C (32° F).



The displayed temperature may vary slightly with respect to the set temperature if the doors are continuously opened or insertion of room temperature food or large quantities of food.

It takes 6 to 12 hours to reach the selected temperature.

4.3 Information and malfunction signals on the display

An integrated control system provides information through luminous signals or text messages shown on the display. The information signal is always displayed with a steady text message, while a malfunction signal is shown with blinking text. The acoustic signal that accompanies some malfunction signals can be deactivated by pressing the Alarm key  on the main control panel. The list of malfunction signals is located in the back of this manual.



To prevent accidental modification of settings, the keypad locks automatically after a certain period of time and the display shows the message "keypad locked".

To re-activate it, simultaneously press the keys Menu  and Up/Down (Down)  for at least three seconds.

It is possible to customised the functions of your Aga Wine Cellar to adapt it to diverse usage needs, resetting the main parameters (Settings) or activating special functions (Functions).

Functions are visualised on the main display by pressing the Menu button .

The Up/Down buttons  permit scrolling the available functions, which can be selected by pressing the Enter button . The display visualises the current functioning status.

Using the Up/Down buttons , it is also possible to scroll through the selected function, activating or deactivating by pressing the Enter button .

Once the function is confirmed, the display will automatically visualise the main menu to select other functions.

At any time it is possible to return to the previous selection through the Menu button .

The language of the messages appearing on the display can be changed by operating as follows:

Enter the Menu by pressing the Menu button  select Settings via the Up/Down buttons  and confirm via Enter . Then select the Language function and the desired language.

Special functions activated through the Menu 5.2

To use special functions, select the Menu key  and use the Up/Down key  to access the menu, confirming the selection Functions.

Dual Zone

This function can be activated only on models featuring a wine cellar without internal separator. It allows to differentiate the temperature in the upper part of the cellar (warmer and therefore better suited to keep red wines) from the temperature in the lower part (colder and therefore better suited to keep white wines).

Functions →  →  Dual Zone →  →  On → 

Functions →  →  Dual Zone →  →  Off → 

Shopping Fridge

This function must be activated at least 24 hours before inserting room temperature items into the freezer, or several hours before placing into the freezer previously frozen items which have been subject to a slight temperature rise. This function is automatically deactivated when the programmed time period expires. It is possible o program timed activation of the function. After a prolonged interruption of the electrical power, it is necessary to reactivate the function.

How to activate Functions →  →  Shopping TriMode →  →  On → 

How to deactivate Functions →  →  Shopping TriMode →  →  Off → 

How to programme timed activation Functions →  →  Shopping TriMode →  → 

Shopping Time →  Set hours → 

It is possible to program the function with a delay of 1 to 12 hours.

5 Settings and Special Functions

Vacation TriMode This function (recommended in case of prolonged absences since it allows considerable energy savings) brings the Tri-Mode compartment temperature to -18°C (46.4°F). It is possible to program the duration, or it can be manually deactivated upon re-entry after a period of absence. This function remains active even if during the period of absence there is a prolonged interruption of electrical power.

How to activate Functions → ✓ →   Vacation TriMode → ✓ →  
On → ✓

How to deactivate upon re-entry Functions → ✓ →   Vacation TriMode → ✓ →  
Off → ✓

How to program the duration Functions → ✓ →   Vacation TriMode → ✓ →  
Vacation Time → ✓ Set Days → ✓
It is possible to program a period from 1 to 90 days.

Bottle Cooler This function can be activated when it is necessary to cool off beverages quickly, by placing them inside the freezer compartment. It is possible to select a duration of 1 to 45 minutes. A sound signal will indicated when the optimal temperature has been reached. After removing the beverages, deactivate the sound signal by pressing the Alarm button .

How to activate Functions → ✓ →   Bottle Cooler → ✓ →  
On → ✓

How to deactivate Functions → ✓ →   Bottle Cooler → ✓ →  
Off → ✓

How to program the duration Functions → ✓ →   Bottle Cooler → ✓ →  
Set Cooling Time → ✓

Air Filter The View Status function permits visualising the exact quantity of filtered air in liters and the time left before the filter needs to be replaced. The Reset Filter function sets to zero the quantity of air filtered and the time left before the filter needs to be replaced. It is necessary to set the meter to zero each time the cartridge is replaced.

How to check the status of the filter Functions → ✓ →  Air Filter → ✓ →  View Status → ✓

How to set the filtered water meter to zero Functions → ✓ →  Air Filter → ✓ → 
Reset Air Filter → ✓ Enter to Confirm → ✓

5 Settings and Special Functions

5.3 Basic settings of the Menu

Select the Menu button  and used the Up/Down button  to select Settings.

TriMode Options The freezer compartment can, if required, be converted to the refrigeration or Fresco operating mode.

How to set the Fridge function Settings →  →  Tri-Mode Option →  →  Fridge → 
Enter to Confirm Fridge → 

How to set the Fresco function Settings →  →  Tri-Mode Option →  →  Fresco → 
Enter to Confirm Fresco → 

How to revert to the Freezer function Settings →  →  Tri-Mode Option →  →  Freezer → 
Enter to Confirm Freezer → 

Default Setting This offers the possibility to reset default factory settings and cancels any previous changes.

How to reset default settings Settings →  →  Default Settings →  Enter to Confirm → 

Date

Set Date The display will visualise the date in the format dd:mm:yy (day:month:year), the day will blink. Use the Up/Down buttons  to modify the setting, confirm with Enter  to go on to the next setting; once the year is confirmed the date will be set.

How to set the date Settings →  →  Date →  →  Set Date → 

Show Date Using this function it is possible to deactivate/activate the date visualisation on the display.

How to activate the date Settings →  →  Date →  →  Show Date →  → 
On → 

How to deactivate the date Settings →  →  Date →  →  Show Date →  → 
Off → 

Time

Set Time The display visualises the hours and minutes in the format hh:mm and with hh: blinking. Use the Up/Down buttons  to modify the setting and then confirm by pressing Enter  to go on to the next setting. Once the minutes are confirmed, the time will be set.

How to set the time Settings →  →  Time →  →  Set Time → 

Set 12/24 This function selects the display at 12 or 24 h

How to set the display to 12 h Settings → ✓ →  Time → ✓ →  Set View 12/24
→ ✓ →  12 → ✓

How to set the display to 24 h Settings → ✓ →  Time → ✓ →  Set View 12/24
→ ✓ →  24 → ✓

Show Time Through this function it is possible to activate/deactivate the constant visualisation of the time.

How to activate the permanent time Settings → ✓ →  Time → ✓ →  Show Time → ✓ → 
On → ✓

How to deactivate Settings → ✓ →  Time → ✓ →  Show Time → ✓ → 
Off → ✓

Language The function allows selection of the language for the display messages

Italian Settings → ✓ →  Language → ✓ →  Ita → ✓

English Settings → ✓ →  Language → ✓ →  En → ✓

French Settings → ✓ →  Language → ✓ →  Fra → ✓

German Settings → ✓ →  Language → ✓ →  De → ✓

Spanish Settings → ✓ →  Language → ✓ →  Esp → ✓

Set C°/F° This function permits visualising the temperature in Centigrade or Fahrenheit degrees. Normally, the appliance is set for visualisation in centigrade degrees.

How to set the temperature in Centigrade Settings → ✓ →  Set °C/°F → ✓ →  Set °C → ✓


How to set the temperature in Fahrenheit Settings → ✓ →  Set °C/°F → ✓ →  Set °F → ✓

6 Internal Layout

6.1 Internal Layout (positioning, adjustment, removal)


Wine shelf

The shelves can be easily removed for cleaning. Remove the bottles, completely extract the shelf, tilt it upward until the wheels are free of their seat and extract it.

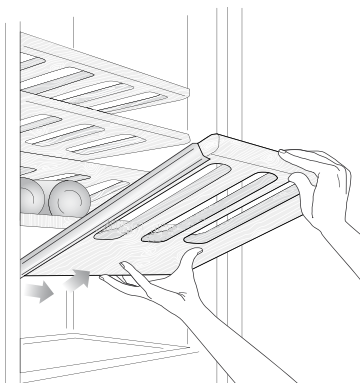


TriMode drawer

Located in the upper drawer of the freezer compartment

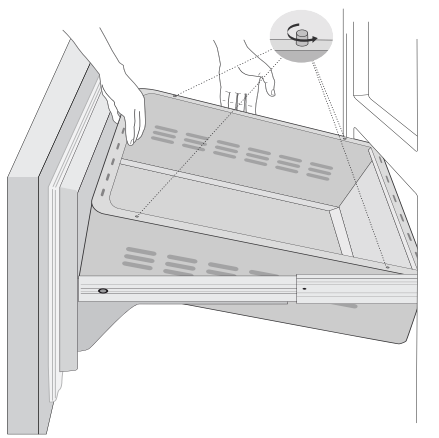

- after removal, make sure to reposition it correctly.

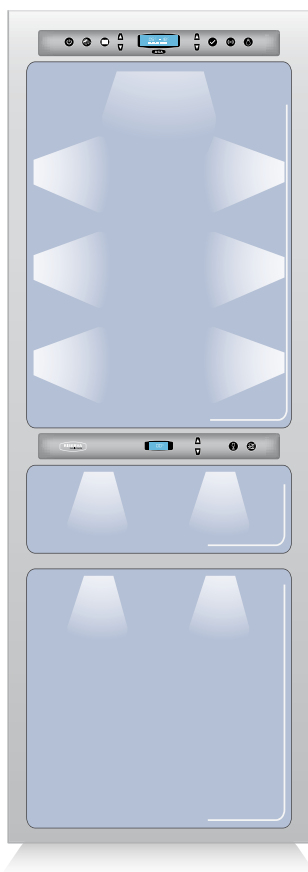

To provide optimum interior lighting, two different modes are available: a neon system that illuminates the refrigerator compartment from the top and a LED which directly illuminates different areas of the refrigerator compartment, the Cooler drawers and the Freezer drawer. On some models, there is an external night light system located at the base of the appliance.

In case of malfunction and/or failure of the lighting system, you should contact an authorized Aga Service Agent.

8 Use of the TriMode compartment

8.1 Use of the TriMode compartment

The TriMode compartment, used in conjunction with the Cantina and Riserva compartment, allows great flexibility in the use of the appliance.

Some possible uses:

- Freezer mode**
 - Spirits, such as vodka, gin, tequila, schnapps, limoncello and the glasses to serve them
 - Rapid cooling of beverages, by activating the bottle cooler function
 - Storage of large amounts of ice.
- Refrigerator mode**
 - As expansion of the Cantina or of the Riserva
 - For refrigeration of beer and soft drinks
 - For storage of cold dishes and snacks.
- Cooler mode**
 - For conservation of ham, salmon
 - gourmet preparations.

It comes without saying that, the compartment can be used in a traditional manner. Suggestions and instructions are provided to offer you best conservation of your food over time in complete safety.

As is known, wine can be stored for long periods of time if this is done under the following conditions:

- Suitable temperature without appreciable variations over time
- Controlled level of humidity
- Protection from light
- Absence of noise and vibrations
- Absence of odours
- Bottle kept horizontal.

All of these conditions are fully met in the Aga Wine Cellar.



Models with Riserva and Cantina



Models with Cantina

The space offered by the Cantina and Riserva compartments, which can be expanded as necessary by using the TriMode compartment as a wine cellar, allows conservation at three different temperatures of your best wines.

The three compartments are initially set to the following temperatures:

- **Riserva compartment**
+12° C (53.6° F) - adjustable from +8° C to +18° C (from 46.4° F to 53.6° F)
- **Cantina compartment**
+10° C (50° F) - adjustable from +4° C to +18° C (from 39.2° F to 53.6° F)
- **TriMode drawer**
-18° (0° F) - adjustable from -15° C to -22° C (from 5° F to -7.6° F) (freezer mode)

To transform the TriMode compartment into a wine cellar space, you must access the menu, set it as a refrigerator compartment, and adjust it to a temperature between +4° C and +8° C (from 39.2° F to 46.4° F).

All of the temperatures can be modified according to the characteristics of the wines and personal preferences. However, you should attempt to keep the temperature as constant as possible over time.

Rapid and large-scale temperature variations can in fact cause dilation of the liquid and early aging of the wine.

You should also avoid very low temperatures (below 4° C - 39.2° F) which may lead to the formation of deposits and damage the aesthetic qualities of the wine.

All of the compartments offer optimal conditions and take into account all of these needs. It should however be noted that the Riserva compartment, in particular, is thermostatically controlled in a very precise manner and ensures the utmost care and attention over time of your most prized bottles.

9 Conservation of wines

9.3 Time of conservation

Improvement of wine over time and its duration usually depends on the character of the variety and its type.

The following chart shows the best period of conservation and aging for various types in ideal conservation conditions offered by your appliance.

However, you should always follow the instructions of the manufacturer, especially for fine wines.

TYPE OF WINE	CONSERVATION TEMPERATURE	TIME OF CONSERVATION
New wines (Vin Nouveau)	from 12° to 14° C	6 months
Sweet sparkling wines	from 8° to 10° C	1 year
Rosé	from 10° to 14° C	1 year
Semi-sparkling wines	from 10° to 12° C	1 - 2 years
Normal white wines	from 10° to 14° C	1 - 2 years
Light red wines	from 12° to 14° C	2 years
Dry sparkling wines	from 8° to 10° C	2 years
Classic sparkling wines	from 8° to 10° C	3 - 4 years
Barrique and Vigorous white wines	from 8° to 12° C	3 - 5 years
Normal red wines	from 14° to 16° C	3 - 5 years
Barrique and Vigorous red wines	from 14° to 18° C	7 - 10 years
Straw wines or Liqueurous wines	from 16° to 18° C	10 - 15 years

9.4 Consumption temperature

As a general rule, white wines should be served at a temperature between 10 and 12° C and red wines between 12 and 14° C. Some wines may however be best enjoyed at higher or lower temperatures.

You should also keep in mind that, during the summer, wine is generally enjoyed at lower temperatures than during the winter.

You should also consider the following:

White wines

White wines are normally not served at high temperatures, since they are generally more acidic than red wines and not very tannic. Therefore they are more enjoyable at low temperatures.

It is preferable to serve these wines between 10° C and 14° C. Young, fresh and aromatic wines can also be served at 10° C, while less aromatic ones are served at 12° C.

Temperatures between 12° C and 14° C are for soft, mature white wines that have been aged for some years in the bottle.

Higher temperatures would favour the exaltation of the sweet character of the wine, at the expense of the acidity and flavour, which are considered pleasant and desirable characteristics of this type of wine.

Rosé

Rosé wine is served at the same temperature as white wines. It should be noted that these wines may include a certain amount of tannin and may therefore be preferable at higher temperatures. Therefore, they are served between 10° C and 12° C, if young and fresh, and between 12° C and 14° C if robust and mature.

New wines (Vin Nouveau)

Due to the special processing they undergo, new vintage wines contain a low tannin content and are therefore more enjoyable if served between 12° C and 14° C.

Red wines

Since they contain more tannin and are less acidic, red wines are normally served at higher temperatures. Younger wines with less tannin are normally served between 14° C and 16° C, while more full-bodied ones that are more tannic may be served at up to 18° C. Some wines that have aged for years in the bottle, still full-bodied and tannic, may be served at 18° C or even 20° C. Young red wines with little tannin and slightly structured may be enjoyable at lower temperatures, between 12° C and 14° C.

Sparkling wines


It is difficult to provide instructions to cover the wide variety of sparkling wines in existence. As a general rule, sweeter and more aromatic sparkling wines should be served at lower temperatures, down to 8° C, whereas more tannic sparkling wines may be served at higher temperatures, up to 14° C. Dry sparkling wines are usually served between 8° C and 10° C. "Classic" sparkling wines are normally served at these temperatures, which may be as high as 12° C for sparkling wines that have been aged for some time. It is however advisable, especially for finer wines, to follow the suggestions and recommendations of the manufacturer on the bottle.

Liqueur and straw wines

These types of wines can be served at temperatures between 16° C and 18° C, depending on personal tastes, to attenuate the sweet taste of straw wines, it can also be served at 10° C.

Position of bottles

9.5

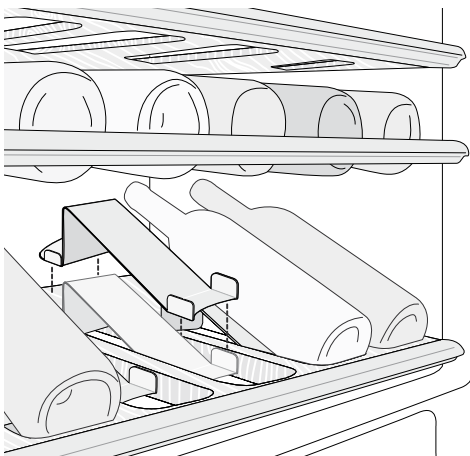

The sliding shelves are made of fine natural wood (solid beech) and contoured so as to hold bottles of the most classical traditional shape or of the most modern design.

To prevent the release of odours or the transfer of non-natural substances to the wine, the wood has not been treated with any sort of paint. This allows the wood to breathe in harmony with the cork of the bottles and to contribute to balancing the humidity in the compartment. It also ensures perfect balance of the temperature in the bottle itself.

Whether your collection holds fine bouteilles or petit bouteilles, they will be right at home in the Aga Wine Cellar. A special accessory, available on request, will let you place them in an inclined position, in order to display the labels of your most prized items.

Also Magnum bouteilles can be stored, provided you remove the shelf just above the one that will hold them.

If the TriMode compartment is also used as a wine cellar, the bottles may be kept in a horizontal position, as long as they do not move or touch one another. A special accessory for this purpose may be provided on request.

10 Food Conservation

10.1 Recommendations for conserving fresh food



Vegetables

Wash vegetables in cold water and dry well. Place vegetables in vacuum packed containers, plastic containers or vegetable bags.



Fruit

Wash and dry fresh fruit. Pack very aromatic fruit in plastic bags. Fruit should be placed in the low humidity Fresco compartment.



Packaged meat

Place in the refrigerator in its original packaging. After opening, wrap the remaining food in plastic bags or aluminum foil.



Fresh meat, fish and poultry

Remove the original packaging, then put in plastic bags or containers and immediately place in the refrigerator.



Eggs

Place the eggs in their package or container into the refrigerator without washing them. Check the "best used within" date and at any rate use the eggs within two weeks of purchasing.



Milk, cream and fresh cheeses

These should be kept in their original closed packaging. Place these on refrigerator shelves and consume these within five days of purchase.



Cheeses

Place these in the refrigerator in their original packaging. Once opened, close these hermetically in plastic bags or aluminum foil.

Leftovers

Let these cool off and cover hermetically with aluminum foil or place in sealed containers to prevent drying or the spread of odors.

10.2 Recommendations for conserving frozen food



Frozen food

Place food in plastic bags for the freezer. These bags must be hermetically sealed against air and humidity. Do not refreeze defrosted meat.



After a prolonged power outage, when the power comes back on, a sound signal will let you know that the temperature is above what is best suited for conservation. These temperatures are shown for one minute on the display. This makes it possible for the user to decide how best to use the conserved foods. After one minute, the displays will start working normally again, while the Alarm key  will continue to flash. Touch the Alarm key  to again view the highest recorded temperatures.

Fresh foods	Conservation area	Time
Raw meats		
Large cuts	Cooler Compartment	4 days
Steaks, poultry and wild game	Cooler Compartment	3 days
Ground meat	Cooler Compartment	1-2 days
Carpaccio	Cooler Compartment	Immediately
Cooked meat		
Boiled meat and roasted meat	Refrigerator Compartment	2 days
Meat sauce	Refrigerator Compartment	6 days
Raw and cooked fish	Cooler Compartment	2 days
Soups and broths	Refrigerator Compartment	2 days
Pasta	Refrigerator Compartment	2 days
Opened cold cuts	Refrigerator Compartment	3 days
Fresh cheeses	Refrigerator Compartment	2-3 days
Well protected aged cheeses	Refrigerator Compartment	Several months
Eggs (fresh and unwashed)	Refrigerator Compartment	15 days
Opened containers	Refrigerator Compartment	2-3 days
Raw vegetables (in perforated bags)	Refrigerator Compartment	3-6 days
Frozen foods	Conservation area	Time
Beef, veal, lamb and goat	Freezer Compartment	(steaks) 6-12 months
Beef, veal, lamb and goat	Freezer Compartment	(Meat with bone) 4-6 months
Ground beef	Freezer Compartment	1-2 months
Pork	Freezer Compartment	(Without bone) 4-6 months
Pork	Freezer Compartment	(With bone) 2-3 months
Ground pork	Freezer Compartment	1-2 months
Meat leftovers	Freezer Compartment	2-3 months
Whole chicken and turkey	Freezer Compartment	8-12 months
Goose, duck and pheasant	Freezer Compartment	4-8 months
Fish	Freezer Compartment	1-2 months
Crustaceans	Freezer Compartment	2-3 months
Cooked foods	Freezer Compartment	1-2 months
Vegetables	Freezer Compartment	8-12 months
Fruit	Freezer Compartment	6-12 months
Desserts and cakes	Freezer Compartment	2-3 months

12 Care and Cleaning

12.1 Care and Cleaning



Scrupulously follow the detailed directions that can be found in the provided kit and never use abrasive or metallic products which could scratch and damage the finishing on the appliance permanently.

Before performing any sort of cleaning, disconnect the appliance from the electrical power supply.


Make sure you do not damage the refrigerant circuit in any way.

To clean the parts in steel use a microfiber cloth and the sponge provided in the kit with the appliance.

Every now and then, to make to steel shiny, wipe with a slightly damp microfiber cloth.

Do not use the sponge on aluminium parts, such as the handles and the profiles of the glass shelves. You should use special care to keep free of obstructions the ventilation openings in the appliance or in the cabinet that houses it.

12.2 Condenser cleaning

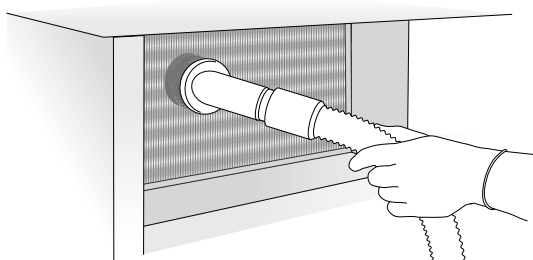

The edges of the condenser are sharp, therefore use adequate protection for the hands and arms when cleaning the condenser.

Cleaning the condenser is not generally necessary in normal conditions of use. If it should become necessary, turn off the appliance by pressing the Unit key  on the main control panel for approximately 3 seconds. In models with ventilation, remove the protection grill on the base of the appliance after having unscrewed the mounting screws. In models with ventilation in the upper part of the appliance, remove the pressure mounted protection grille by pulling it outwards.

Wait approximately 30 minutes until the condenser has reached room temperature. Remove the upper or lower front ventilation grill (depending on the model) and use a soft brush or vacuum cleaner to remove any dust deposits as shown, being careful not to cause damage.

Also clean the filter located behind the front ventilation grill.

12.3 Internal cleaning



Do not use water on the electrical parts, lights and control panel.



Do not bring cold glass parts into contact with boiling water.

Do not wash any parts of the refrigerator in a dishwashing machine since this could damage or irreparably deform the parts.

Clean the internal and removable parts by washing them with a solution of lukewarm water, a small amount of dishwashing detergent and a pinch of baking soda.

Rinse and dry right away.

Do not use mechanical devices or other methods to speed up defrosting.

If you notice malfunctions in your appliance, use this guide before calling Service. This guide may help you resolve the problem yourself or could provide important information to ensure rapid and effective service.

Message "Call Service"	A malfunction is usually indicated on the display. Problems that cannot be resolved by the user are signalled through a malfunction code and the message "Call Service".
The appliance does not work	Is the appliance connected to the electrical power supply? Does electrical power arrive at the electrical socket? Is the Unit key  activated? Is the condenser clean?
The internal temperatures are higher than normal	Does the display show a malfunction code? Is the temperature adjusted correctly? Is the condenser clean? Were the doors or drawers open for a long period of time? Were large quantities of food recently inserted?
The appliance remains in function for a long time period	Bear in mind that during a very hot weather and with very high temperatures in the room it is normal that the compressor remains in operation for prolonged periods of time. Were the doors or drawers open for a long period of time? Were large quantities of food recently inserted? Is the condenser clean? Check that the doors are closed and that the food or containers do not obstruct the perfect closure of the door.
If you hear strange noises	It is normal to hear noise from the fans or compressors during the defrost phase. Noise could be louder depending on the position of the appliance and the surrounding environment.
Condensation forms both inside and out	If the climate is very humid, the formation of condensation is normal. Opening the door or drawers for prolonged periods of time can contribute to the formation of condensation. In any case, make sure that the doors are always perfectly closed.
The Refrigerator or Freezer has frost or ice	Did you leave the doors open for a long period of time? Do the doors close perfectly? If the doors do not close perfectly, contact your installer.
Unpleasant odours inside the refrigerator	Clean the appliance completely as indicated in this manual. Hermetically cover all the food. Do not conserve food for prolonged periods of time.
The doors are difficult to open	The appliance was designed to permit hermetic closure. When the door is closed, a vacuum situation can occur: in this case it is necessary to wait a few seconds until the pressure balances before opening the door.

13 Troubleshooting guide

13.2 Malfunction indications appearing on the display


Display message	Malfunction description
Power Failure	Prolonged interruption of electrical power The appliance starts up again automatically and indicates the highest recorded temperatures
Door open	Door open this message appears one minute after the door has been opened
Drawer open	Drawer open this message appears one minute after the drawer has been opened
Cellar too warm	Cellar (Cantina) compartment too warm See the troubleshooting guide
Cellar too cold	Cellar (Cantina) compartment too cold Wait 12 hours. If the problem persists, contact Customer Care
Riserva too warm	Riserva compartment too warm See the troubleshooting guide
Riserva too cold	Riserva compartment too warm Wait 12 hours. If the problem persists, contact Customer Care
Fridge too warm	TriMode compartment (refrigerator mode) too warm See the troubleshooting guide
Fridge too cold	TriMode compartment (refrigerator mode) too cold Wait 12 hours. If the problem persists, contact Customer Care
Cooler too warm	TriMode compartment (cooler mode) too warm See the troubleshooting guide
Cooler too cold	TriMode compartment (cooler mode) too cold Wait 12 hours. If the problem persists, contact Customer Care
Freezer too warm	TriMode compartment (freezer mode) too warm See the troubleshooting guide
Freezer too cold	TriMode compartment (freezer mode) too cold Wait 12 hours. If the problem persists, contact Customer Care
Error Code... Call service	Failure code contact customer service


If our recommendations were not sufficient to solve the problem, please get in touch with our **Contact Centre** for further support on 08458 152 020

Before calling, write down the model type and serial number and any messages which may have appeared on the display.

This information is available on the warranty certificate and on the rating plate which is located on the inside the refrigerator compartment (behind the water filter flap door on models provided with Ice Maker).

15.1 Functions

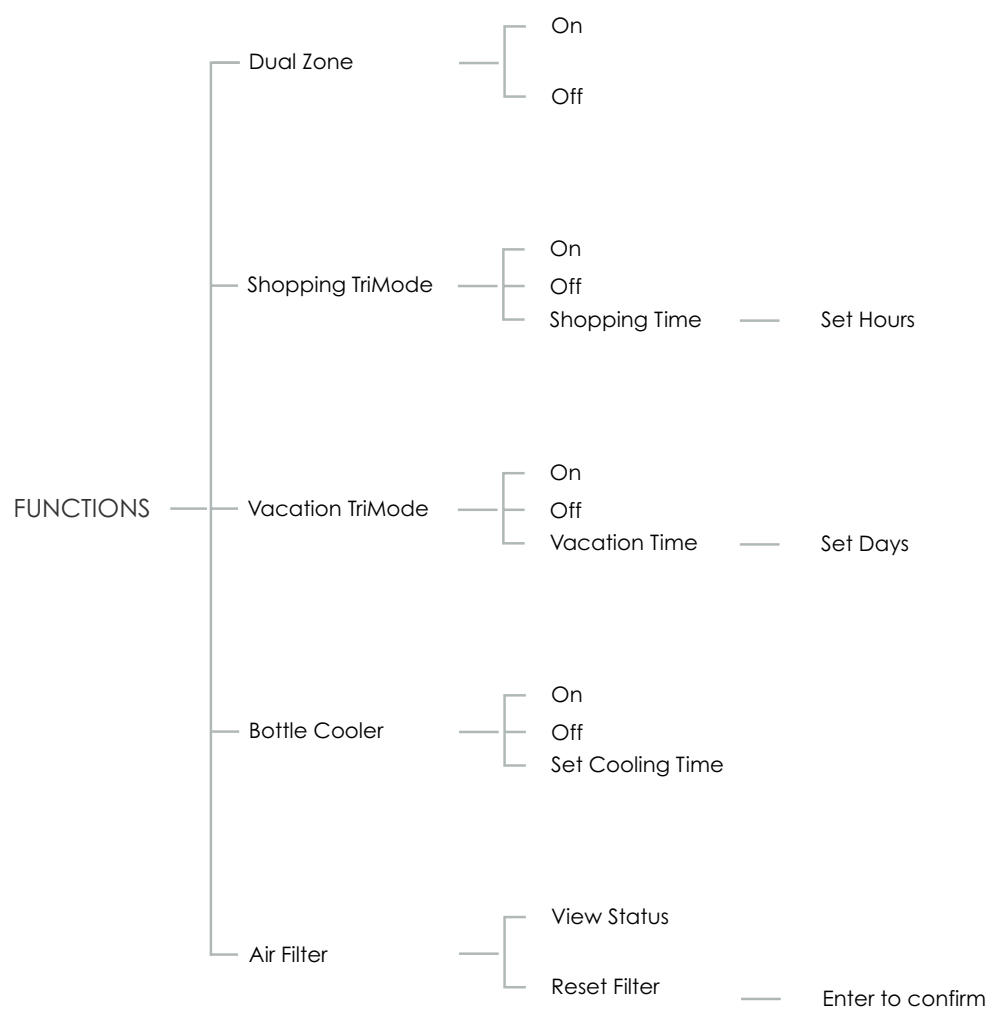

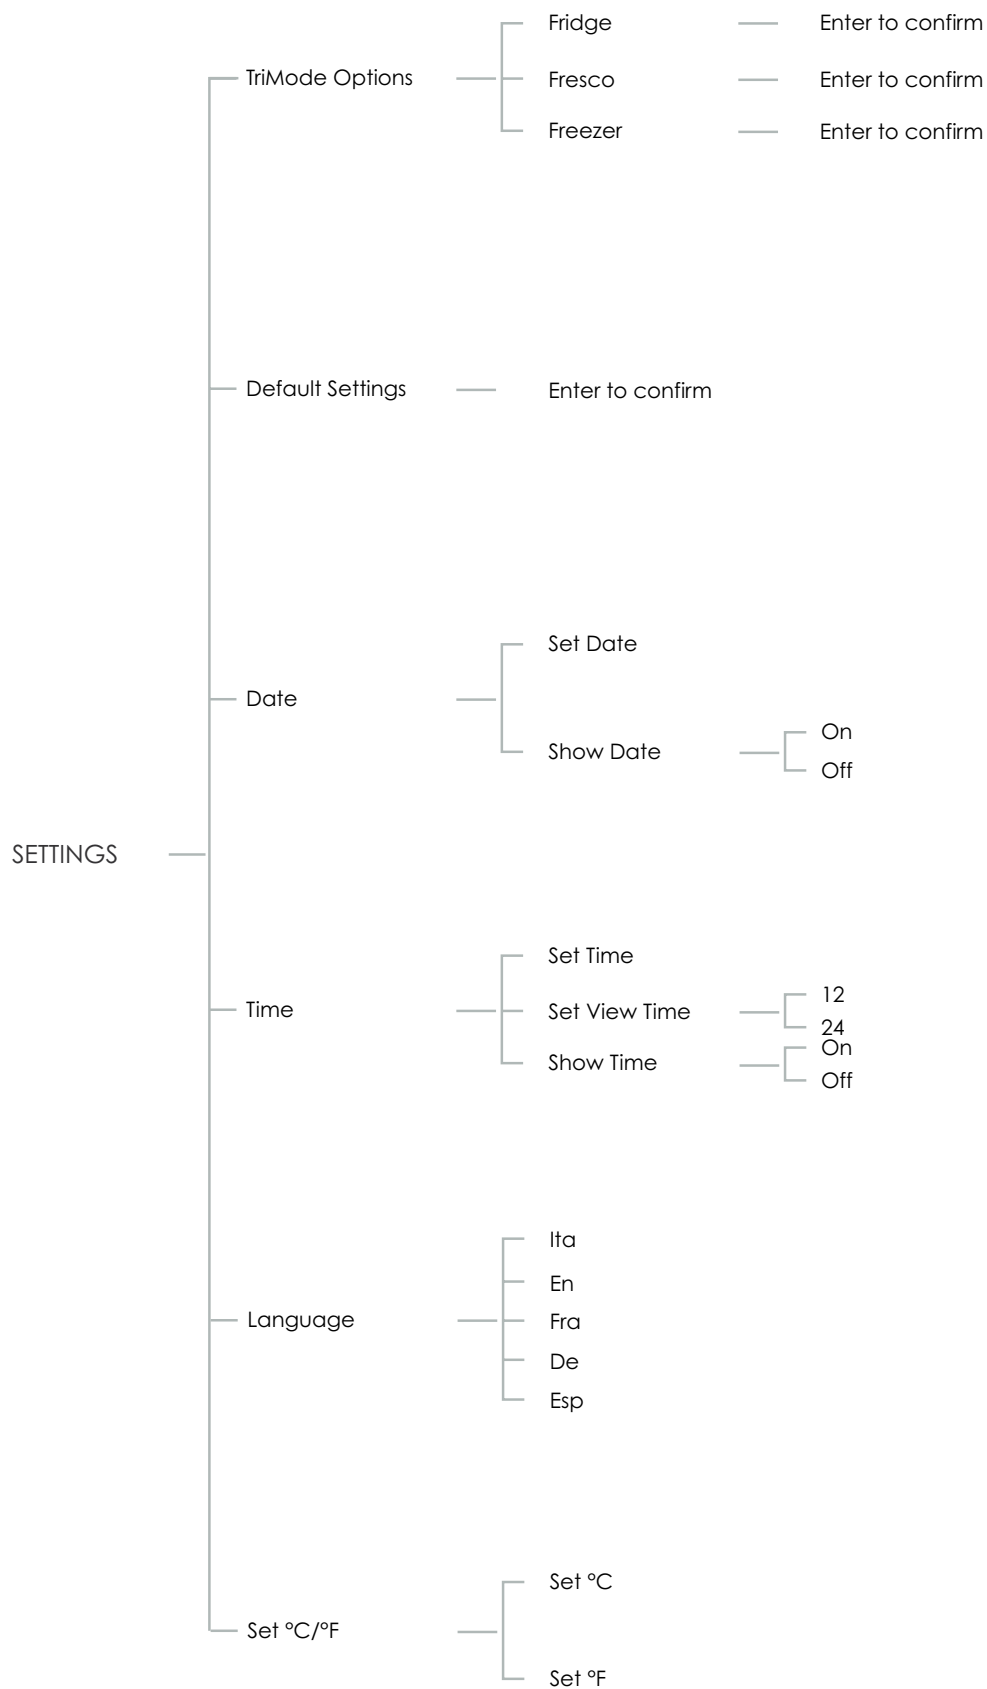

16 Useful Information

16.1 Spares

- Replacement Water filter

16.2 Starter kit

- Water filter and water connection for appliances with Ice Maker
- User Manual and Installation Guide
- Levelling feet
- Aga Badges (Classic and Contemporary)
- Anti tilting device
- Guarantee certificate
- E Cloth and sponge



Contact 0845 815 2020

Station Road, Ketley, Telford, Shropshire, TF1 5AQ England.

www.aga-web.co.uk

Aga is a trading name of Aga Consumer Products Limited, part of the Aga Rangemaster Group plc.

Registered in England & Wales under Registered Number 3872754.

Registered Office Address - 4 Arleston Way, Shirley, Solihull B90 4LH