




Installation Instructions

from **AGA**

XT - Gas (GPF)

For use in GB and IE

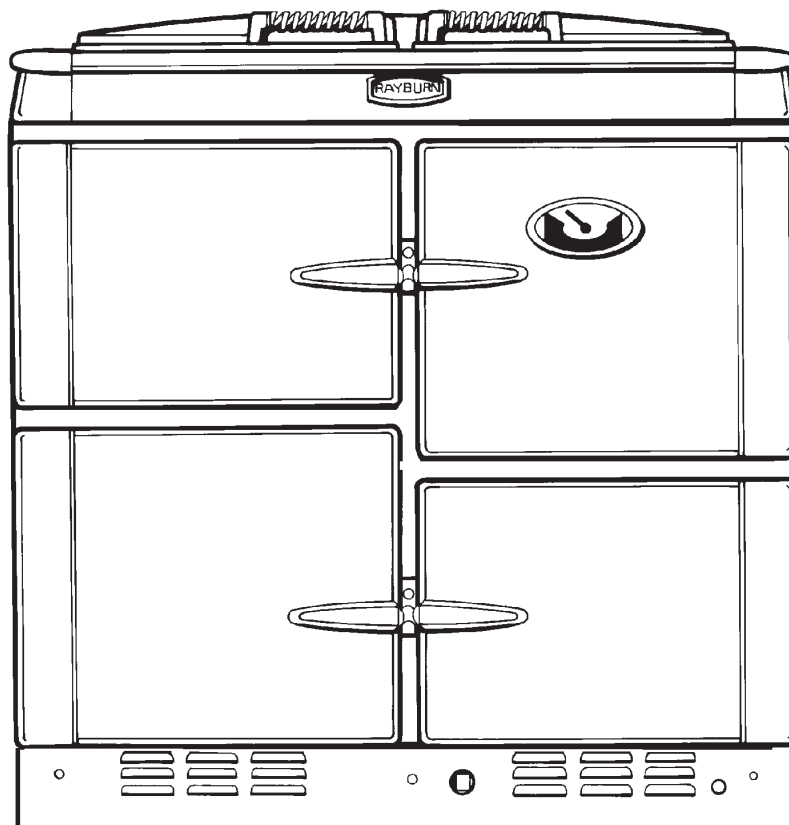

DESN 514112 B

Remember, when replacing a part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require. Do not use reconditioned or copy parts that have not been clearly authorised by AGA.

PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLING THIS APPLIANCE

Contents

SECTION	CONTENTS	PAGE
	CONSUMER PROTECTION	3
	HEALTH & SAFETY	3
	TECHNICAL DATA	4
SITE REQUIREMENTS	INTRODUCTION	5
	IMPORTANT	5
	REGULATIONS	5
	GAS SUPPLY	5
	LOCATION	5
	ELECTRICAL SUPPLY	6
	FLUE SYSTEM	7-9
	FLUE TERMINAL LOCATION	10
	INSTALLATION	11
	PCB CONNECTIONS	12
INSTALLATION REQUIREMENTS	CLEARANCES	13
	PRELIMINARY INSTALLATION	13
	SITE LOCATION	14
	SETTING COMBUSTION	15
INSTALLATION INSTRUCTIONS	BURNER ACCESS	16
	ELECTRICAL CONNECTION	16
	BOILER CONTROL (BURNERTECH BURNER)	17
	ELECTRICAL CHECK (BURNERTECH BURNER)	17
	COMBUSTION DISCHARGE DEVICE (BURNERTECH BURNER)	17
	OVERHEAT SAFETY THERMOSTAT	17
	BURNER CONTROL (ECOFLAM BURNER)	18
	ELECTRICAL CHECK (ECOFLAM BURNER)	18
	COMBUSTION DISCHARGE DEVICE (ECOFLAM BURNER)	18
	ANCILLARY CONTROLS CHECK	19
	INSTRUCT THE USER	19
WIRING DIAGRAM	WIRING DIAGRAM - APPLIANCE	20
SINGLE CHANNEL PROGRAMMER	SINGLE CHANNEL PROGRAMMER	21

Consumer Protection

As responsible manufacturers we take care to make sure that our products are designed and constructed to meet the required safety standards when properly installed and used.

IMPORTANT NOTICE: PLEASE READ THE ACCOMPANYING WARRANTY.

Any alteration that is not approved by AGA could invalidate the approval of the appliance, operation of the warranty and could affect your statutory rights.

Health & Safety

This appliance may contain some of the materials that are indicated. It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling where applicable, the pertinent parts that contain any of the listed materials that could be interpreted as being injurious to health and safety, see below for information.

Firebricks, Fuel beds, Artificial Fuels

When handling use disposable gloves.

Fire cement


When handling use disposable gloves.

Glues and Sealants

Exercise caution - if these are still in liquid form use face mask and disposable gloves.

Glass Yarn, Mineral Wool, Insulation Pads, Ceramic Fibre

May be harmful if inhaled. May be irritating to skin, eyes, nose and throat. When handling avoid contact with skin or eyes. Use disposable gloves, face-masks and eye protection. After handling wash hands and other exposed parts. When disposing of the product, reduce dust with water spray, ensure that parts are securely wrapped.

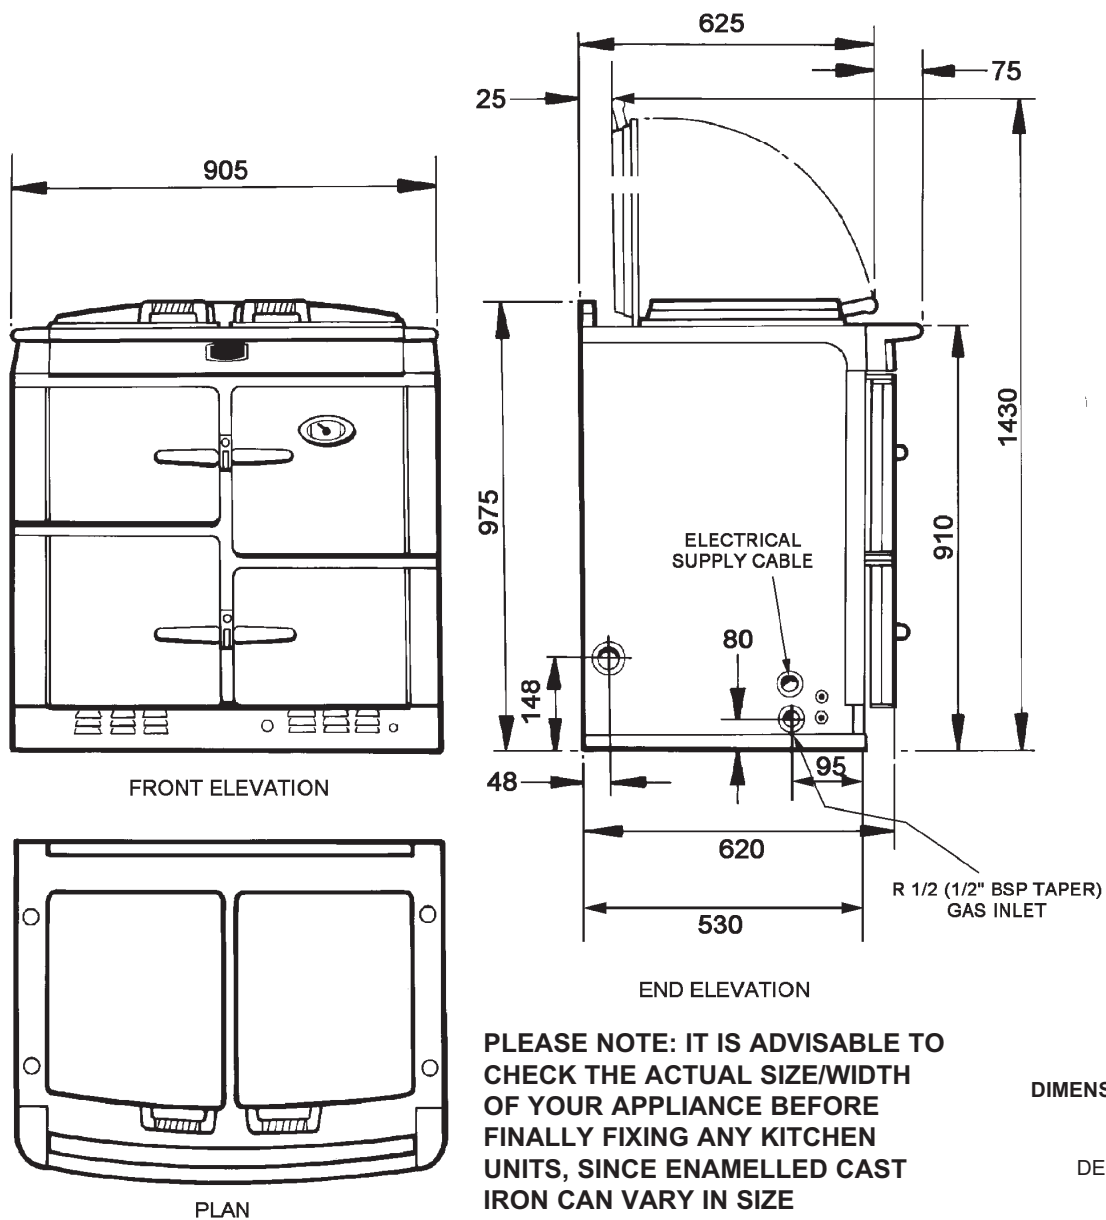

TECHNICAL DATA

Fuel - Natural Gas (G20) I _{2H}			Fuel - Propane (G31) I _{3P}		
Gas Inlet	R 1/2 (1/2" BSP TAPER)		Gas Inlet	R 1/2 (1/2" BSP TAPER)	
Electrical Supply	230V ~ 50Hz 3 amp Fused		Electrical Supply	230V ~ 50Hz 3 amp Fused	
Flue Pipe Diameter	54mm St/St		Flue Pipe Diameter	54mm St/St	
Flue Terminal Size:	Width	500mm	Flue Terminal Size:	Width	500mm
	Height	210mm		Height	210mm
	Depth	180mm		Depth	180mm
Burner Inlet Pressure	20mbar		Burner Inlet Pressure	37mbar	
CO	0 - 50 ppm		CO	0 - 50 ppm	
CO ₂ %	8.2% - 9.9%		CO ₂ %	9.4% - 10.8%	
Heat Input	14.6 kW		Heat Input	14.6 kW	
Unpacked Appliance Weight	350 Kg		Unpacked Appliance Weight	350 Kg	

Site requirements

INTRODUCTION

The Rayburn is a floor standing cooker, fired by a gas burner.

IMPORTANT

The burner fitted to this appliance has been designed and constructed exclusively for use with the Rayburn XT Cooker and MUST not be used on any other appliances or any other uses.

REGULATIONS

In the interests of safety all gas appliances should be installed by competent persons in accordance with the regulations in force.

GAS SUPPLY

Installation Pipes

Pipework from the meter to the appliance must be of adequate size. It is recommended that a minimum of $\varnothing 22$ mm copper tubing is used to within 1m of the appliance. A reduction to $\varnothing 15$ mm is permissible over the last metre of the appliance. Do not use pipes of a smaller size than the appliance gas connection. To avoid undue stress on pipework and burner, adequate support should be used when connecting and disconnecting union. The complete installation must be tested for soundness and purged in accordance with the regulations in force.

FLUE SAFETY DEVICE

For safety purposes a flue safety device is fitted. This will only operate in adverse or blocked flue conditions. If the switch has operated, it should be pushed in, to reset. If this problem persists it is necessary to determine and rectify the cause. If it is found necessary to reset more than once this may indicate a flue blockage.

LOCATION

The appliance is floor mounted and must be installed on a solid floor or base of non-combustible material which is capable of supporting the total weight.

The location chosen for the appliance must permit the installation and the provision of a satisfactory flue and an adequate air supply. The location must also provide adequate space for servicing and for air circulation around the appliance. See "Installation of the Appliance".

The space in which the appliance is to be fitted must have the following minimum dimensions.

Between wall or unit and LH side of appliance - 10mm top plate

Between wall or unit and RH side of appliance - 10mm top plate

SHOULD THE WALL PROJECT BEYOND THE FRONT OF THE APPLIANCE, THEN THE GAP AT THE R.H. SIDE MUST BE INCREASED TO 50mm. TO ALLOW DOOR TO OPEN ENOUGH TO CHANGE OVEN AND SHELF POSITIONS, (SEE FIG. 1).

Above the raised insulating cover handle - 60mm

In addition, adequate clearance must be available at the front of the appliance to enable it to be operated and serviced. Flue pipes and fittings must not be closer than 10mm to combustible materials and where passing through a combustible partition such as ceiling or roof, must be enclosed in a non-combustible sleeve providing an air space of at least 10mm.

Spaces around flue pipes passing through walls or floors should be sealed against the passage of smoke and flame.

Where the cooker is to stand in a recess or against a wall which is to be tiled, in no circumstances should the tiles overlap the cooker top plate.

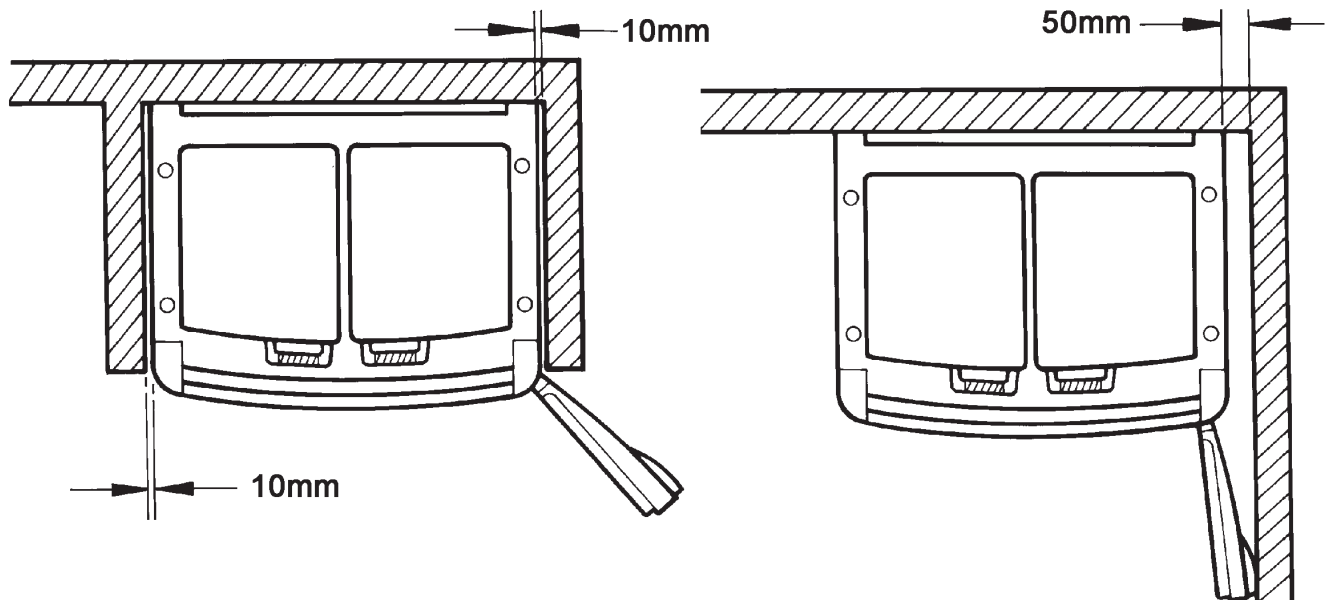


FIG. 1

DESN 514109

ELECTRICAL SUPPLY

Wiring external to the appliance must be installed in accordance with current National Wiring Regulations and local regulations which apply. The appliance is supplied for 230 Volt ~ 50 Hz and a fuse rating of 3 amps. The method of connection to the mains supply should facilitate complete electrical isolation of the appliance, by the use of a fused double pole switch having a contact separation of at least 3mm serving only the appliance.

The point of connection to the mains should be readily accessible and adjacent to the appliance. The installation should be protected by a 30mA Residual Current Circuit Breaker (RCCB).

The minimum requirement for the power cable is that it should be a 3 core PVC sheathed flexible cord (85°C min) at least 0.75mm² (24 x 0.2mm) to the relevant standard.

WARNING: THIS APPLIANCE MUST BE EARTHED.

In the event of an electrical fault after installation of the appliance, preliminary electrical system checks must be carried out i.e. earth continuity, short circuit, polarity and resistance to earth.

Site requirements

FLUE SYSTEM

The flue can be to the left or right of the appliance. The cooker is supplied with the flue pipe to the left, this can be adjusted to suit the installation.

FLUE DIRECTION - EXIT TO THE LEFT

1. Remove lower back panel (7 screws).
2. Unscrew the two fixing brackets and remove. (See Fig. 2).
3. Slacken the jubilee clip, fixing flexible pipe to horizontal pipe (A). (See Fig. 2).
4. If the flue pipe is to be routed as per factory set, remove bend from manifold and pipe A. Smear sealant on the end of the manifold, and replace bend onto the manifold, ensuring it is fully on and sweeps under the burner chamber.
5. Smear sealant over the surface of the 28mm branch on pipe 'A'. Push the flexible pipe 30-40mm on to the branch and tighten the jubilee clip.
6. Smear sealant on the first end of pipe 'A' and fit to bend ensuring the branch pipe is slightly above centre.
7. Replace fixing brackets (4 screws).
8. Replace back panel (7 screws) and position cooker.

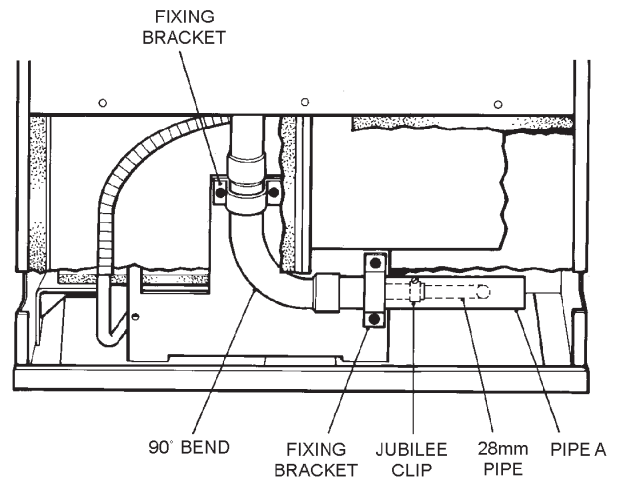


FIG. 2

DESN 512771

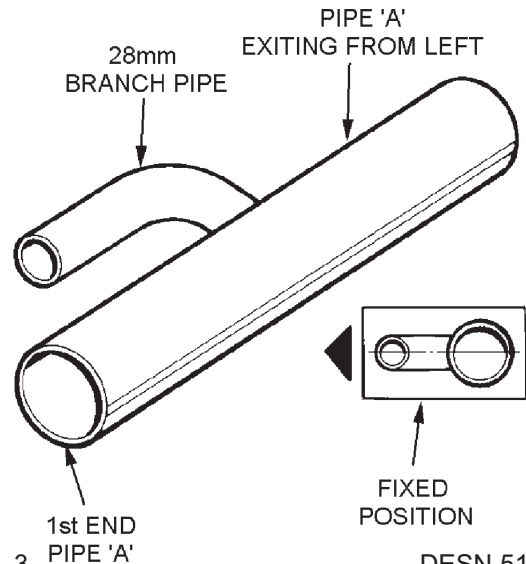


FIG. 3

DESN 512770

FLUE DIRECTION - EXIT TO THE RIGHT

Follow previous instructions in FLUE SYSTEM (Page 7), Steps 1 to 3.

4. Reposition the flexible tube from the oven vent down the back of the oven.
5. Smear sealant on the end of the manifold and replace the bend.
6. Smear sealant on the first end of pipe 'A' and the surface of the 28mm branch (towards the bend). Slide the flexible pipe completely over the branch (pipe should point towards burner chamber).
7. Push the first end of pipe 'A' onto the bend, the branch should be above the pipe. Tighten the jubilee clip ensuring the flexible pipe covers all of the branch pipe.
8. Replace brackets (4 screws).
9. Replace back panel (7 screws).

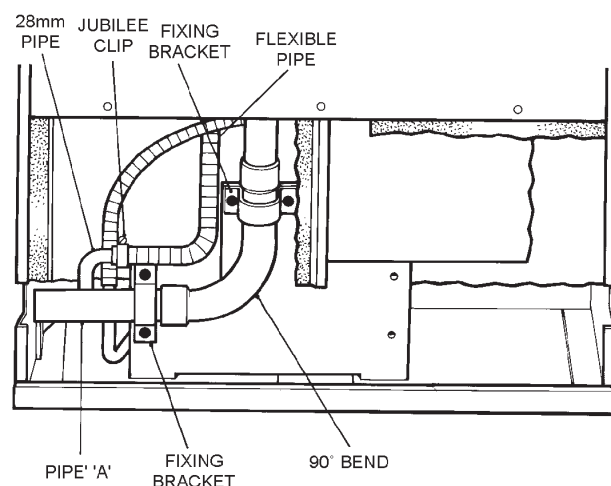


FIG. 4

DESN 512669

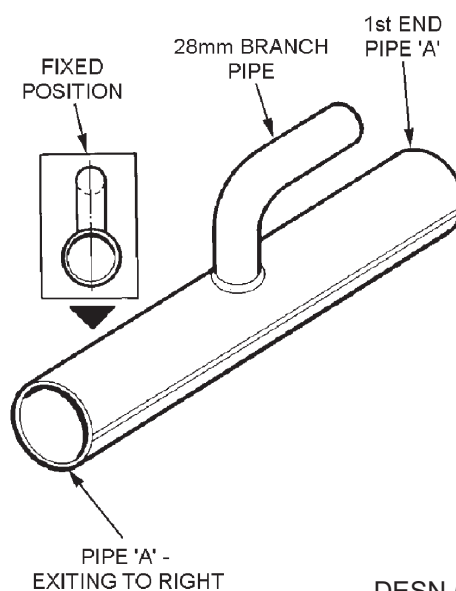


FIG. 5

DESN 512779

Site requirements

FLUE SYSTEM

The flue system used on this appliance must be provided by AGA and must be installed in accordance with the instructions and standards.

A maximum flue of 5 metres and 5 bends can be used (including horizontal length on the terminal).

Any upwards vertical runs must be immediate to the appliance to a maximum of 3 metres. (See Fig. 6)

Downwards vertical runs must be no more than 0.5 metres. (See Fig. 7)

Flue can be positioned to the rear or front of appliance via 1 bend. (See Fig. 8).

Horizontal runs must be as level as possible.

Care must be taken on mounting the terminal and routing the flue:-

- Damage to damp proof course
- Height above ground
- General terminal locations (See Fig. 9)

Where the flue passes through combustible material a minimum of 10mm clearance must be maintained around the flue pipe and insulation sleeve.

General Requirements

The flue pipe must be adequately supported using the brackets specified.

The flue pipe must be insulated (supplied).




All joints should be sealed using the sealant provided.

AIR REQUIREMENTS

The appliance can only be installed in a room which meets the ventilation regulations in force. But, in any event the room must have a permanent vent with a minimum free air area, see below.

MODEL	MIN. AIR REQUIREMENT
XTG	35 cm ²

IMPORTANT: THE LOUVERED AIR INTAKE AT THE BOTTOM FRONT OF THIS APPLIANCE MUST BE KEPT CLEAR OF ANY OBSTRUCTIONS.

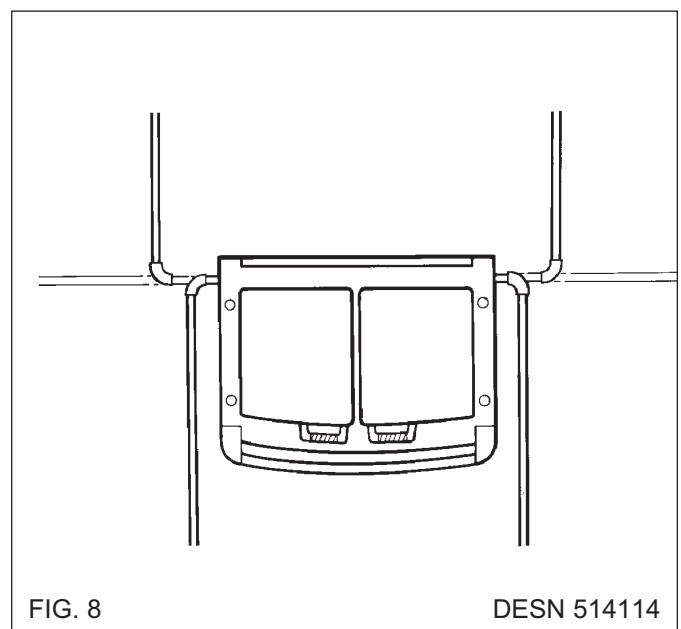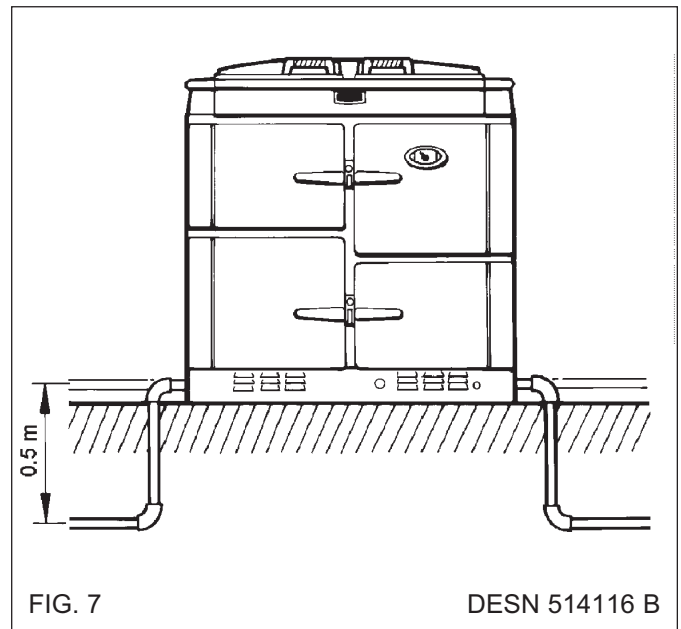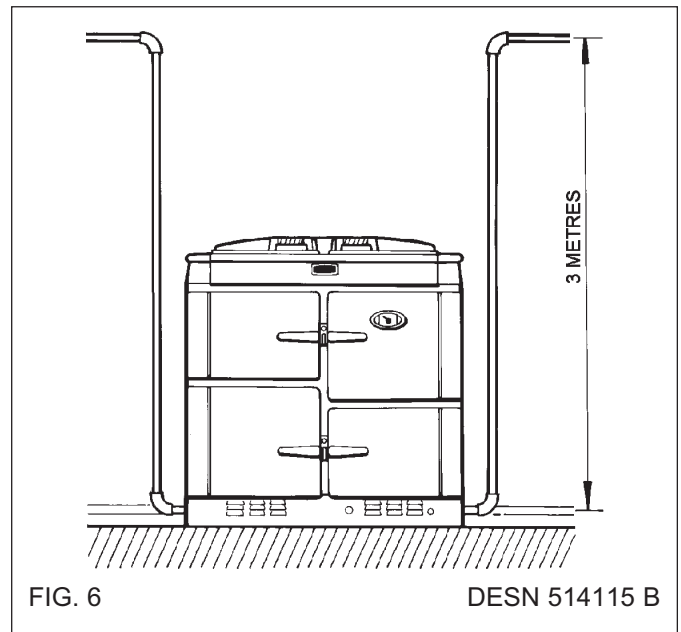

Site requirements - Flue terminal location

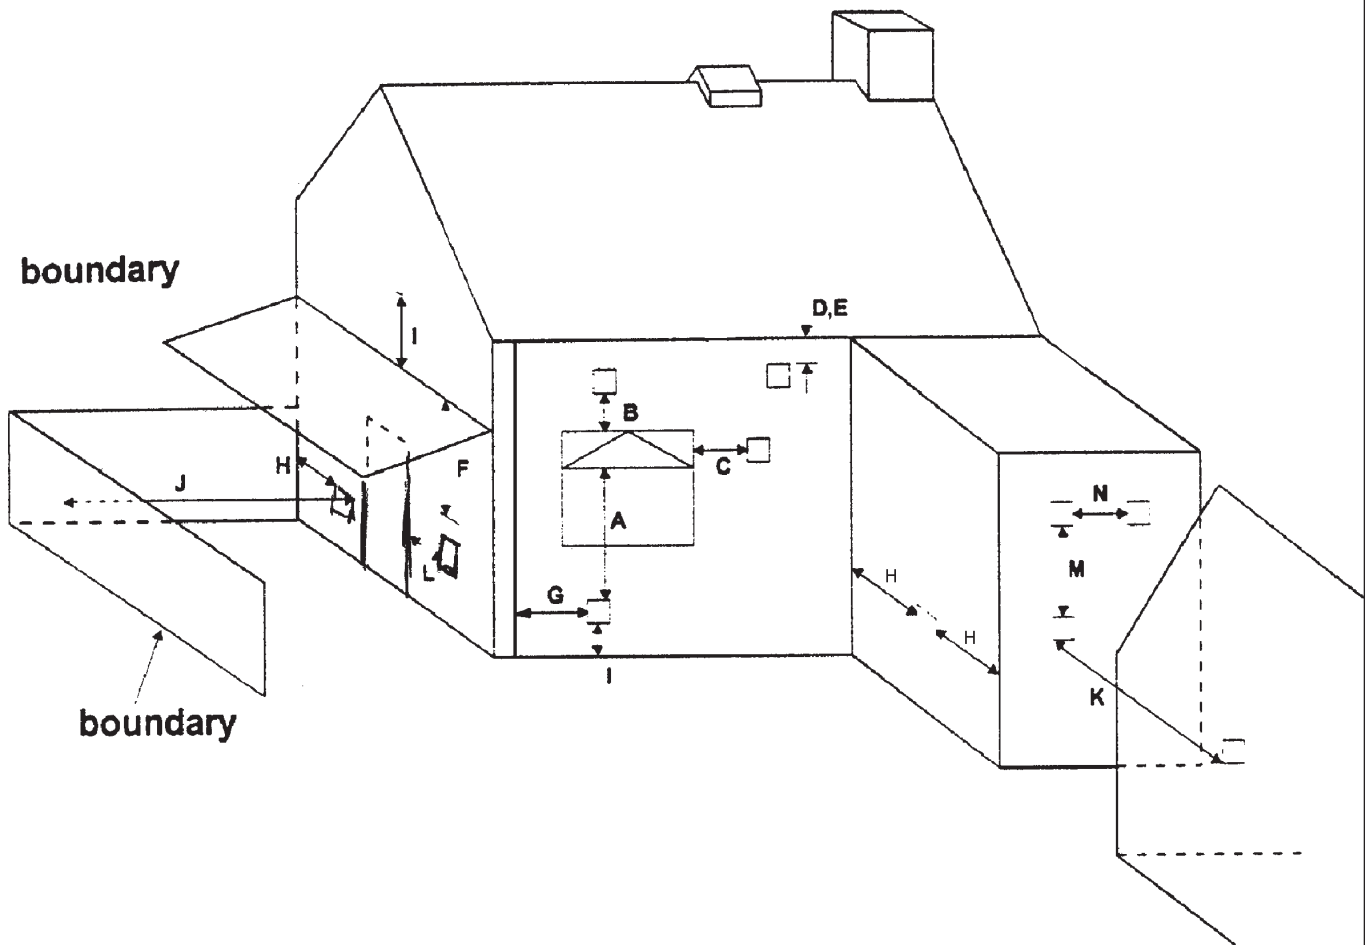


FIG. 9 - Location of flue terminal

DISTANCES STATED HERE ARE MINIMUM ALLOWABLE REQUIREMENTS

A BELOW AN OPENING	300mm	K FROM A TERMINAL FACING THE TERMINAL	1200mm
B ABOVE AN OPENING	300mm	L FROM AN OPENING IN THE CAR PORT INTO THE BUILDING	1200mm
C HORIZONTALLY TO AN OPENING	300mm	M VERTICALLY FROM A TERMINAL ON SAME WALL	1200mm
D BELOW GUTTERS, SOIL PIPES OR DRAIN PIPES	75mm	N HORIZONTALLY FROM A TERMINAL ON THE SAME WALL	300mm
E BELOW EAVES	200mm		
F BELOW BALCONY OR CAR PORT ROOF	200mm		
G FROM VERTICAL DRAIN PIPE OR SOIL PIPE	150mm		
H FROM AN INTERNAL OR EXTERNAL CORNER OR TO A BOUNDARY ALONGSIDE THE ENAMEL	200mm		
I ABOVE GROUND, ROOF OR BALCONY LEVEL	300mm		
J FROM A SURFACE OR BOUNDARY FACING THE TERMINAL	600mm		

Site requirements

INSTALLATION

1. Cut out card template from packaging and affix to wall.
2. Cut $\varnothing 60$ mm hole in the wall for the flue pipe. (See Fig. 10).
NOTE: Larger holes are required through combustible material.
3. Drill 4 wall fixing holes through template (1 in each corner). (See Fig. 10).
4. Drill a minimum of a $\varnothing 10$ mm hole through the wall for terminal supply cable.
5. Remove card template and place flue terminal assembly onto the hole. (See Fig. 11)
6. The flue termination pipe may required to be shortened or lengthened depending on wall thickness. (See Fig. 12).
7. Using the large wall fixings, permanently fix back plate to the wall, removing outer cover first.
8. Wire the fan to the supply cable to the terminal block on the back plate. (See Fig. 13).

Using the 3-core cable provided, run cable back to flue extractor circuit control at the bottom right hand side of the appliance.

Red + to Red +
Black - to Black -
Yellow (Signal) to Yellow (Signal)

Replace outer cover onto terminal backplate.

9. No additional flue terminal guard is required to this appliance.

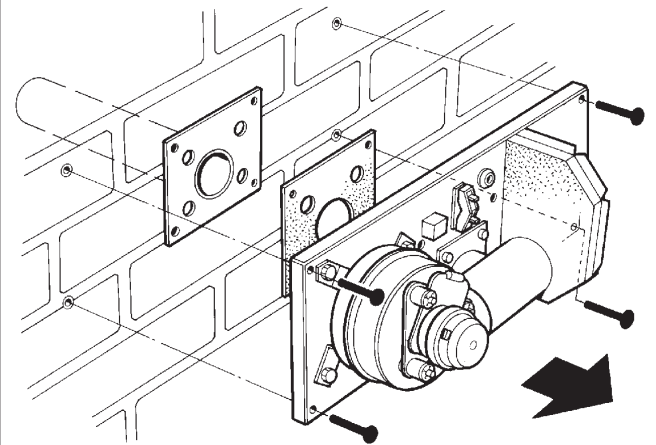


FIG. 11

DESN 513356

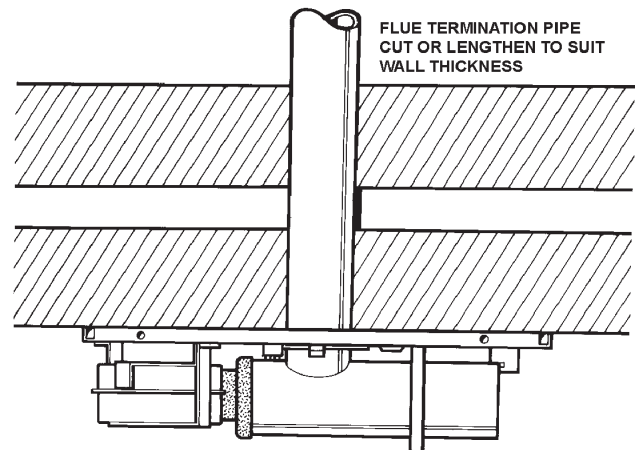


FIG. 12

DESN 512661

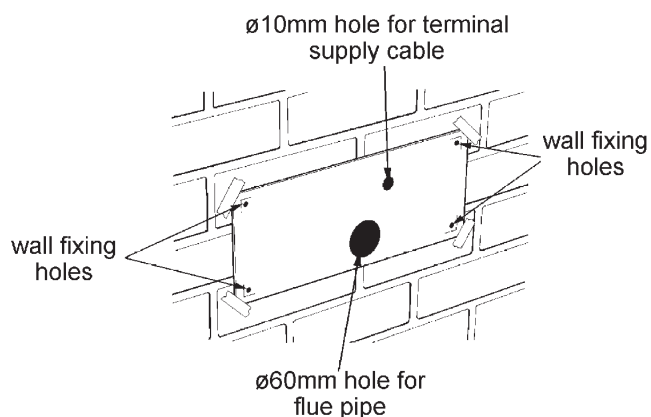


FIG. 10

DESN 513345


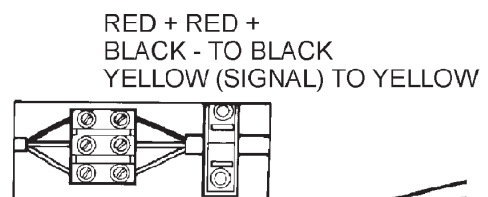


FIG. 13

DESN 513350

PCB CONNECTIONS

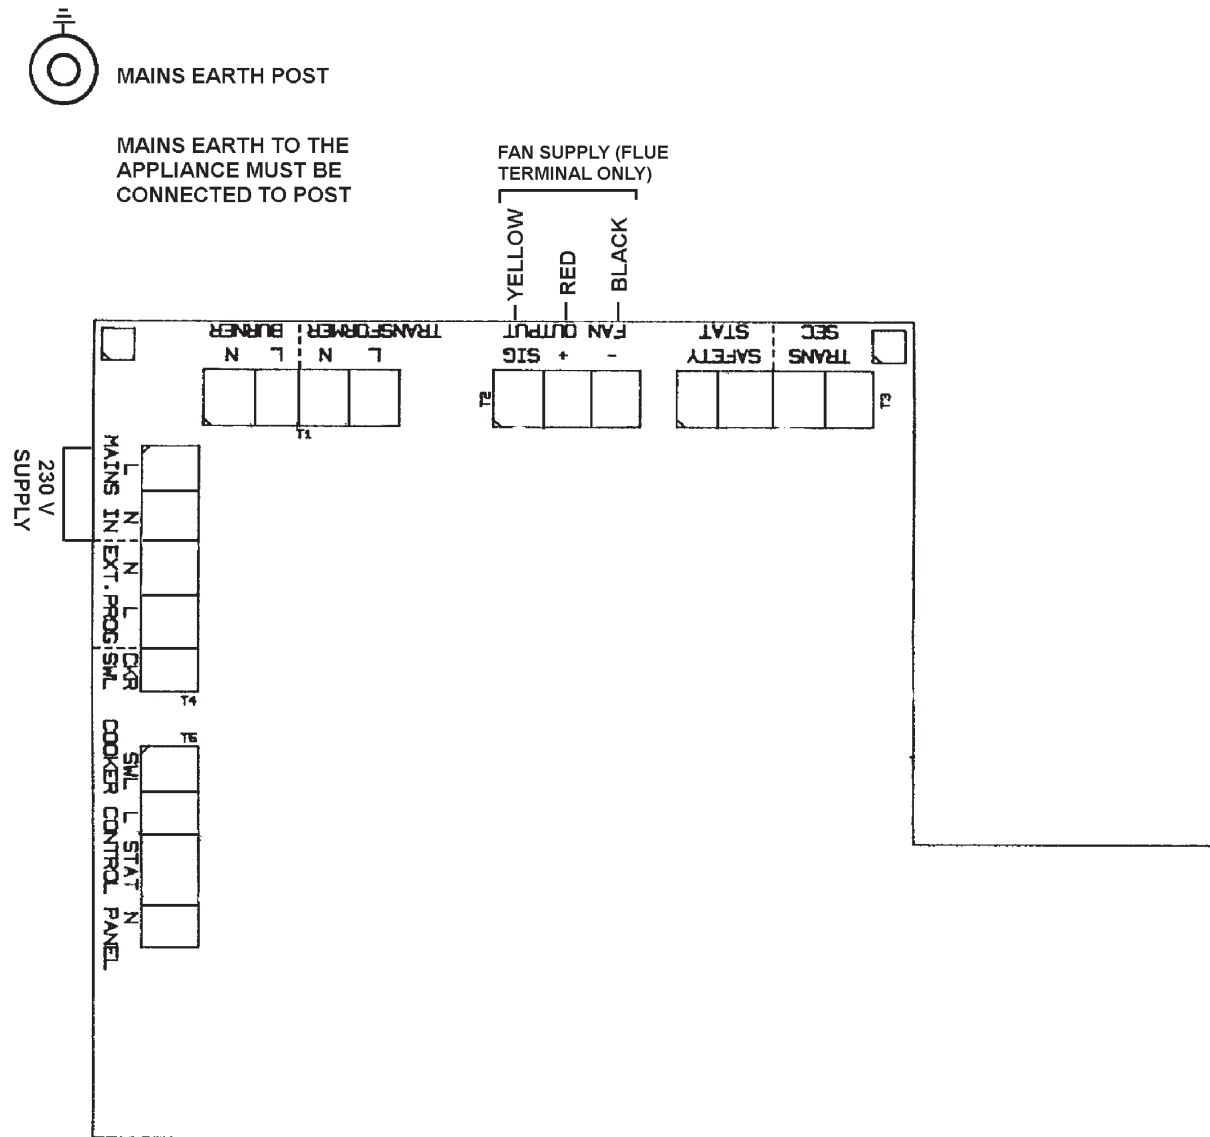

EXTERNAL CONNECTIONS: FAN CONNECTIONS - AT TERMINAL
MAINS CONNECTIONS

FIG. 14

Installation requirements

CLEARANCES

The appliance is floor mounted. The space in which the appliance is to be fitted must have the following minimum dimensions.

Between wall or unit and LH side of appliance - 10mm top plate

Between wall or unit and RH side of appliance - 10mm top plate

SHOULD THE WALL PROJECT BEYOND THE FRONT OF THE APPLIANCE, THEN THE GAP AT THE R.H. SIDE MUST BE INCREASED TO 50mm. TO ALLOW DOOR TO OPEN ENOUGH TO CHANGE OVEN AND SHELF POSITIONS, (SEE FIG. 1).

Above the raised insulating cover handle - 60mm

In addition adequate clearance must be available at the front of the appliance to enable it to be operated and serviced.

PRELIMINARY INSTALLATION

The appliance is delivered in a fully assembled condition with the exception of the following items which are supplied separately packed and require assembly:-

The appliance rear distance bracket

The cooker handrail

FLUE PIPE KIT

Flue pipe comprises of:-

3 x 1 metre of flue pipe

3 elbows

3 straight couplers

6 support brackets (saddle and clamps)

1 tube ultra-grey sealant

Pack of fastenings

Additional lengths of pipes and fittings are available as optional extras including a 45° angle bend.

Appliance rear distance bracket: If the rear wall is of combustible material, there must be an air gap of 25mm between the wall and the rear of the cooker. Fit the rear distance brackets as shown in Fig. 15. Wherever possible it is recommended that the skirting board is removed for the width of the appliance to enable the rear edge of the appliance top plate to make contact with the vertical wall and avoid a rear gap. (Combustible wall excepted).

Where the cooker is to stand in a recess or against a wall which is to be tiled, **UNDER NO CIRCUMSTANCES SHOULD THE TILES OVERLAP THE TOP PLATE.**

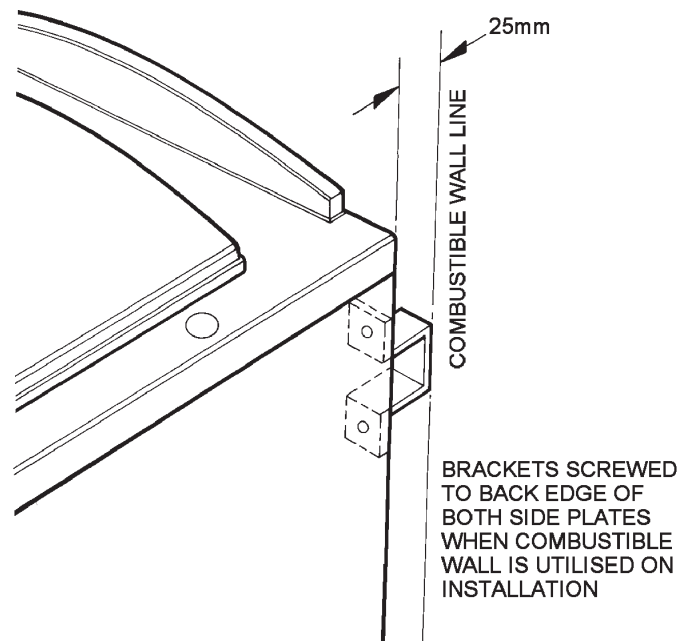


FIG. 15

DESN 514122

SITE LOCATION

1. Check that the hearth is level, then remove the appliance from its transit wooden pallet, and position it with its back against the wall and in its intended position.
2. Connect and terminate the flue system in accordance with these instructions.

Connect the relevant services to the appliance:-

1. Gas (XT GPF)
2. Electric
3. Flue Pipe

3. Fit plinth assembly (See Fig. 16).

4. Fit handrail assembly (See Fig. 17) as follows:

- (i) Fit mounting brackets to top plate loose.
- (ii) Fit handrail to brackets. Tighten up screw fixing brackets to top plate.

NOTE: The handrail ends are tapered to match taper on top plate. The handrail should only be fitted with tapered ends going inward toward the top.

- (iii) Fit covers onto brackets.

NOTE: Tighten grub screw through hole in top door hinge.

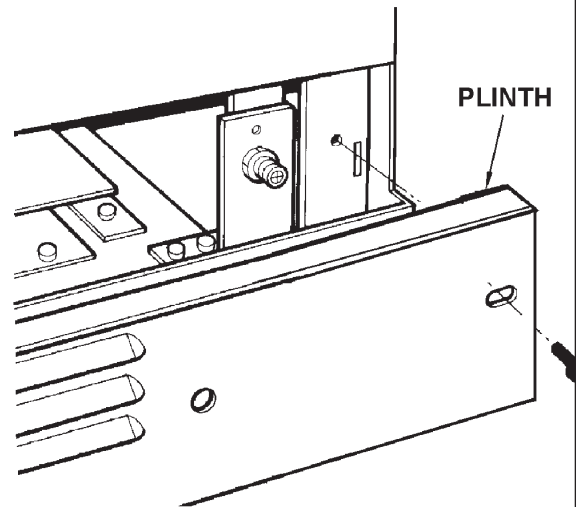


FIG. 16

DESN 514191 A

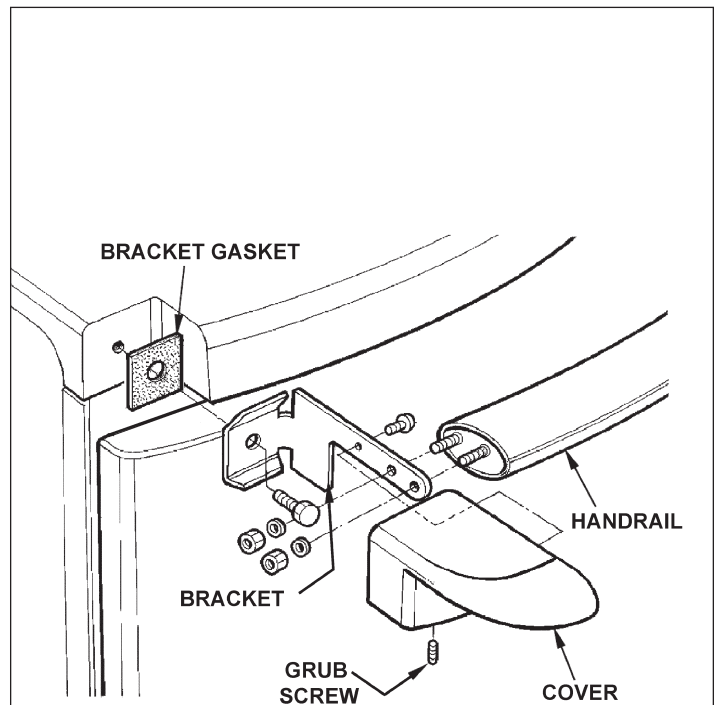


FIG. 17

DESN 514117 B

Installation requirements

SETTING COMBUSTION

Because this appliance uses a pre-mix burner. No setting up of combustion is required, the burner automatically controls the air to gas rate ratio.

IMPORTANT: Ensure that the bottom louvered plinth is in place during combustion testing and setting procedures. Ensure the outer door is closed.

Turn the burner on.

After 15 minutes, lift up the RH insulating cover and remove the countersunk screw and insert the sensing end of a portable indicator to check the CO₂ (Carbon Dioxide) level.

CO	0 - 50 ppm
CO ₂	8.2% - 9.9% (Natural Gas)
CO ₂	10.3% - 10.7% (Propane)

If these volumes cannot be obtained, check the gas rate, adjust throttle screw if required and allow reading to stabilise.

BURNER ACCESS

SEE FIG. 18

1. Open the burner access door.
2. Remove (4) inner panel securing screws and remove panel.
3. Remove the (3) plinth securing screws and remove plinth.

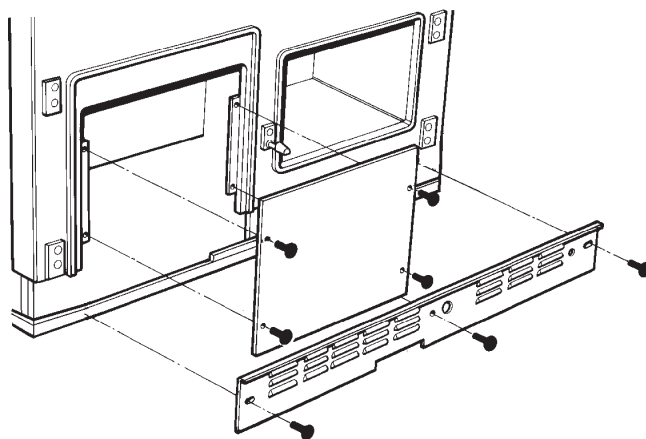


FIG. 18

DESN 514110 B

ELECTRICAL CONNECTION

1. Make electrical connections to terminal strip as wiring diagram (See Fig. 14)

Installation Instructions

BURNER CONTROL (BURNERTECH BURNER)

When the thermostat is calling for heat, 230V is supplied to terminals 10 and 11 on the control box and tab 1 and 2 on the fan. The fan should start straight away.

There will then be a short delay while the control box checks that the fan is running and pre-purges. Providing there is gas to the burner, combustion should be established after approximately 30 seconds.

On first firing after installation or servicing, the burner may go to lock out, until all the air has been purged out of the burner. Wait at least 10 seconds before pressing the reset button. (See Fig. 19).

Check gas cock is in the on position.

Check inlet gas pressure at test point.

ELECTRICAL CHECK (BURNERTECH BURNER)

Checks to ensure electrical safety should be carried out by a competent person.

COMBUSTION DISCHARGE SAFETY DEVICE (BURNERTECH)

For safety purposes a combustion discharge safety device is fitted. This will only operation under adverse flue conditions. If the switch has operated, it should be pushed in to reset. If this problem persists contact your local engineer to determine and rectify the cause. It is important not to reset more than once as this may indicate a flue blockage.

WARNING: The combustion discharge safety device must not be interfered with or rendered inoperative, as this could interfere with the safe operation of the appliance and invalidate the appliance warranty.

OVERHEAT SAFETY THERMOSTAT

IMPORTANT NOTE: This appliance is fitted with an overheat thermostat which has a manual reset button.

If the overheat stat trips, the cooker will not operate, until the button has been pushed-in (reset). The engineer needs to follow 'Fault Finding Guide' to establish why it has tripped. (The overheat thermostat and its sensing phial are located on the controls chassis rear).

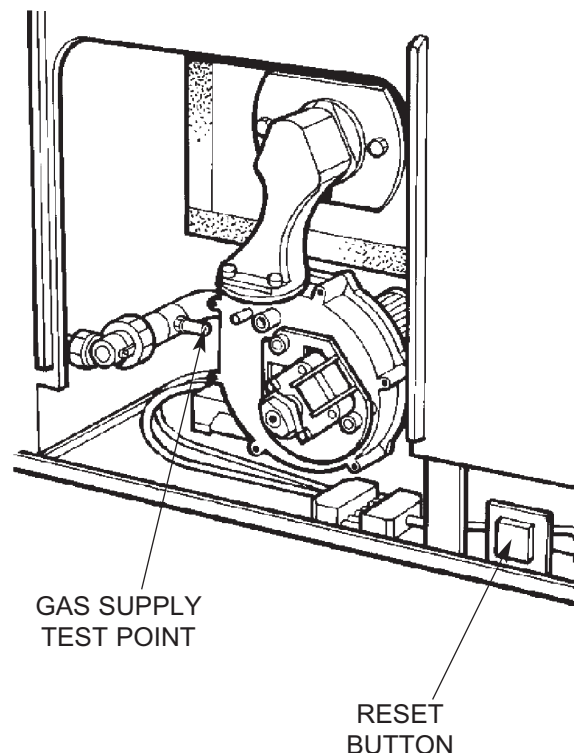


FIG. 19

DESN 512346

BURNER CONTROL (ECOFLAM BURNER)

When the thermostat is calling for heat, 230V is supplied to terminals 10 and 11 on the control box and tab 1 and 2 on the fan. The fan should start straight away.

There will then be a short delay while the control box checks that the fan is running and pre-purges. Providing there is gas to the burner, combustion should be established after approximately 30 seconds.

On first firing after installation or servicing, the burner may go to lock out, until all the air has been purged out of the burner. Wait at least 10 seconds before pressing the reset button. (See Fig. 20).

Check gas cock is in the on position.

Check inlet gas pressure at test point.

ELECTRICAL CHECK (ECOFLAM BURNER)

Checks to ensure electrical safety should be carried out by a competent person.

COMBUSTION DISCHARGE SAFETY DEVICE (ECOFLAM)

For safety purposes a combustion discharge safety device is fitted. This will only operation under adverse flue conditions. If the switch has operated, it should be pushed in to reset. If this problem persists contact your local engineer to determine and rectify the cause. It is important not to reset more than once as this may indicate a flue blockage.

WARNING: The combustion discharge safety device must not be interfered with or rendered inoperative, as this could interfere with the safe operation of the appliance and invalidate the appliance warranty.

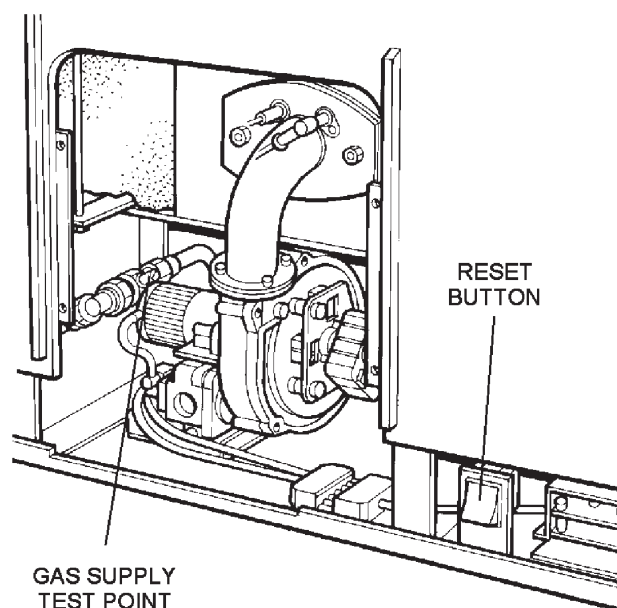


FIG. 20

DESN 514180

Installation Instructions

ANCILLARY CONTROLS CHECK

Before leaving the site, check that the operation of cooker timer and thermostat are capable of controlling the burner correctly. Check the operation of burner control box.

INSTRUCT THE USER

1. Advise the User that, for continued efficient and safe operation of the appliance, it is important that adequate servicing is carried out at regular 12 monthly intervals.
2. Hand the Operating Instructions to the User and demonstrate the correct operation of the appliance and system controls.
3. Leave the Installation and Servicing Instructions with the User.

WIRING DIAGRAM - APPLIANCE

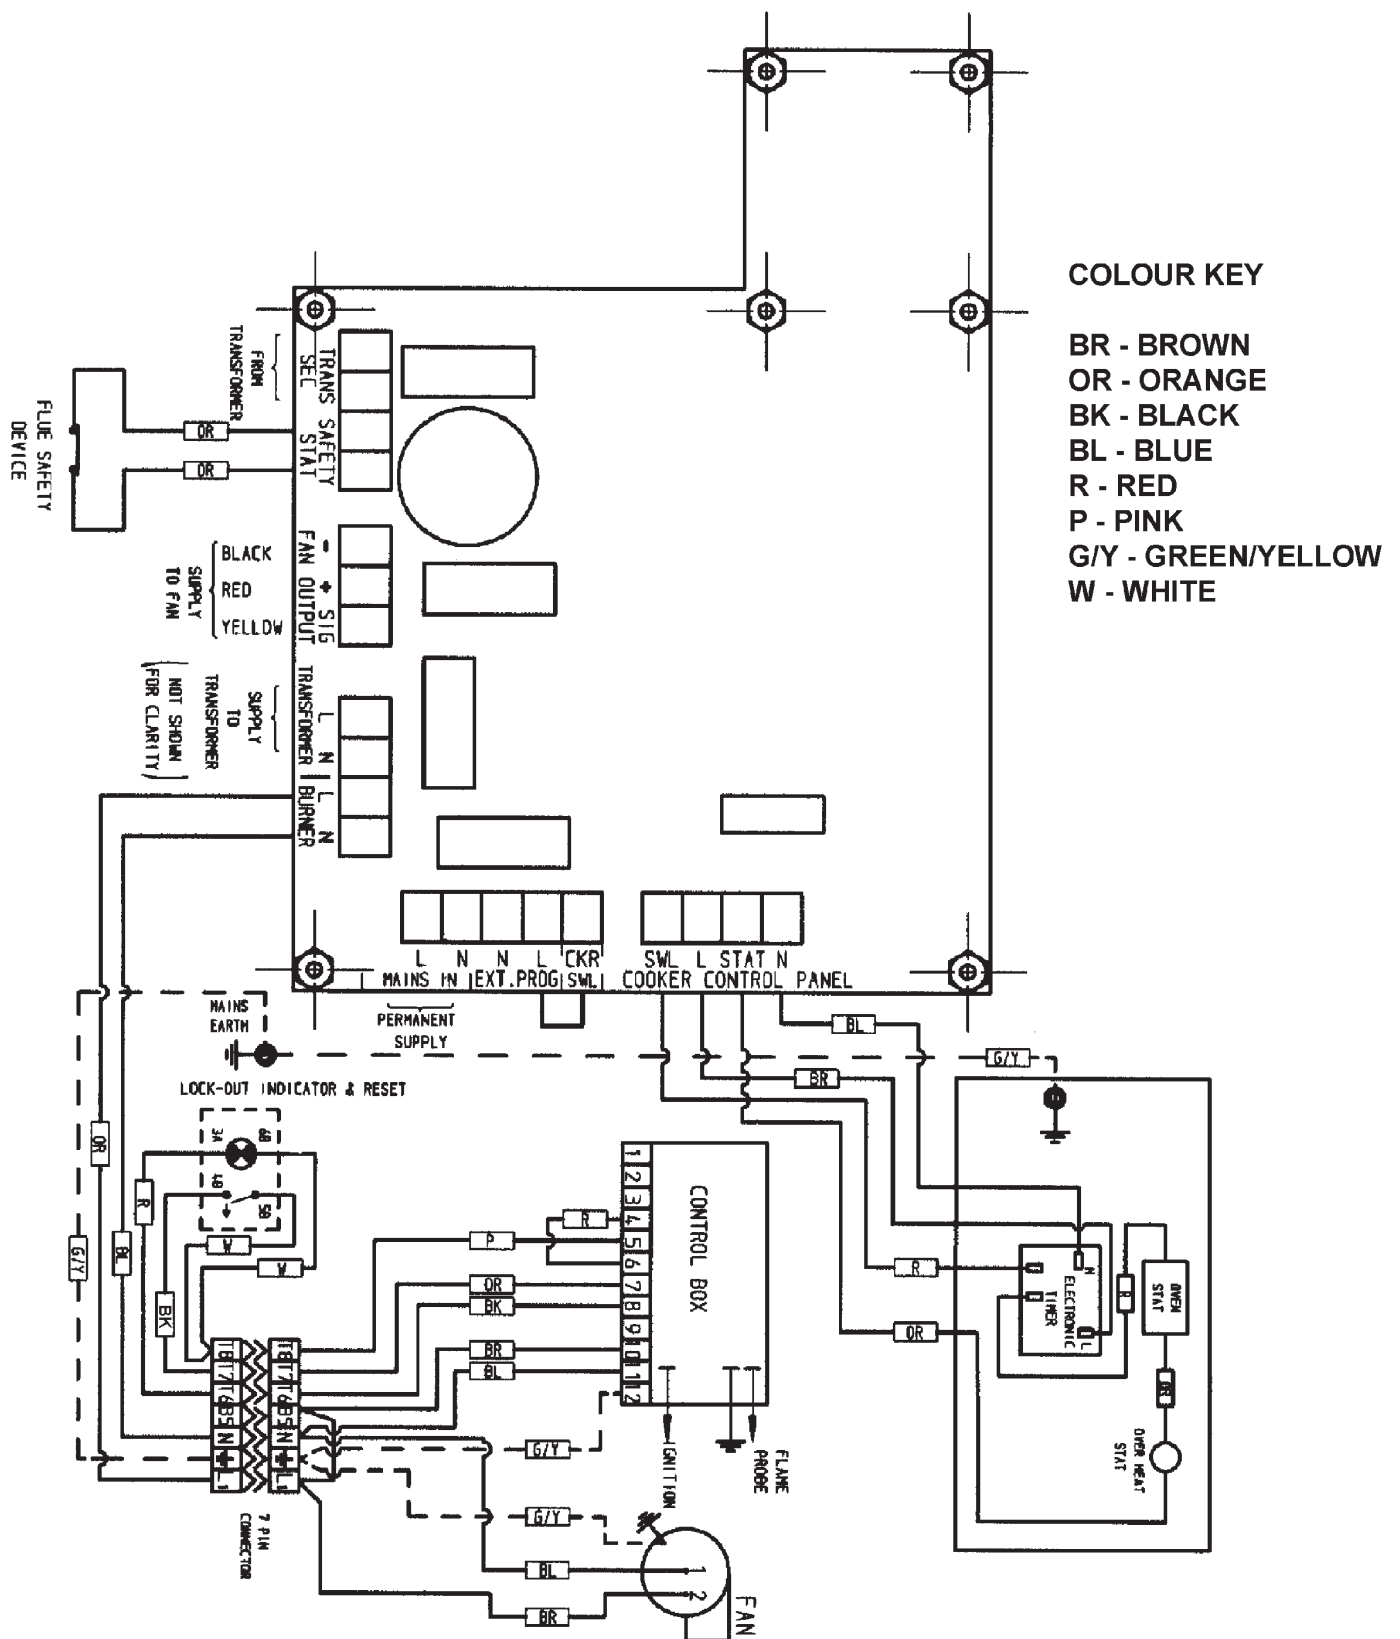



FIG. 21

Single Channel Programmer

USING A SINGLE CHANNEL OPTIONAL PROGRAMMER IN CONJUNCTION WITH THE RAYBURN XT - GAS (GPF)

1. Always use the same isolating switch for both the cooker and programmer.
Ideally: use the supply connections on the appliance.
2. Before carrying out any maintenance work on either the programmer or the cooker ensure the supply is isolated.

PROGRAMMER WIRING

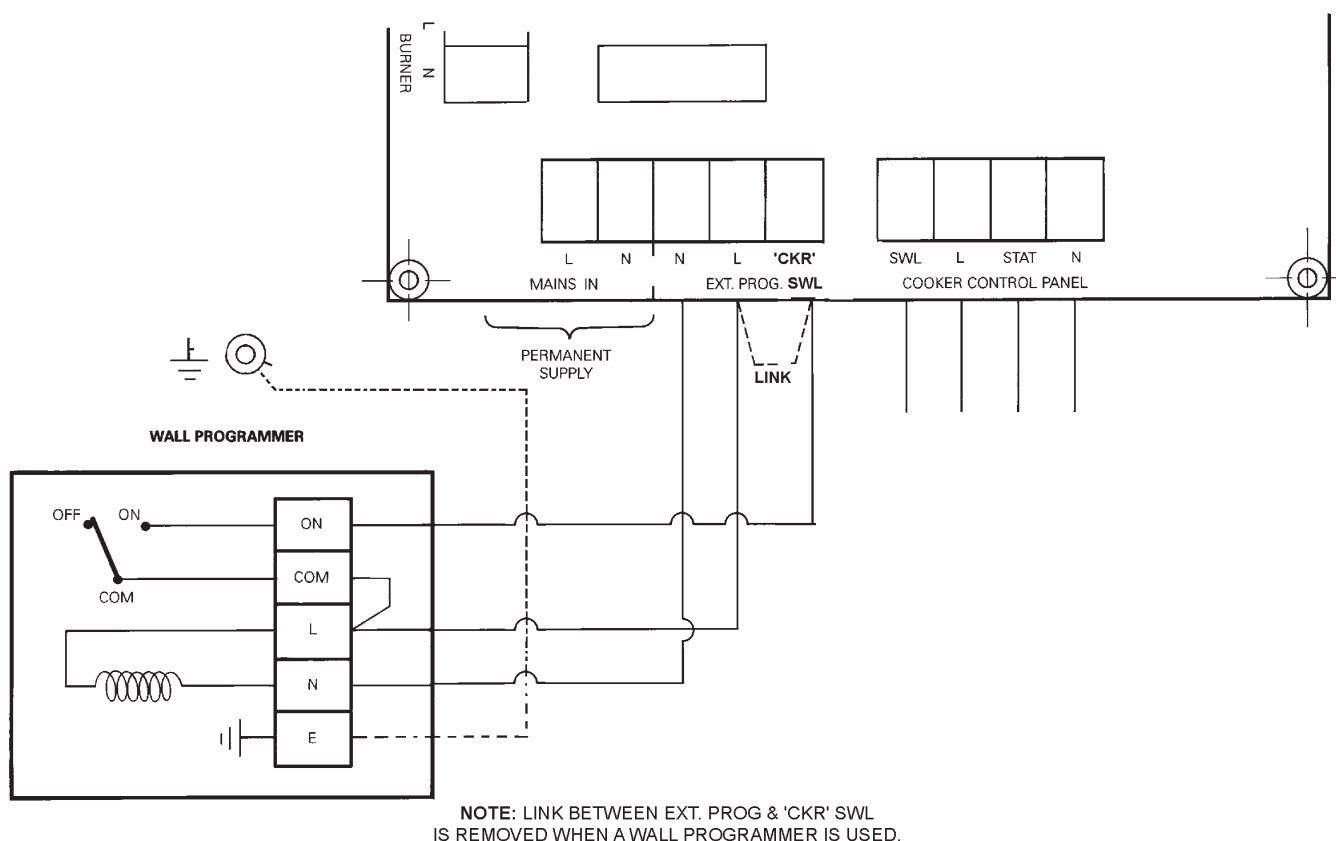

ALL WIRING TO THE IEE WIRING REGULATION BY A QUALIFIED ENGINEER

USERS INSTRUCTIONS FOR PROGRAMMER AND TIMER COMBINATION

1. The "Time of Day" alarm and "Minute Minder" functions can all be used without affecting the external programmer timings.
2. When using Auto Cook Function on the internal timer ensure the external wall programmer is in the continuous 'ON' mode.
3. When using the external wall programmer: ensure it is set correctly i.e. timed. The internal cooker timer should be in Manual Mode.
4. Please read in conjunction with the instructions supplied with your external programmer.

**For further advice or information contact
your local distributor/stockist**

With AGA Rangemaster's policy of continuous product improvement, the Company reserves the right to change specifications and make modifications to the appliance described at any time.



from The AGA logo is a small, black, horizontally-oriented oval with the word "AGA" in white, bold, sans-serif font.

Manufactured by
AGA Rangemaster
Station Road
Ketley Telford
Shropshire TF1 5AQ
England

www.rayburn-web.co.uk
www.agacookshop.co.uk