



AGA TOTAL CONTROL

Model No: TC3 & TC5

(ROOM VENT OPTION)

Installation Guide

REMEMBER: when replacing a part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require. Do not use reconditioned or copy parts that have not been clearly authorised by AGA.

**PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING SITE SURVEY
OR INSTALLING THIS APPLIANCE.**

CONTENTS

SECTION	PAGE
HEALTH AND SAFETY	3
INSTALLATION REQUIREMENTS	3
DELIVERY REQUIREMENTS	3
APPLIANCE DIMENSIONS - AGA TC3 (ROOM VENT OPTION)	4
APPLIANCE DIMENSIONS - AGA TC5 (ROOM VENT OPTION)	5
CLEARANCES	6
POWER SUPPLY - AGA TC3 (ROOM VENT OPTION)	7
POWER SUPPLY - AGA TC5 (ROOM VENT OPTION)	7
MAINS CABLE ROUTING - AGA TC3 (ROOM VENT OPTION)	8
MAINS CABLE ROUTING - AGA TC5 (ROOM VENT OPTION)	9
HOTCUPBOARD INSTALLATION	10
HANDRAIL CONNECTION - AGA TC3 (ROOM VENT OPTION)	15
WIRING DIAGRAM - AGA TC3 (ROOM VENT OPTION)	16
WIRING DIAGRAM - AGA TC5 (ROOM VENT OPTION)	17

HEALTH AND SAFETY

Consumer Protection

As responsible manufacturers we take care to make sure that our products are designed and constructed to meet the required safety standards when properly installed and used.

PLEASE READ THE ACCOMPANYING WARRANTY.

Any alteration that is not approved by AGA could invalidate the approval of the appliance, operation of the warranty and could also affect your statutory rights.

In the interests of safety and effective use, please read the following before using your new AGA appliance.

Important

This appliance may contain some of the materials that are indicated below. It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling, where applicable, the pertinent parts that contain any of the listed materials that could be interpreted as being injurious to health and safety, see below for information.

Fire Cement - when handling use disposable gloves.

Glues and Sealants - exercise caution - if these are still in liquid form use face mask and disposable gloves.

Glass Yarn, Mineral Wool, Insulation Pads - may be harmful if inhaled, may be irritating to skin, eyes, nose and throat. When handling avoid inhaling or contact with skin or eyes. Use disposable gloves, face masks and eye protection. After handling wash hands and other exposed parts. When disposing of the product, reduce dust with water spray, ensure that parts are securely wrapped.

INSTALLATION REQUIREMENTS

THIS APPLIANCE MUST ONLY BE INSTALLED BY COMPETENT ENGINEERS WHO HAVE BEEN SPECIFICALLY FACTORY TRAINED ON THE PRODUCT AND WHO HAVE THE APPROPRIATE EQUIPMENT.

Installation must be to Local and National Wiring Regulations/Codes in force, and carried out by a Qualified Engineer.

Product Approval for Australia to AS/NZ 560335.2.6.

DELIVERY REQUIREMENTS


The AGA TC3 arrives on 1 pallet.

The AGA TC5 (Hotcupboard) arrives on 2 pallets.

There must be access to the kitchen to manipulate a foot print of 1005mm x 740mm. A wooden template (skate with castor wheels) of dimensions 1005mm x 740mm could be used to check. If the AGA Total Control fully built appliance is able to fit through the property grounds and doors into its installation position in the kitchen. It must also be considered that the height of the appliance is 960mm off pallet and 1100mm on the pallet, so high level obstacles/restrictions must not be overlooked.

If this skate/template **can** be manipulated through the property grounds and doors into position, then the AGA Total Control can be installed as intended with no re-work.

APPLIANCE DIMENSIONS - AGA TC3 (ROOM VENT OPTION)

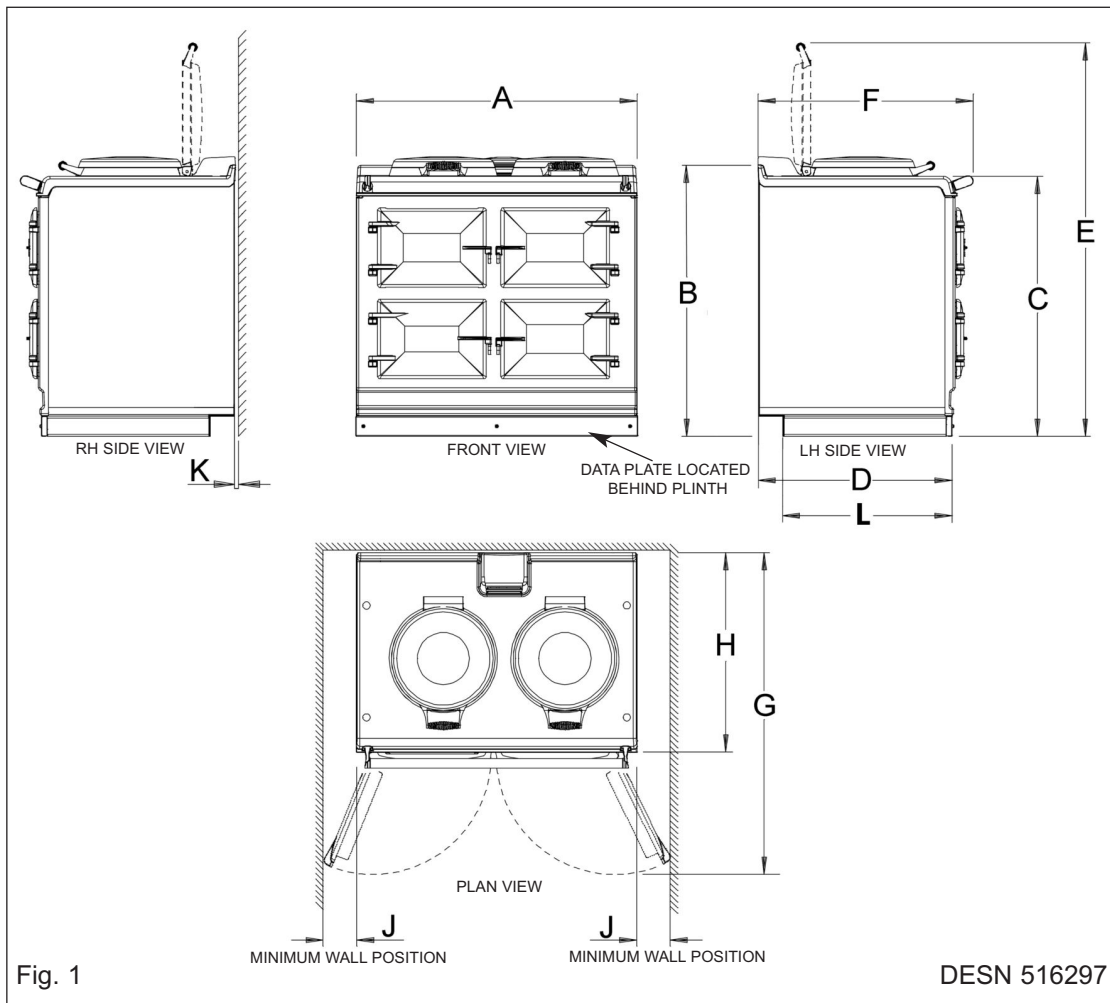

	A	B	C	D	E	F	G	H	J	K
mm	987	951	913	680	1388	760	1145	698	116	10

Cooker Dimensions

When surveying for a cooker installation the actual clearance required for the 'body' of the appliance should be increased by 10mm beyond the figures quote above. This allows safe margin to take into account the natural dimensional variations found in major castings. In particular the width across the appliance recess could be critical.

APPLIANCE WEIGHT


Model: AGA Total Control (TC3) - 370 Kg

PACKAGING WEIGHT

515 Kg

DATA PLATE LOCATED BEHIND BOTTOM PLINTH.

APPLIANCE DIMENSIONS - AGA TC5 (ROOM VENT OPTION)

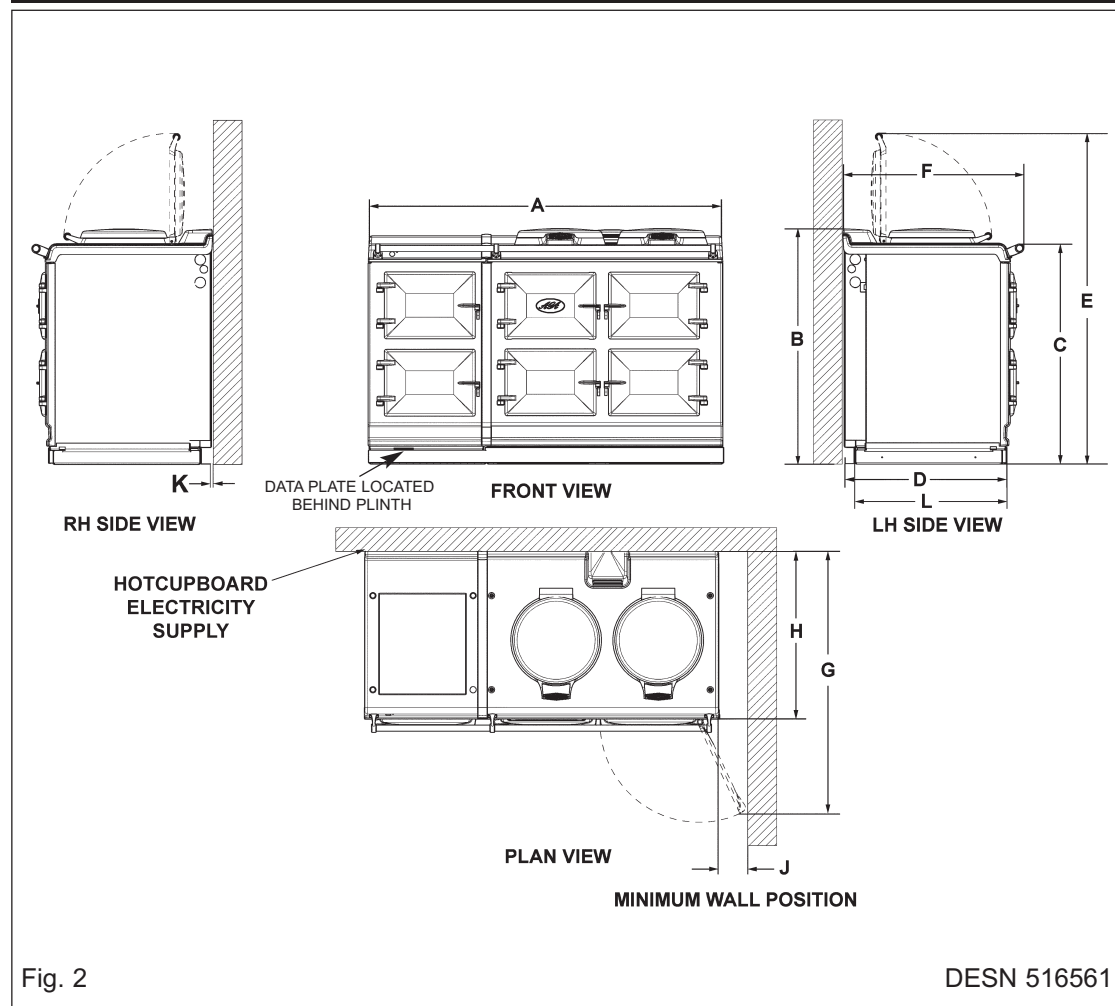

	A	B	C	D	E	F	G	H	J	K	L
mm	1478	951	913	680	1388	760	1145	698	116	10	634

Cooker Dimensions

When surveying for a cooker installation the actual clearance required for the 'body' of the appliance should be increased by 10mm beyond the figures quote above. This allows safe margin to take into account the natural dimensional variations found in major castings. In particular the width across the appliance recess could be critical.

APPLIANCE WEIGHT

Model: AGA Total Control (TC3) - 370 Kg

Hotcupboard - 110kg

CLEARANCES

The complete cooker is floor-mounted and the space in which the appliance is to be fitted must have the following minimum dimensions:-

A minimum clearance of 60mm is required above the raised insulating cover handle.

Side Clearances:- A 3mm gap is required each side between the cooker top plate and adjoining work surfaces that may be fitted, this is to allow for the safe removal of the top plate should this be required at a later date.

Where cookers are fitted against side walls a 116mm clearance is required on the right and left hand side for oven doors access.

If the AGA is to be installed in a brick recess, then the minimum clearance should be increased by at least 10mm, to allow for the walls not being square.

In addition, a minimum clearance of 1000mm must be available at the front of the cooker to enable the cooker to be serviced.

Cooker Base or Hearth

It is essential that the base or hearth on which the cooker stands should be level and be capable of supporting the total weight of the appliance. The base of the built-in AGA plinth must be level and sit above finished floor height for service access.

The front plinth cover is removable and must not be obstructed by flooring or tiles. If necessary the cooker must be raised by the thickness of the tiles to ensure the plinth can be removed. Shims are provided to eliminate rocking.

Tiling

When the cooker is to stand in a recess or against a wall which is to be tiled, in no circumstances should the tiles overlap the cooker top plate, access to remove the hot plate must be allowed for servicing at a later date.

A gap of at least 10mm must be observed between the rear of the top plate and the wall behind the appliance. **If the rear wall is of combustible material there must be a gap of 25mm.**

Cooker Hoods

It is recommended that this AGA is fitted with a cooker hood. The AGA venting system is located on top of the AGA between the two hotplates, and is designed for venting the moisture from the ovens. The cooker hood should be positioned not less than the minimum height as recommended by the manufacturer, from the top of the AGA.

These are 650mm for AGA Rext 720
650mm for AGA 1000 SE

POWER SUPPLY

WARNING: THIS APPLIANCE MUST BE EARTHED.

THIS APPLIANCE IS DESIGNED FOR THE VOLTAGE STATED ON THE RATING PLATE, WHICH IS SITUATED BEHIND THE PLINTH COVER.

IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSON TO AVOID A HAZARD.

A 1PH 32 amp 230V or 3PH 400V minimum 16A per phase ~ 50 Hz fused electrical supply is required adjacent to the appliance. External wiring to the unit must be installed using the mains cable provided, in accordance with the current wiring regulations and any local regulations which apply. If cable is shortened, new ferrules must be fitted to the stripped conductors.

The method of connection to the mains electricity supply must facilitate complete electrical isolation of the appliance, by a multi-pole switch, having a contact separation of at least 3mm on all poles.

The isolator should not be positioned immediately above the cooker, but must be fitted within 2 metres of the appliance.

The isolator maybe separate from the connection point.

The mains connection point must be accessible within the areas shown in Fig 3A, Page 8 for cable routing options.

For 2 or 3 phase installations an optional adaptor kit must be obtained (Part No. AE4M280354).

POWER SUPPLY - HOTCUPBOARD (AGA TC5)

THE HOTCUPBOARD ATTACHMENT REQUIRES A INDEPENDENT SINGLE PHASE SUPPLY.

WARNING: THIS APPLIANCE MUST BE EARTHED.

THIS APPLIANCE IS DESIGNED FOR THE VOLTAGE STATED ON THE RATING PLATE, WHICH IS SITUATED ON A SLIDE-OUT TRAY IN THE HOT CUPBOARD BASE PLATE ABOVE THE PLINTH.



IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSON TO AVOID A HAZARD.

A 230v ~ 50 Hz, 3 amp electrical supply is required to the appliance (with the exception of the AGA TC5 and DC5 Hotcupboard model, please refer to the AGA Induction Hob model instructions for the power supply requirements). External wiring to the unit must be installed using the mains cable provided, in accordance with the current regulations and any local regulations which apply.

The method of connection to the mains electricity supply must facilitate complete electrical isolation of the appliance, preferably by a fused double pole switch, having a contact separation of at least 3mm in both poles.

The isolator should not be positioned immediately above the hotcupboard, but must be fitted within 2 metres of the appliance.

MAINS CABLE ROUTING - AGA TC3 (ROOM VENT OPTION)

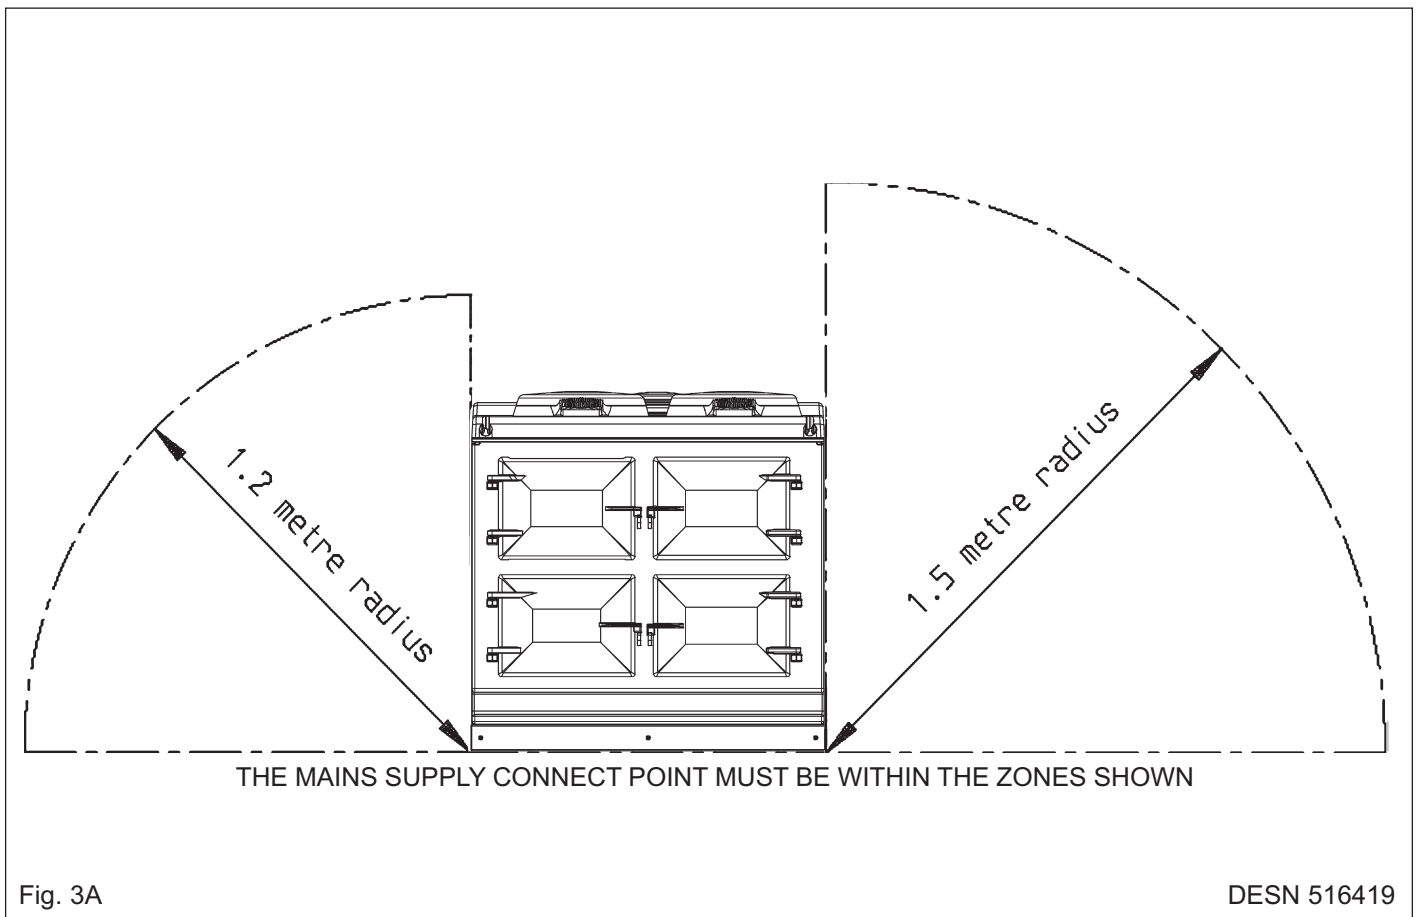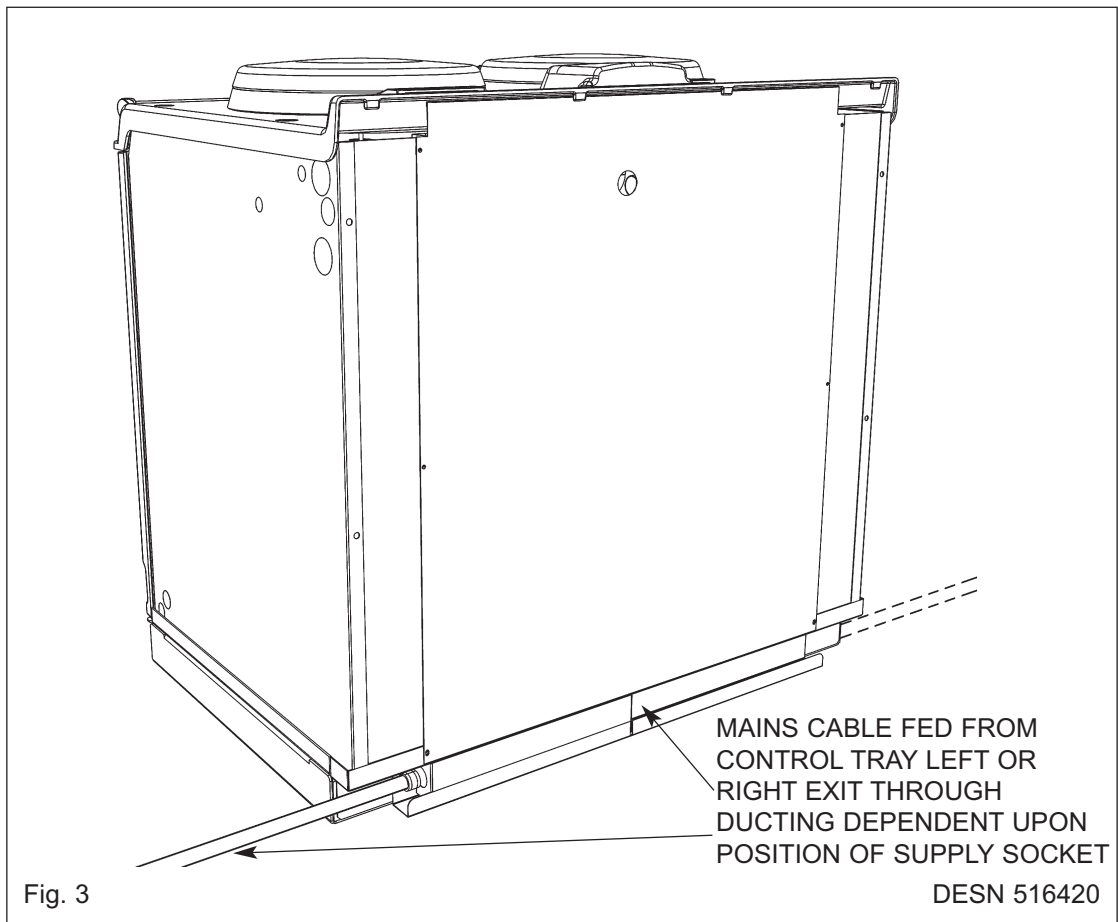

MAINS CABLE ROUTING - AGA TC5 (ROOM VENT OPTION)


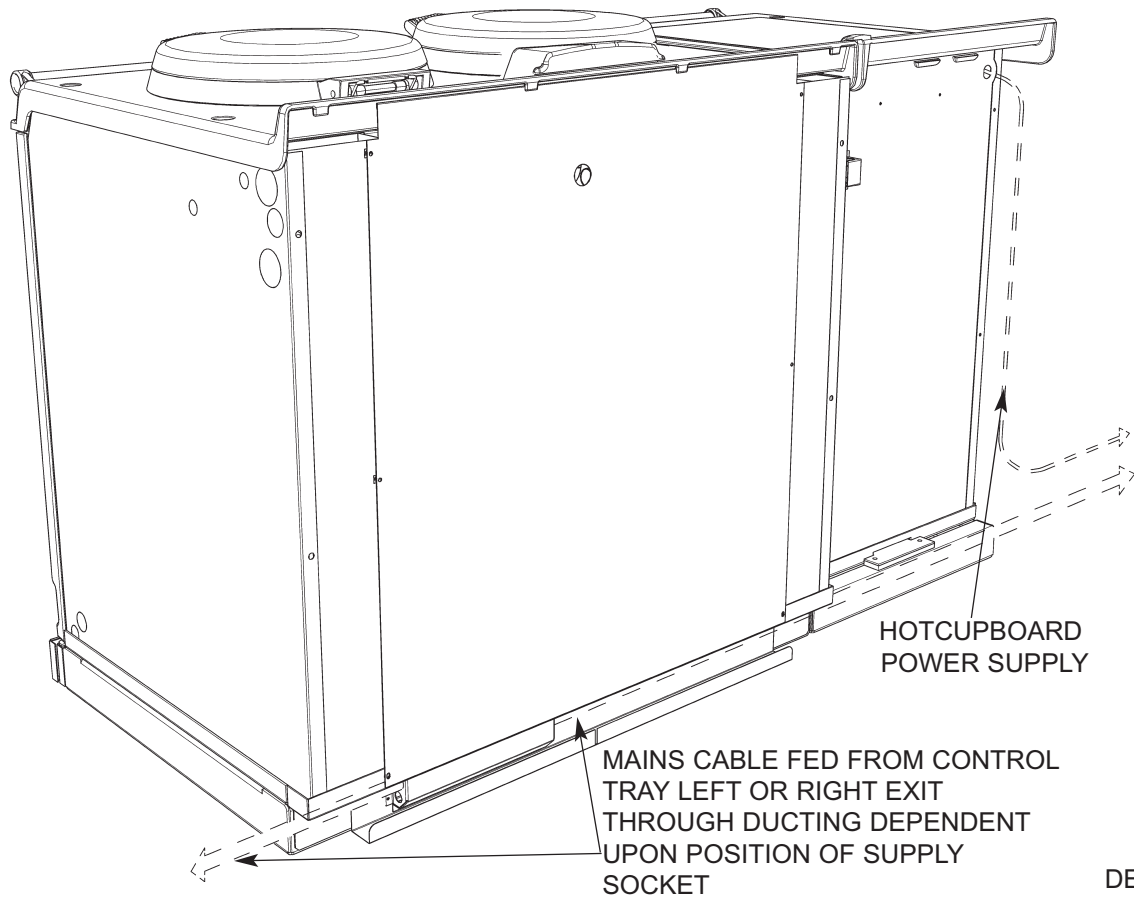


Fig. 4

DESN 516562

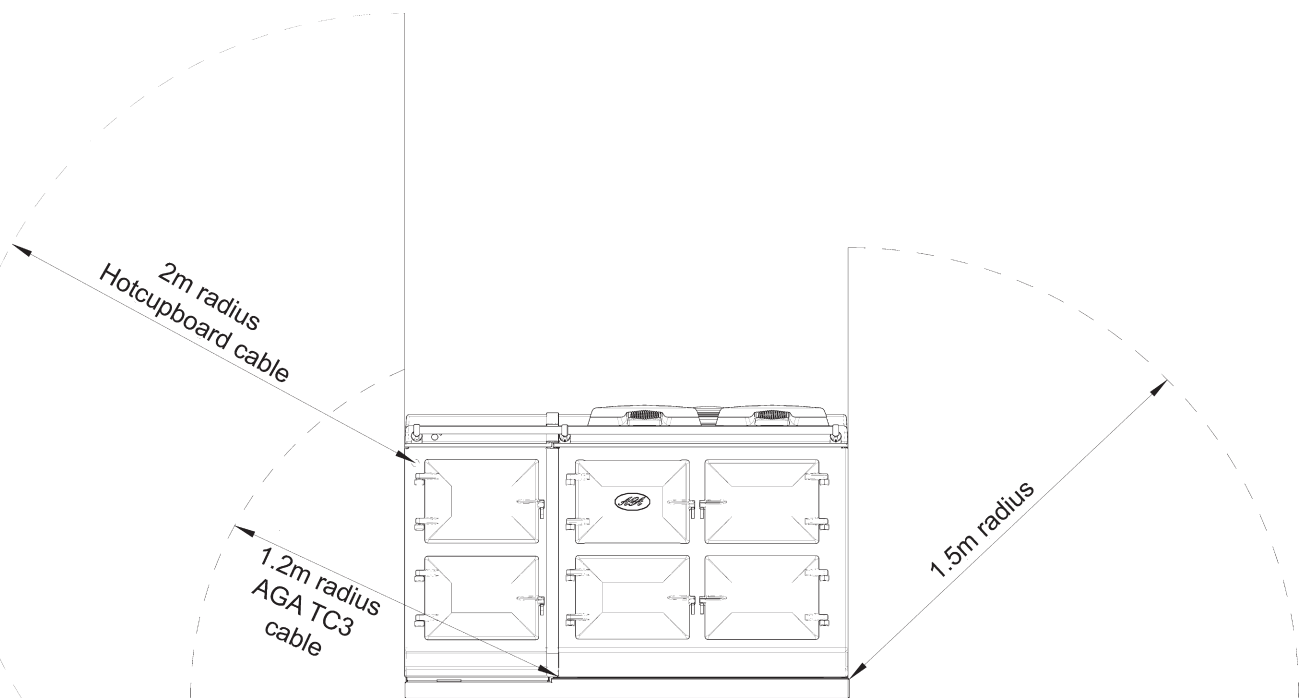

THE MAINS SUPPLY CONNECT POINT MUST BE WITHIN THE ZONES SHOWN



Fig. 4A

DESN 516563

HOTCUPBOARD INSTALLATION


NOTE: The AGA TC5 hotcupboard should arrive with the top plate in a jacked up position. This is to allow the complete appliance to be slid onto its plinth when alongside the AGA TC3 without the top plates clashing. The hotcupboard top plate should then be wound down to its correct height once the appliance is in its final position.

1. Detach hotcupboard from plinth by removing two screws and tongue bracket from plinth (See Fig. 5), slide hotcupboard forwards and away from rear fixing bracket (See Fig. 6).

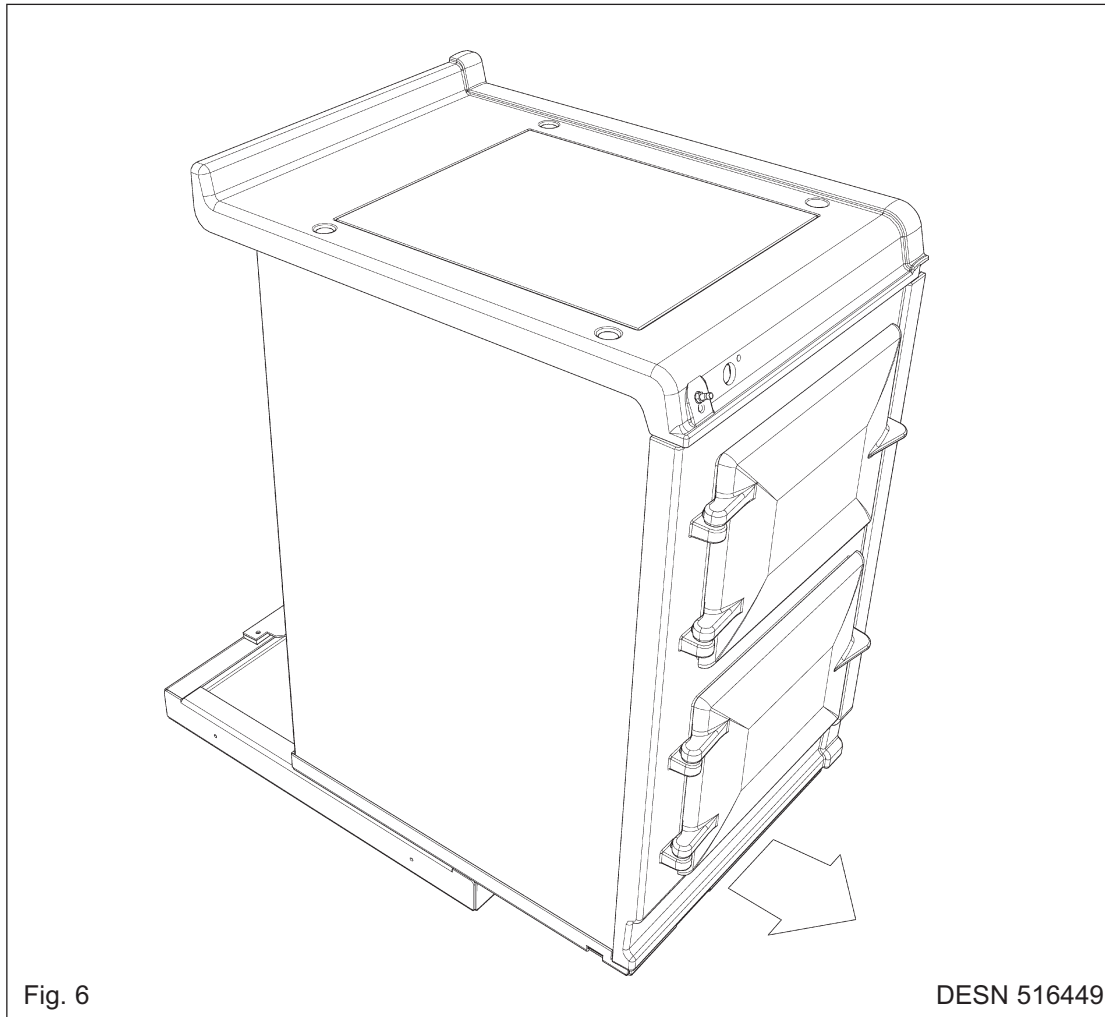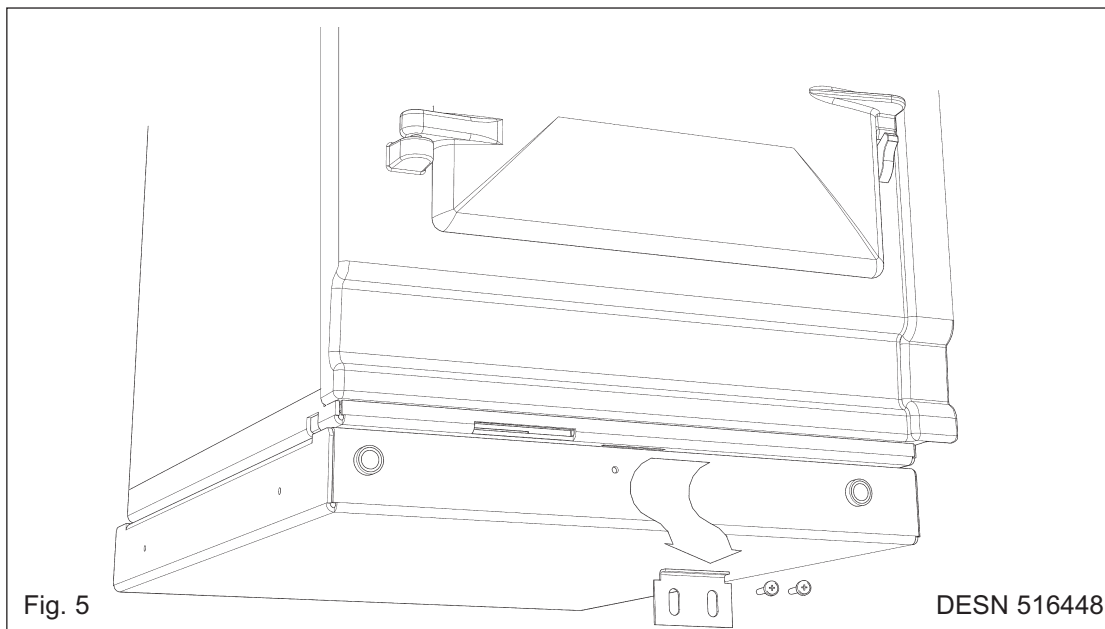


2. Position the plinth alongside the AGA Total Control leaving no gap between the two plinths (See Fig. 7).

Check with a spirit level that the plinth level is correct, and also check height differential between the hotcupboard plinth and Total Control plinth is correct (11mm). If necessary, use shims in each corner to level the plinth.

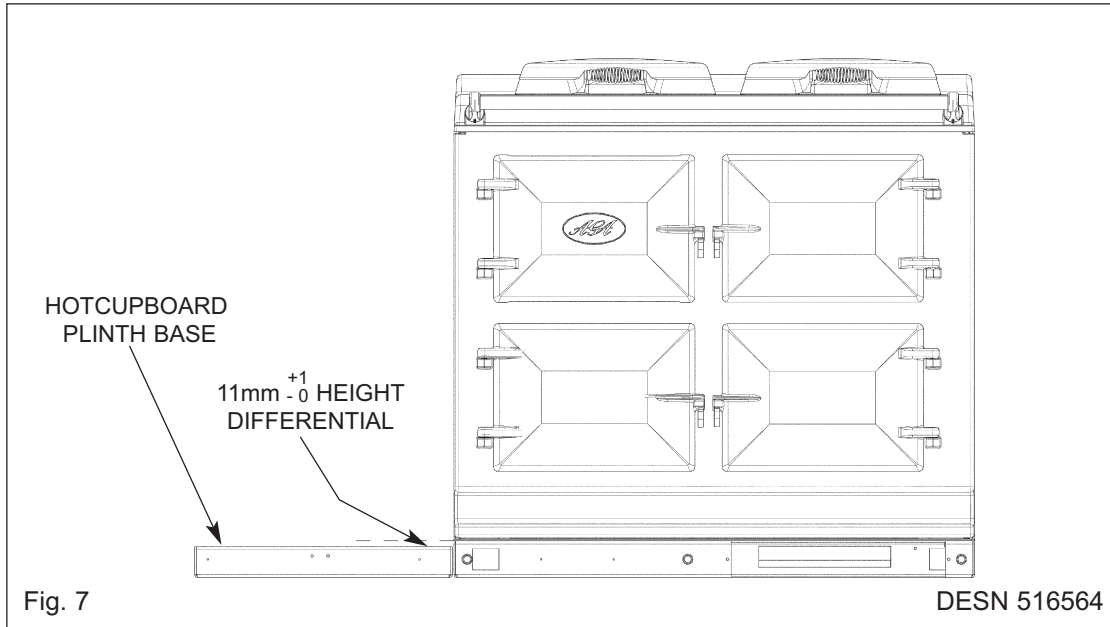


3. Attach hotcupboard plinth to the AGA Total Control plinth using M6 screws and washers provided (See Fig. 8).

Attach locking screw and jacking screw into plinth. Make sure at this stage that the jacking screw does not protrude beyond outer face of plinth. Ensure locking screw is located into AGA TC3 plinth but not fully tightened. A gap of approximately 3mm should be present between the plinths apart from at the very front where the hotcupboard spacer plate should be touching the AGA TC3 plinth.

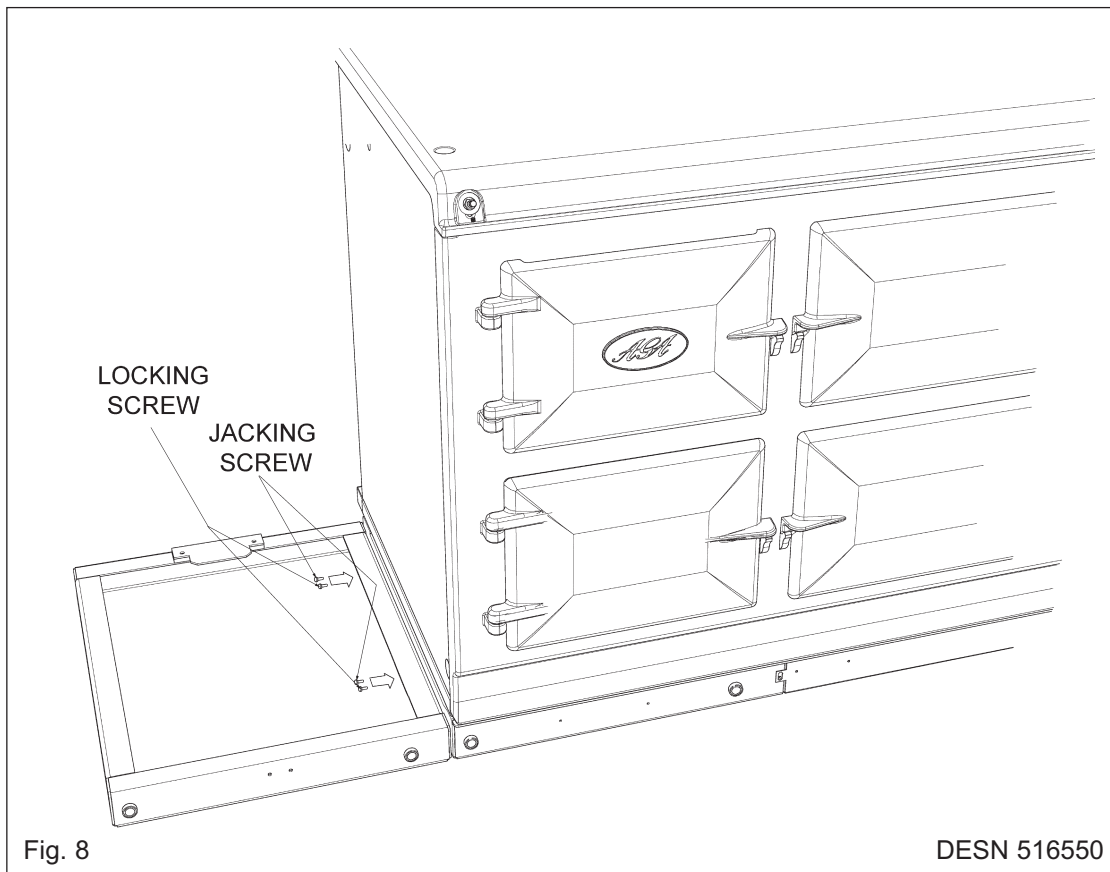


4. Run a straight edge along the front of the AGA Total Control plinth, to ensure the front face of both plinths sit squarely against the straight edge. (See Fig. 9)


When satisfied both plinths sit squarely, jacking screws can be tightened until they just make contact with the AGA Total Control plinth, and locking screws can now be tightened.

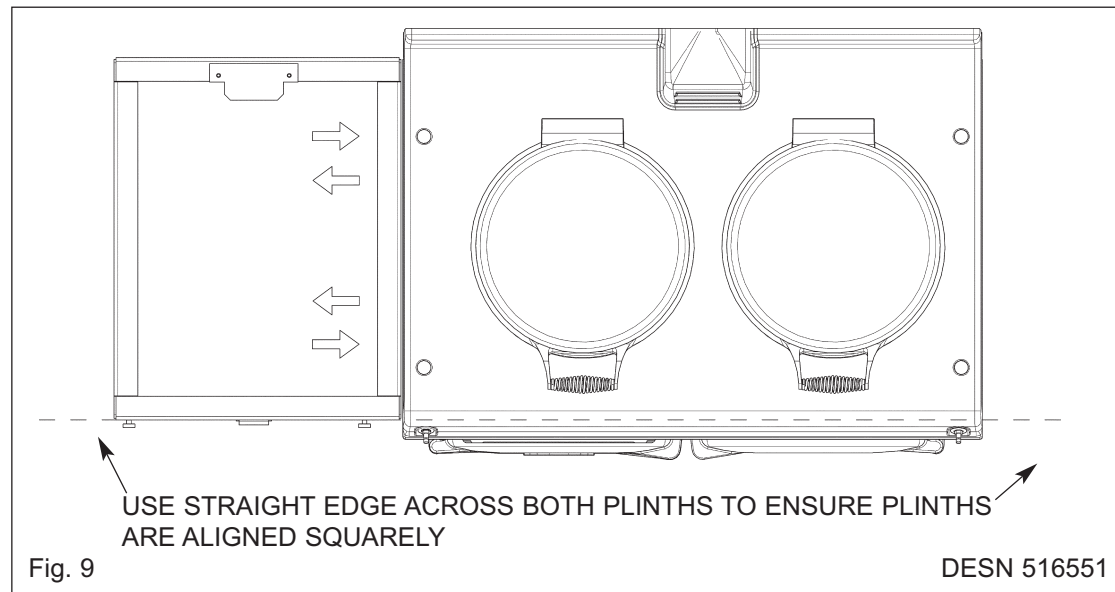


5. Front jointing bracket can now be hooked into place over the two pot magnets. This will latch the two plinths together. (See Fig. 10)

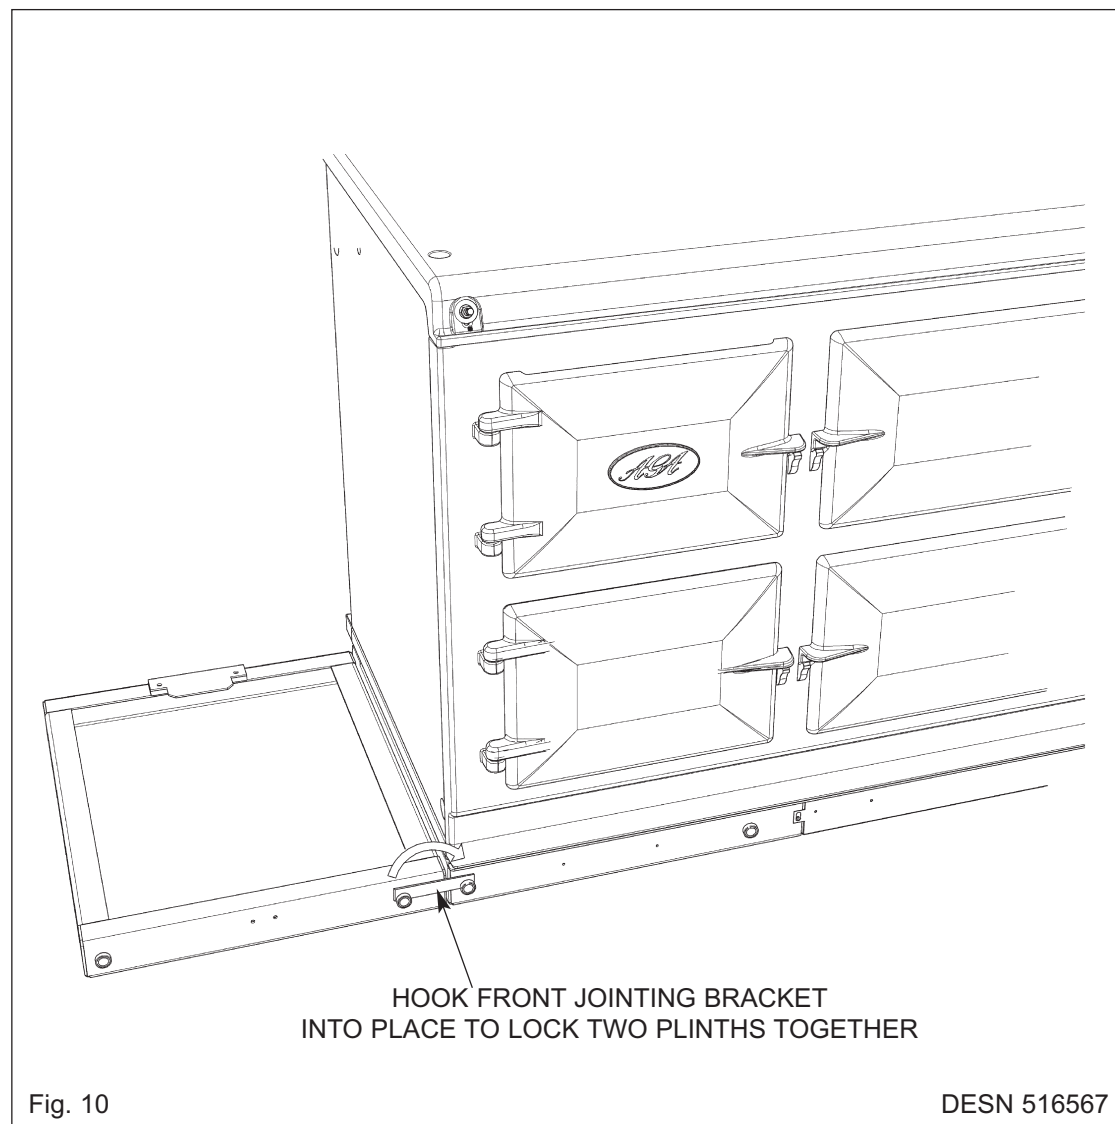

6. Slide hotcupboard onto plinth until rear tongue bracket engages fully into rear of base slot, (See Fig. 11). Ensure the appliance is aligned squarely with the plinth then proceed to engage the front tongue bracket into the slot on the underside of the base plate. Once satisfied that the front tongue bracket is engaged fully lock it into place by tightening the two M6 screws fully.

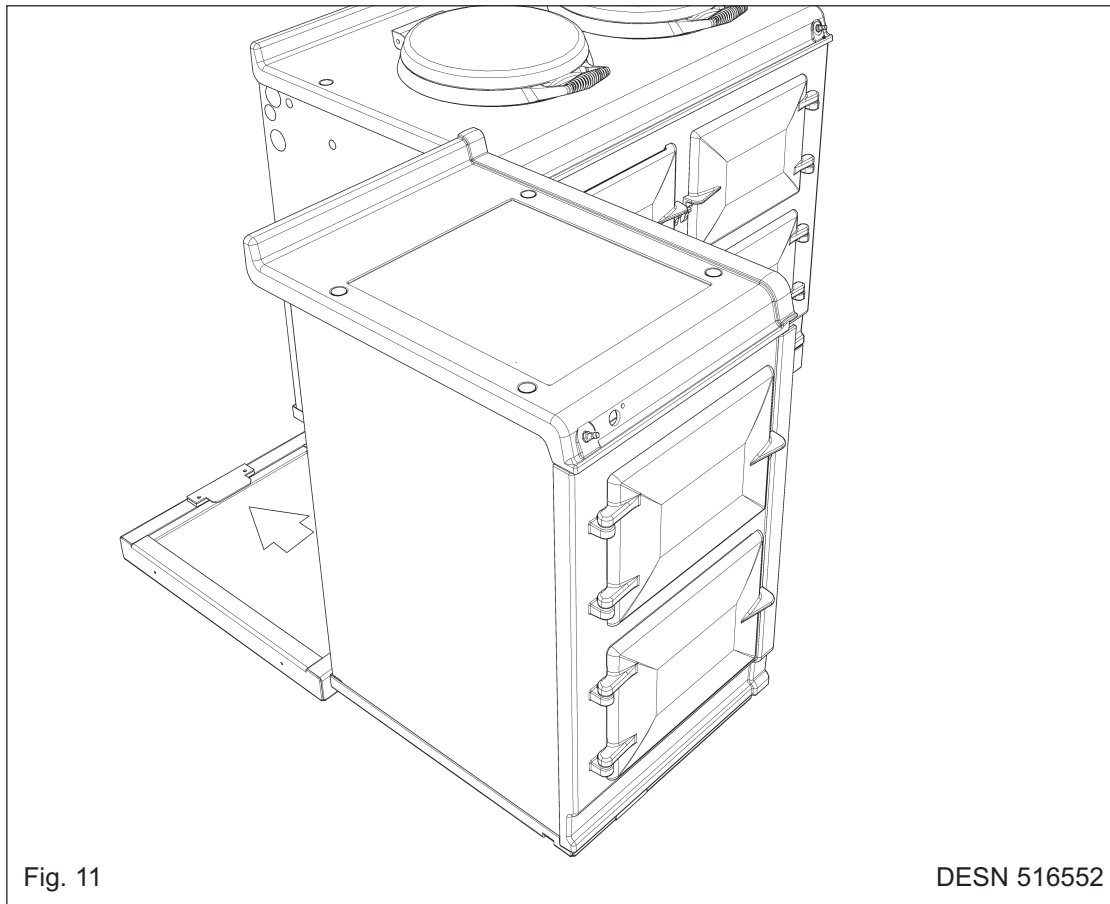


7. The hotcupboard top plate is set 5mm higher than the AGA Total Control top plate. This is to prevent damage to the enamel during installation. Lower the top plate using the adjusters (See Figs. 12 and 13).

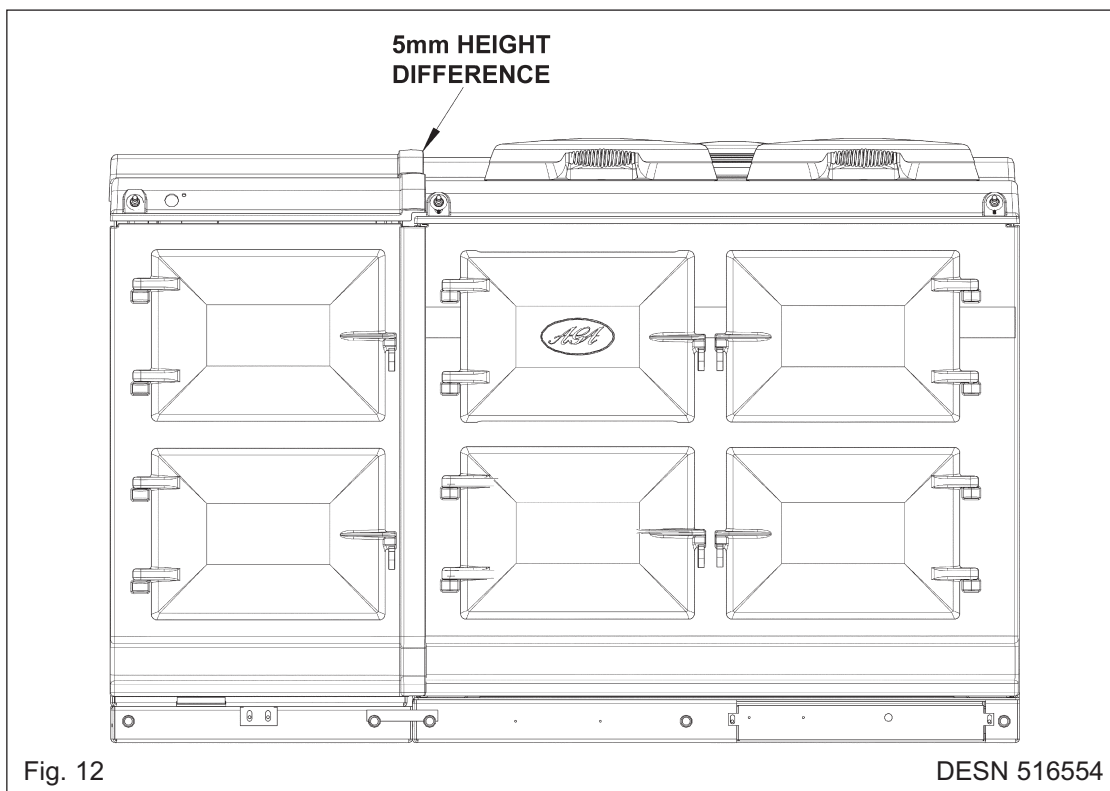

8. Using the stay rod nut adjusting tool, carefully lower the top plate adjusting nuts until the top plate sits at the required height, making sure that the top sits level and matches the height of the AGA TC3. (See Fig. 13).

For servicing requirement, top plate should be removed by raising adjusters approximately 5mm, the top plate can now be removed easily without causing damage to the enamelled surfaces.

When removing the top plate, the switch wiring harness should be disconnected from the main wiring harness at the connection point located at the front left hand side of the appliance, beneath the formex cover sheet.

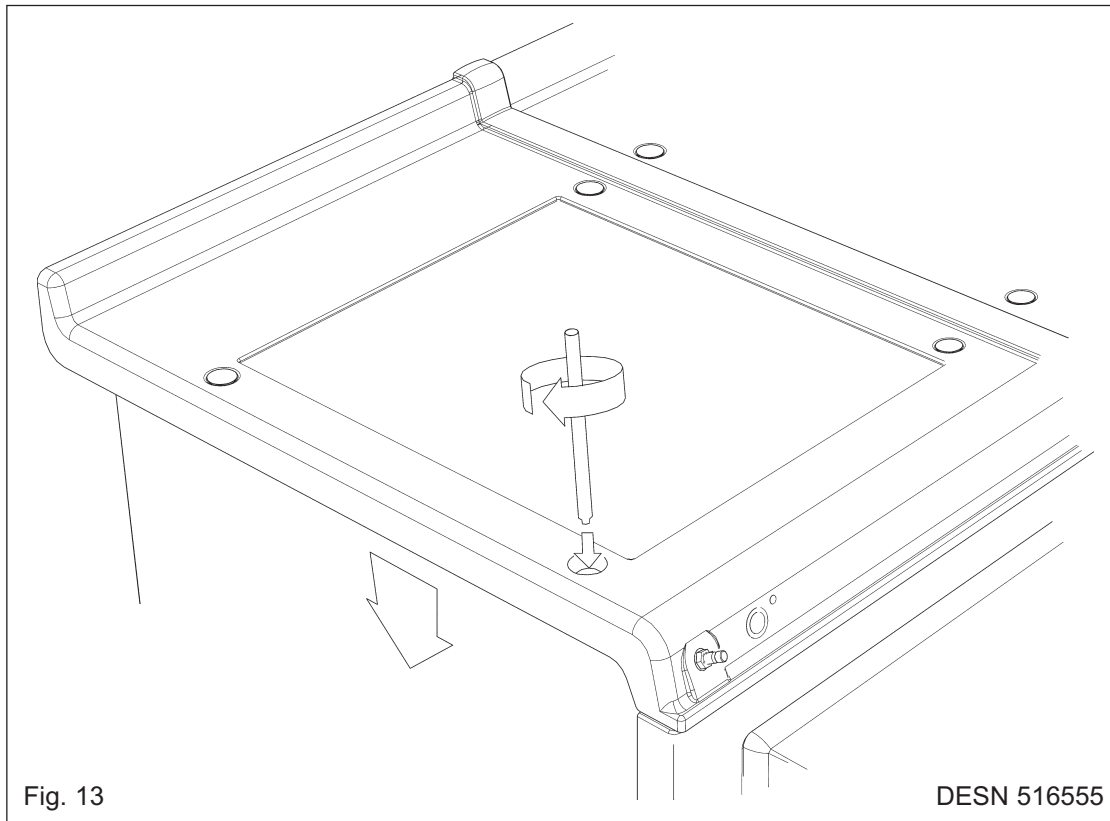

9. Slide the complete handrail assembly over the left hand and centre fixing studs. Once the assembly has been fitted to the AGA appliance, fit the handrail endcaps (ensuring the handrail is evenly spaced at each end). The endcaps should be carefully pushed into place until they sit flush with the outside face of each bracket. (A light smear of lubricant, such as washing up liquid can be applied to the end cap rubber 'O' rings to aid fitment of endcaps into handrail if required).

The handrail can now be locked into place using the grub screws on the underside of the handrail brackets.

Finally fit plinth fascia onto magnets positioned on plinth, ensuring the fascia sits squarely and centrally.

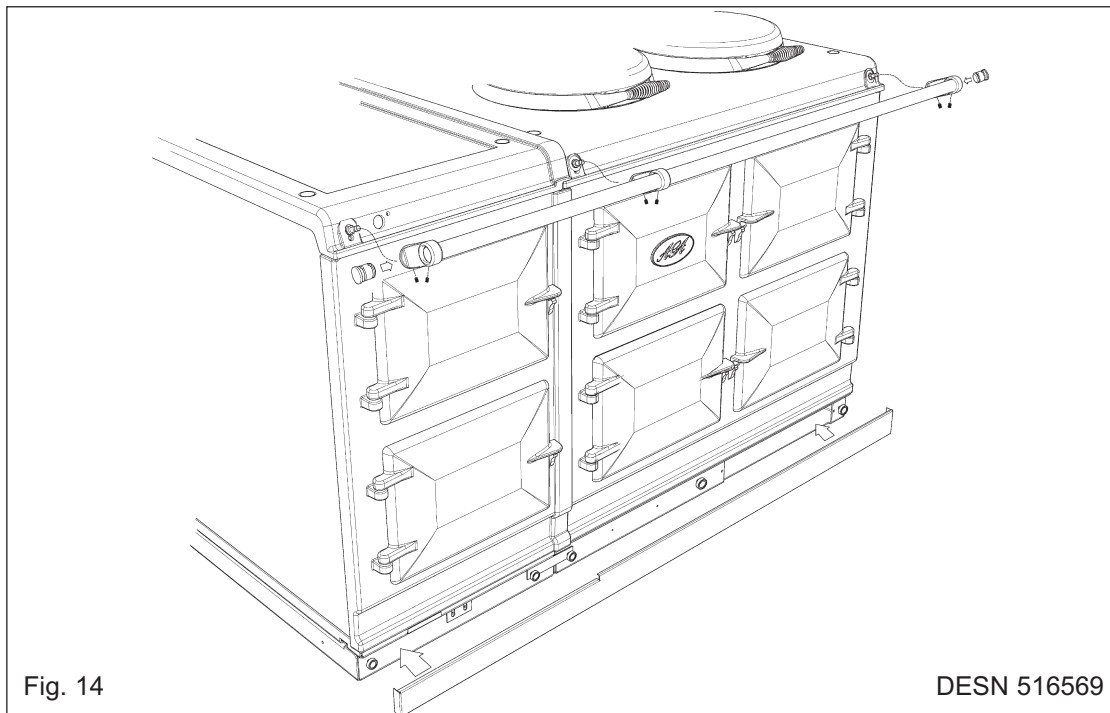


Fig. 14

DESN 516569

HANDRAIL CONNECTION - AGA TC3

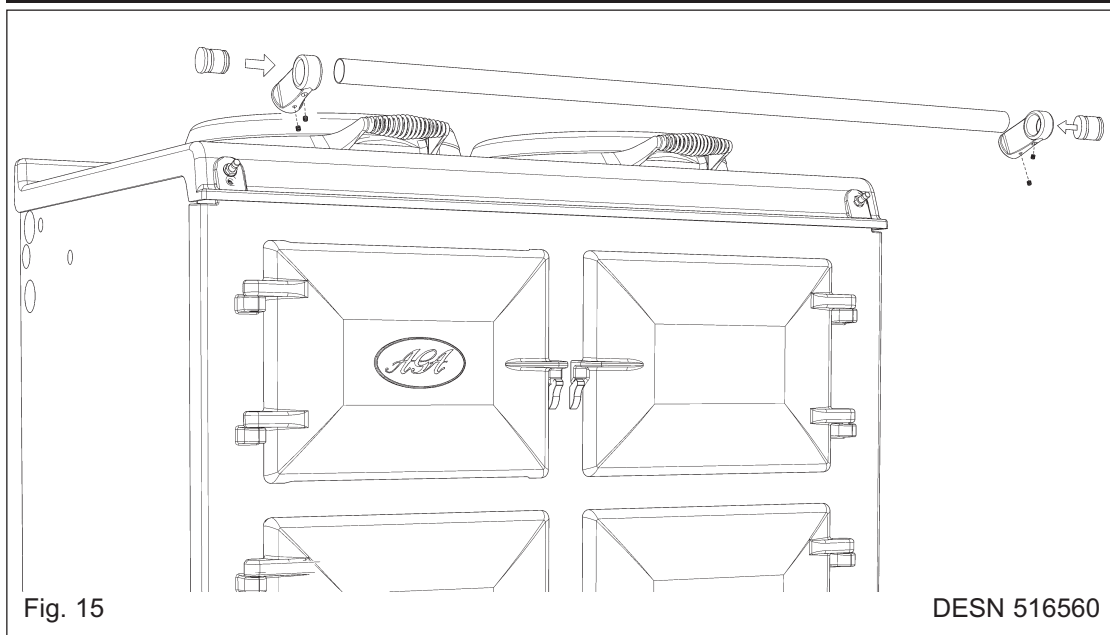


Fig. 15

DESN 516560

Handrail brackets, endcaps and handrail require assembly.

Locate endcaps onto handrail, place brackets over endcaps and then slide complete assembly onto locating studs.

Once assembly is correctly located, lock into position with grub screws (located on underside of handrail).

WIRING DIAGRAM - AGA TC3 (ROOM VENT OPTION)


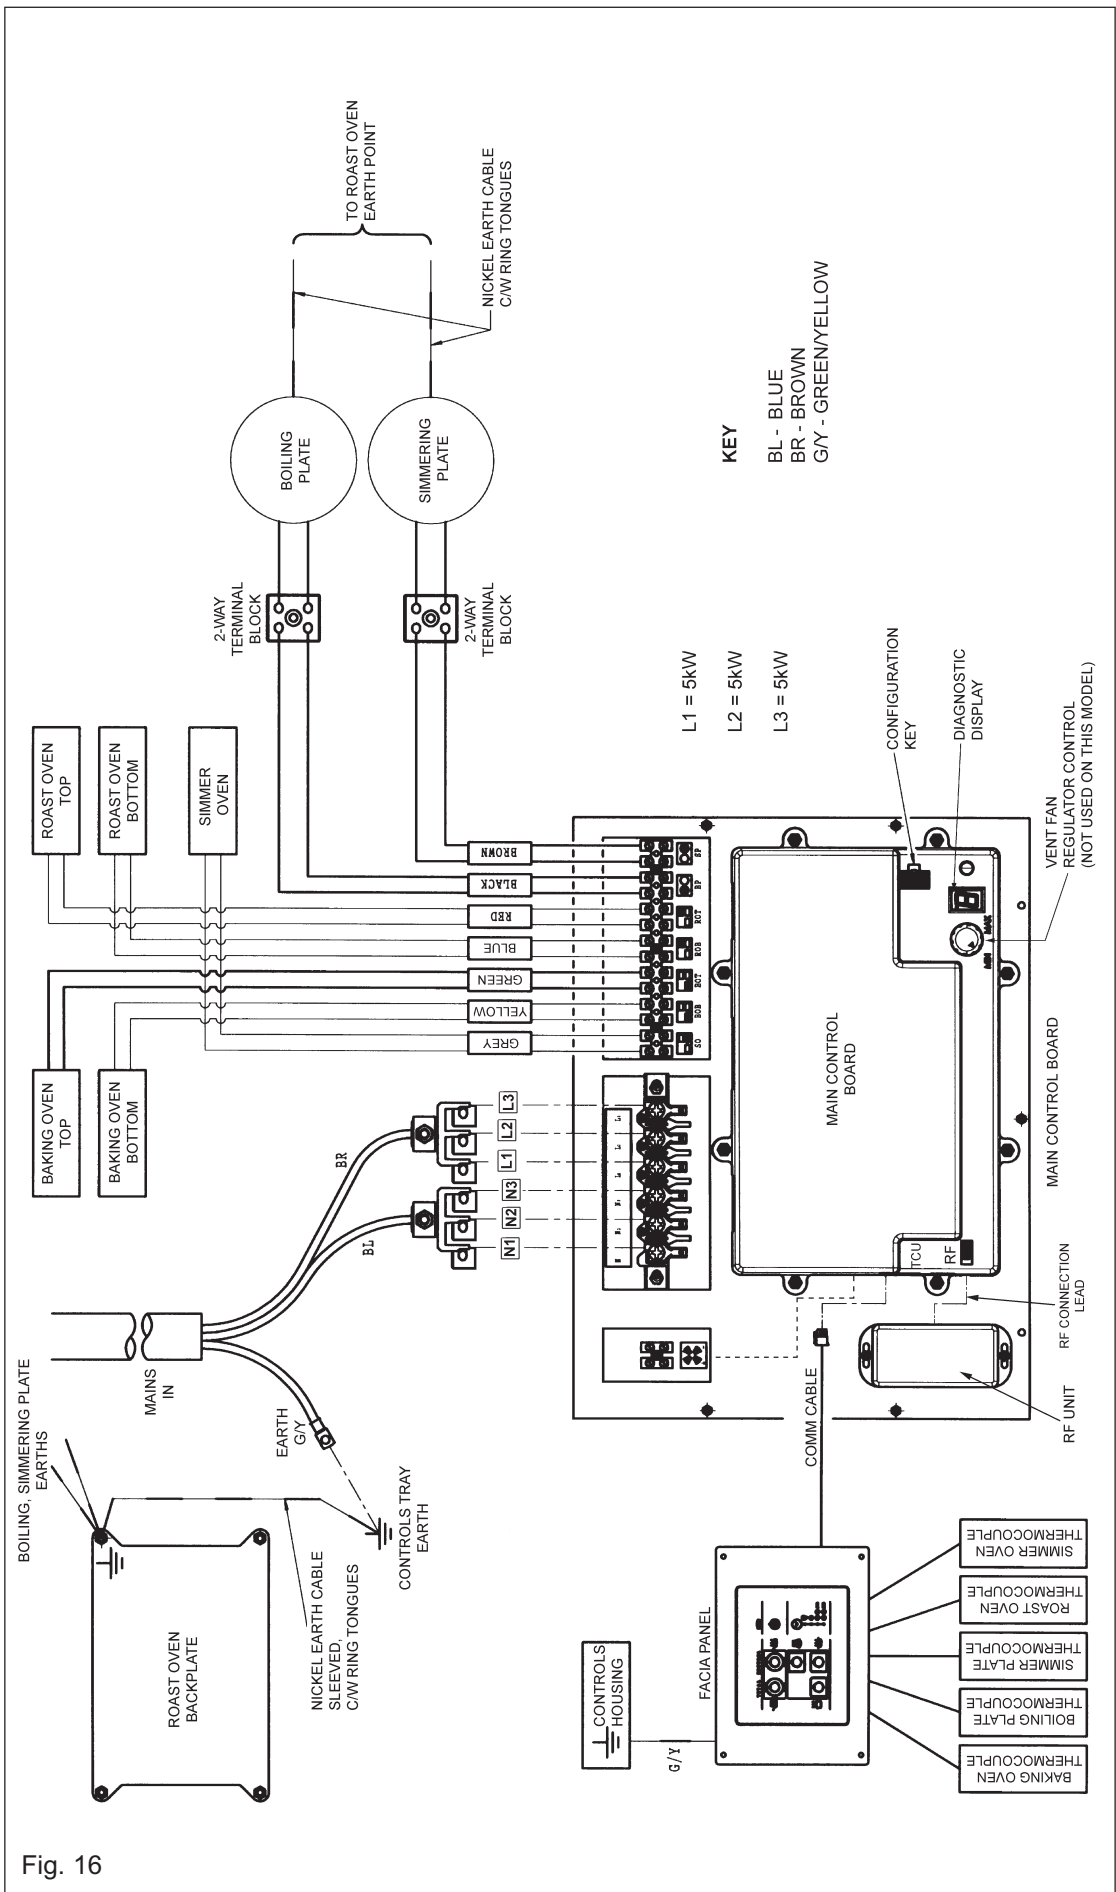


Fig. 16

WIRING DIAGRAM - AGA TC5 (HOTCUPBOARD)

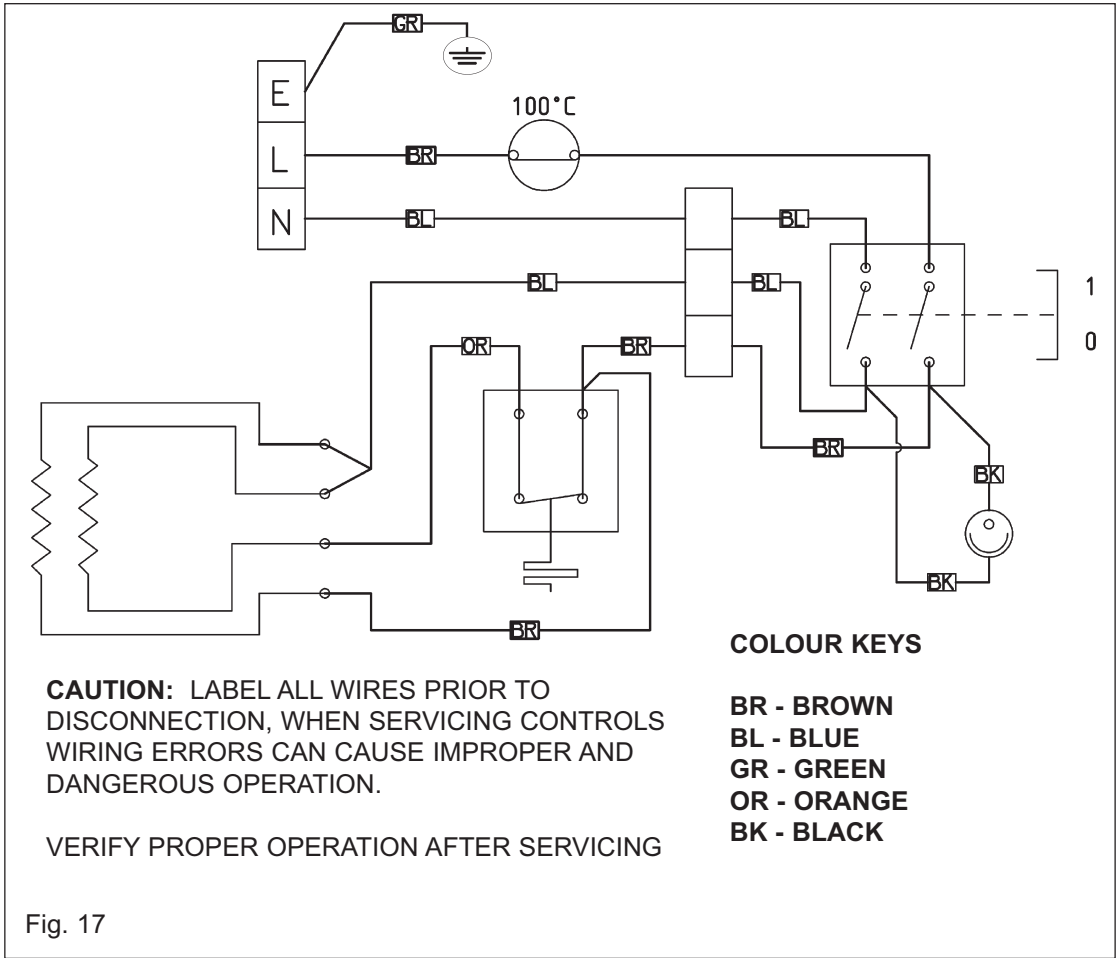

VERIFY PROPER OPERATION AFTER SERVICING

BR - BROWN
BL - BLUE
GR - GREEN
OR - ORANGE
BK - BLACK

BL - BLUE

GR - GREEN

OR - ORANGE

BK - BLACK

Fig. 17

**For further advice or information contact
your local AGA Specialist**

With AGA Rangemaster's policy of continuous product improvement, the Company reserves the right to change specifications and make modifications to the appliance described and illustrated at any time



Manufactured by
AGA Rangemaster
Station Road
Ketley Telford
Shropshire TF1 5AQ
England

www.agaliving.com
www.agacookshop.co.uk